



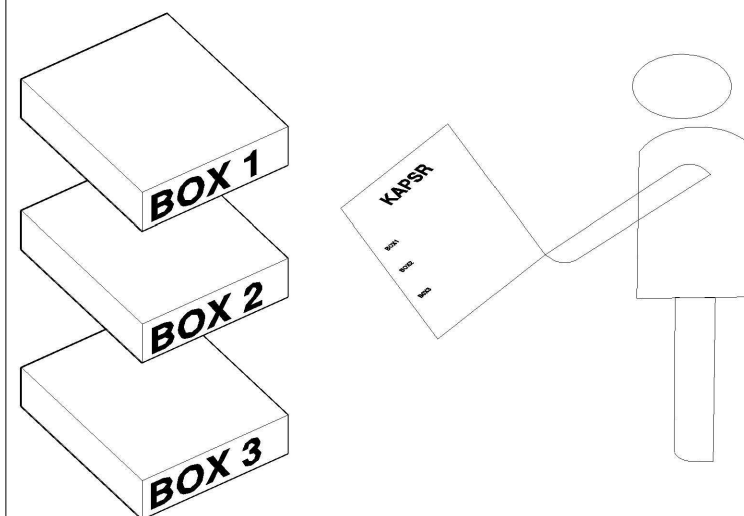
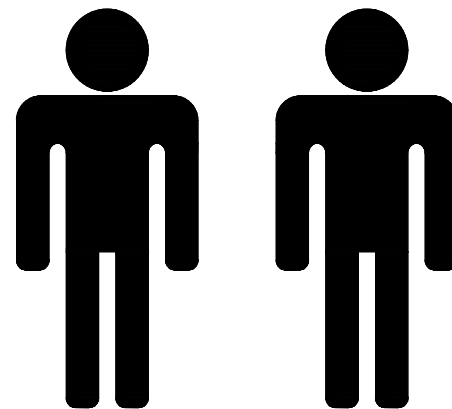


A5104TM

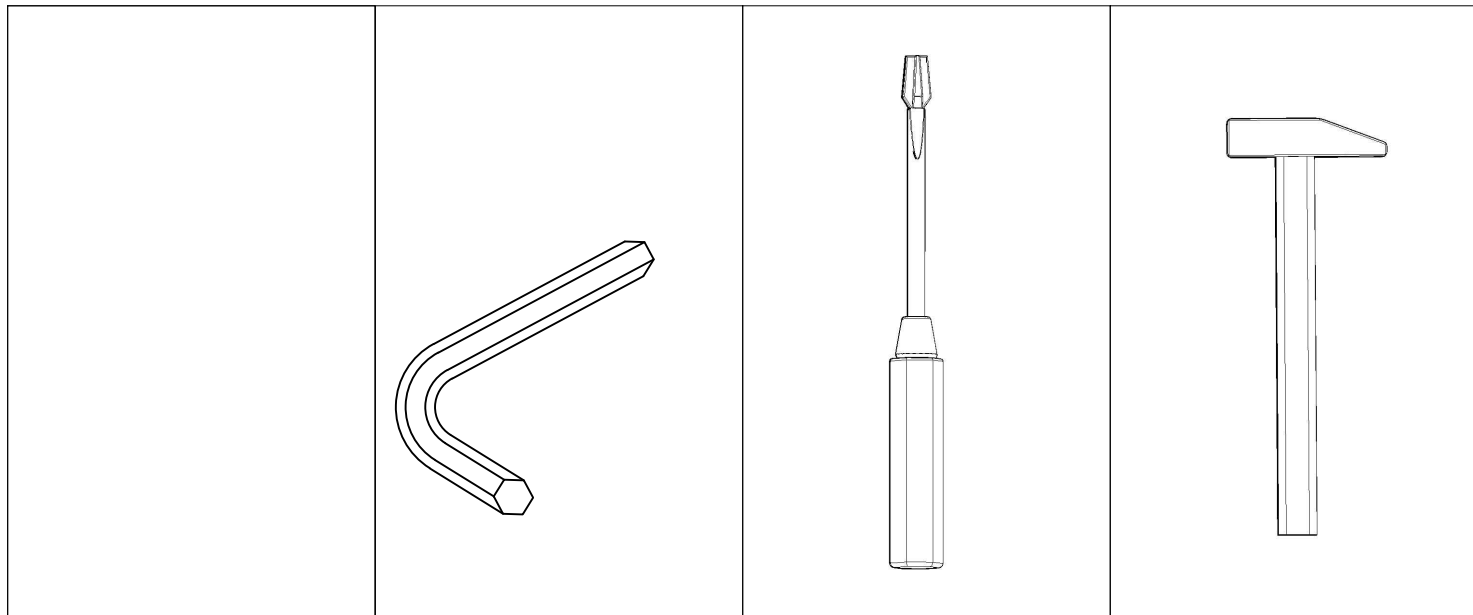


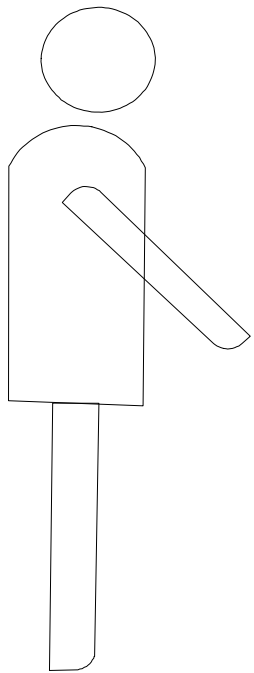

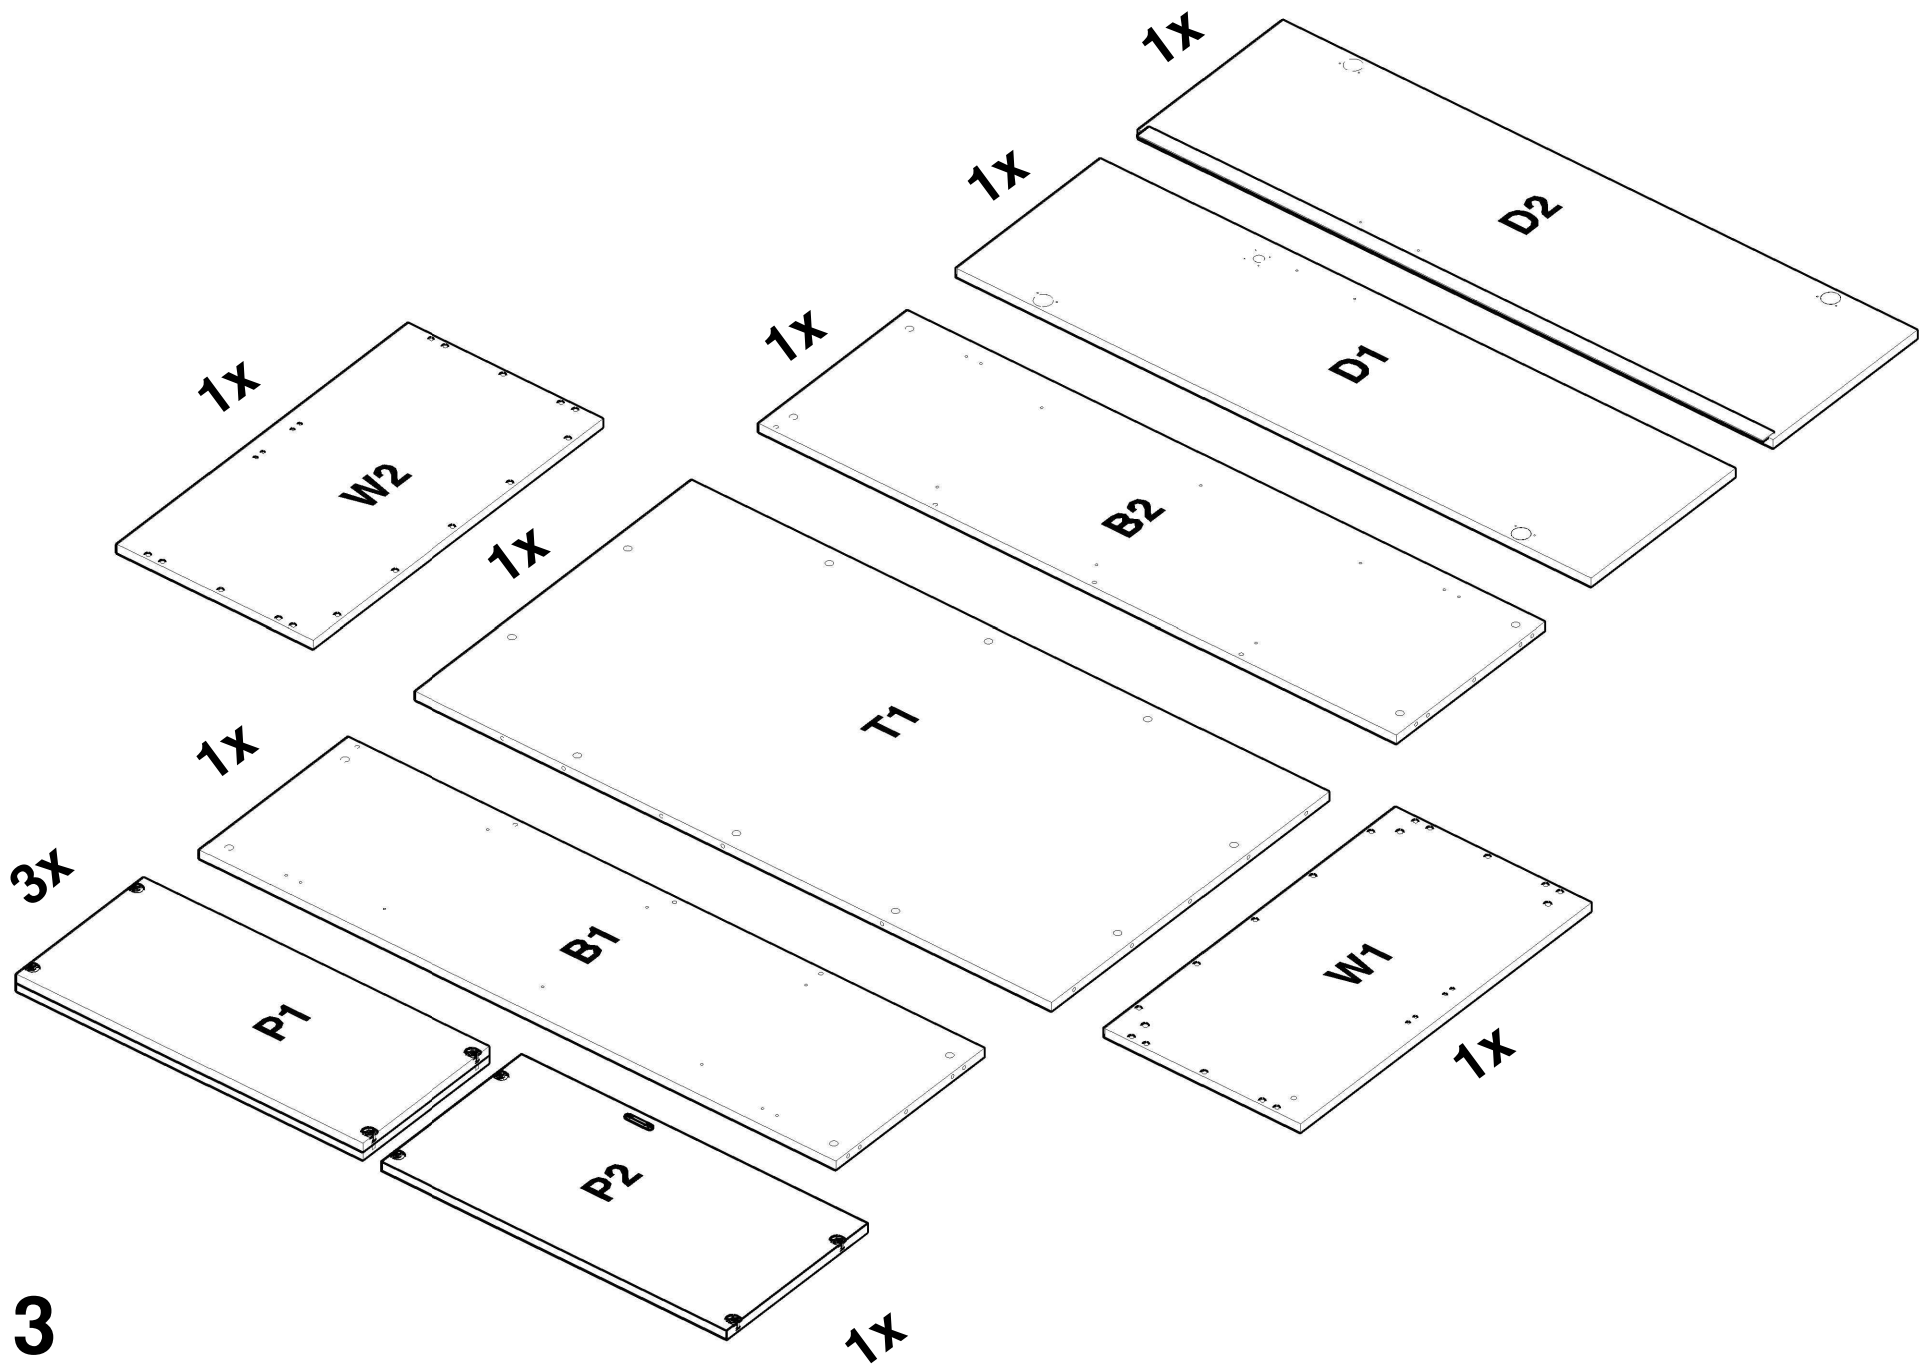


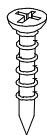


4x

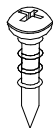


6x

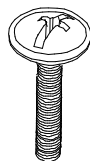


4x

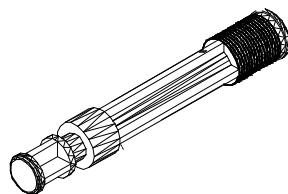

16x

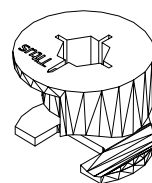


16x

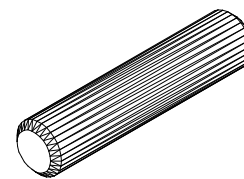


20x




12x

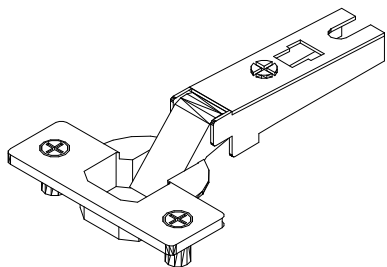


4x

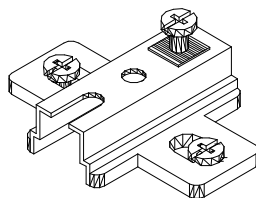


4x

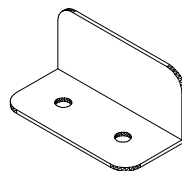


3x

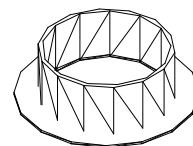


1x

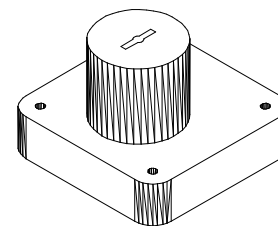


1x

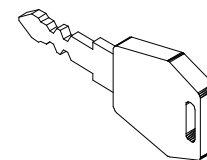


2x

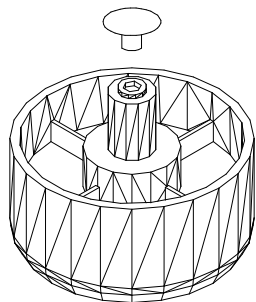


4x


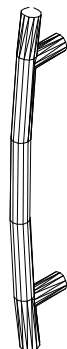



2x

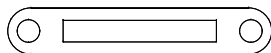


1x

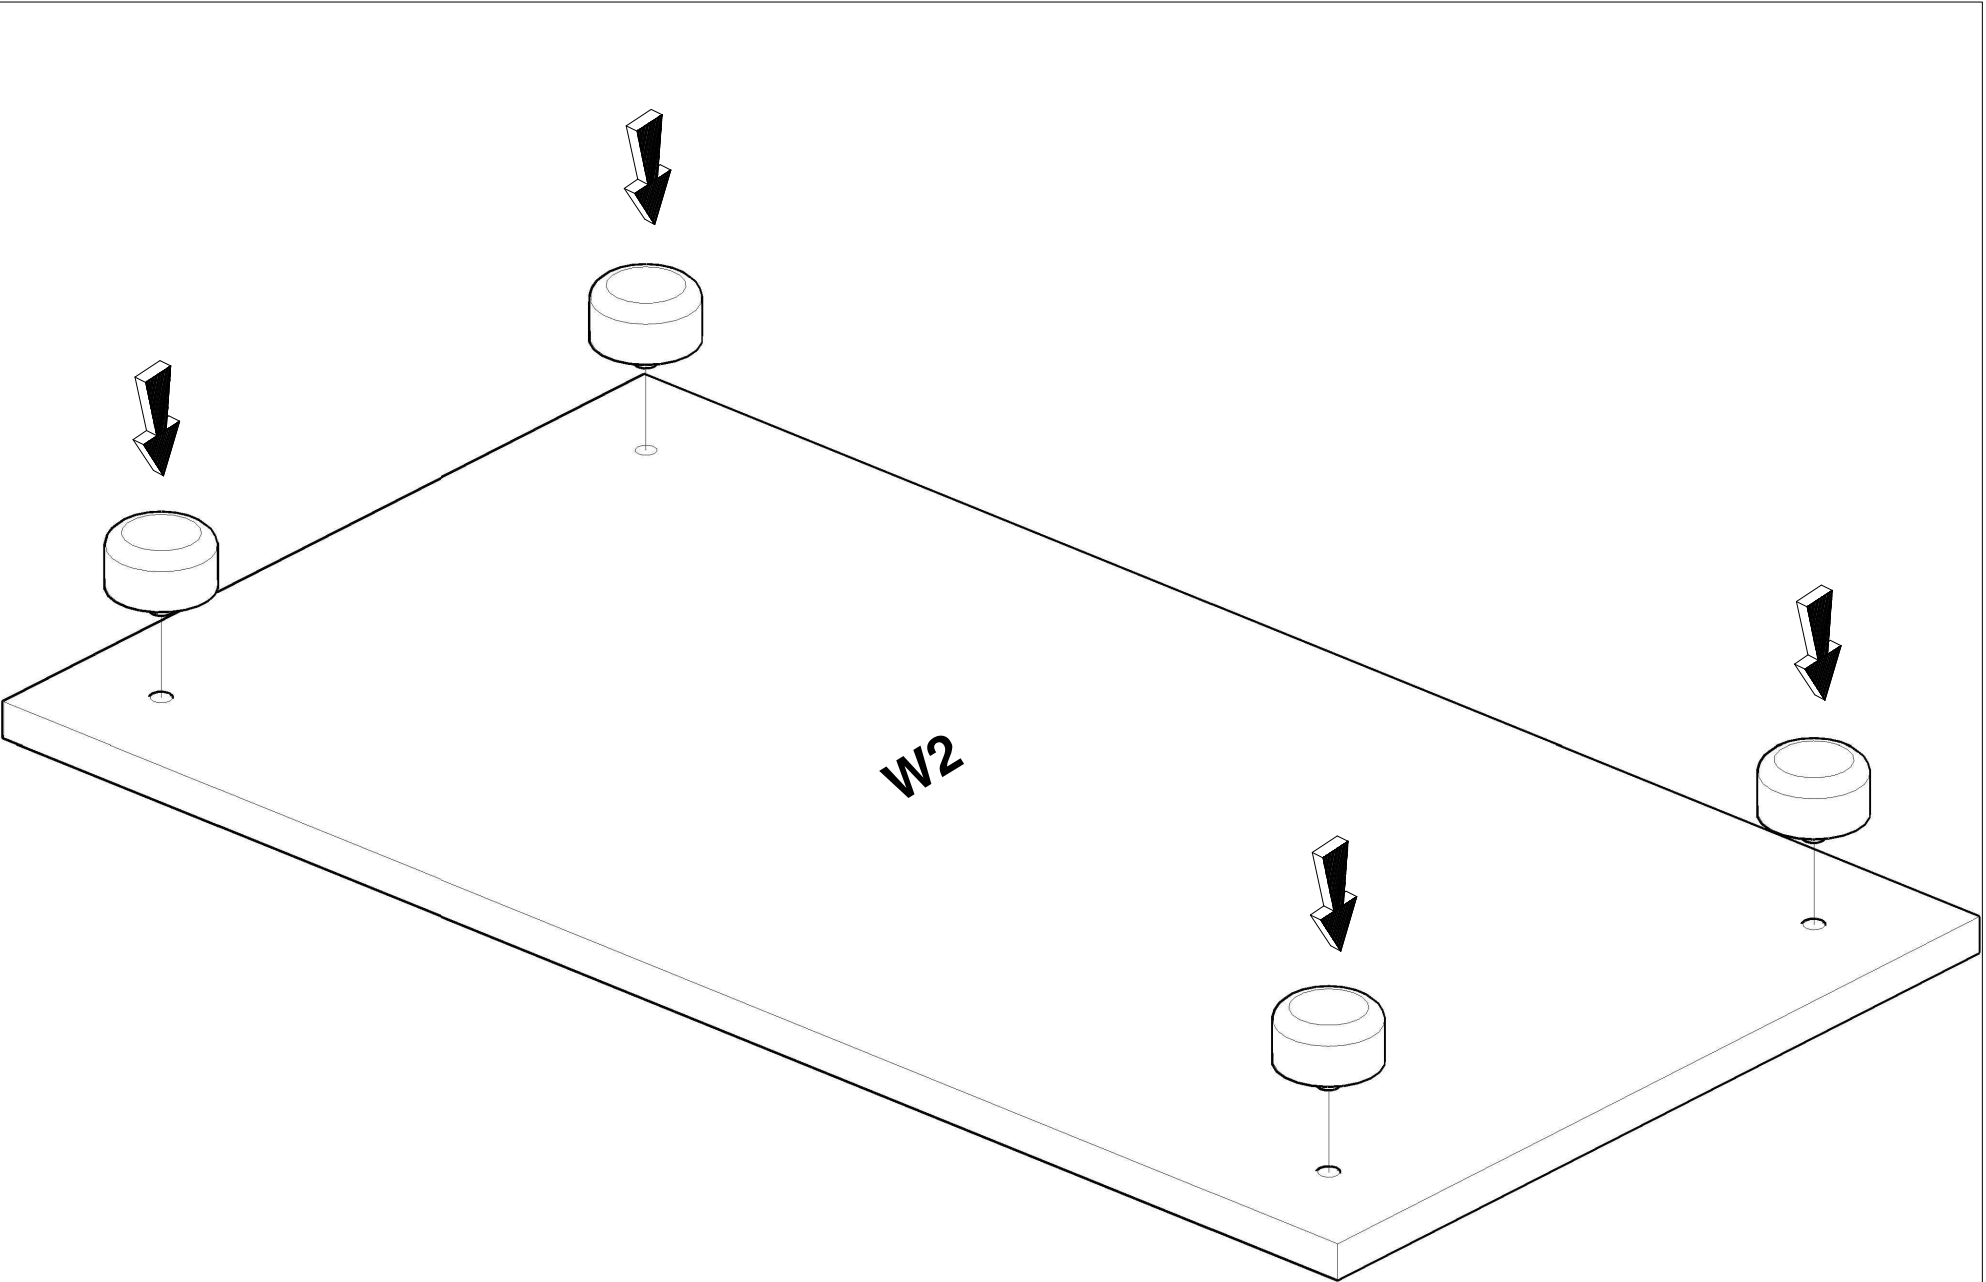

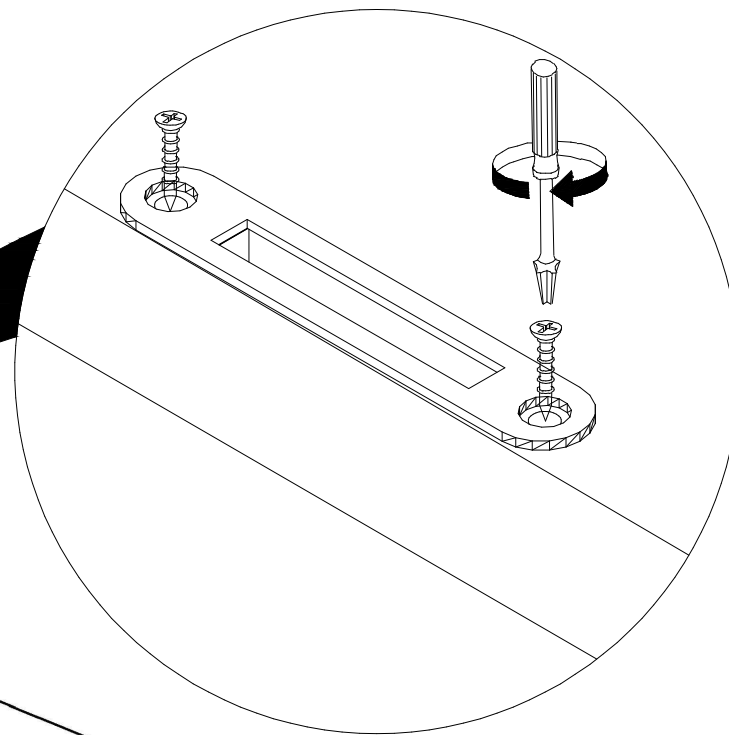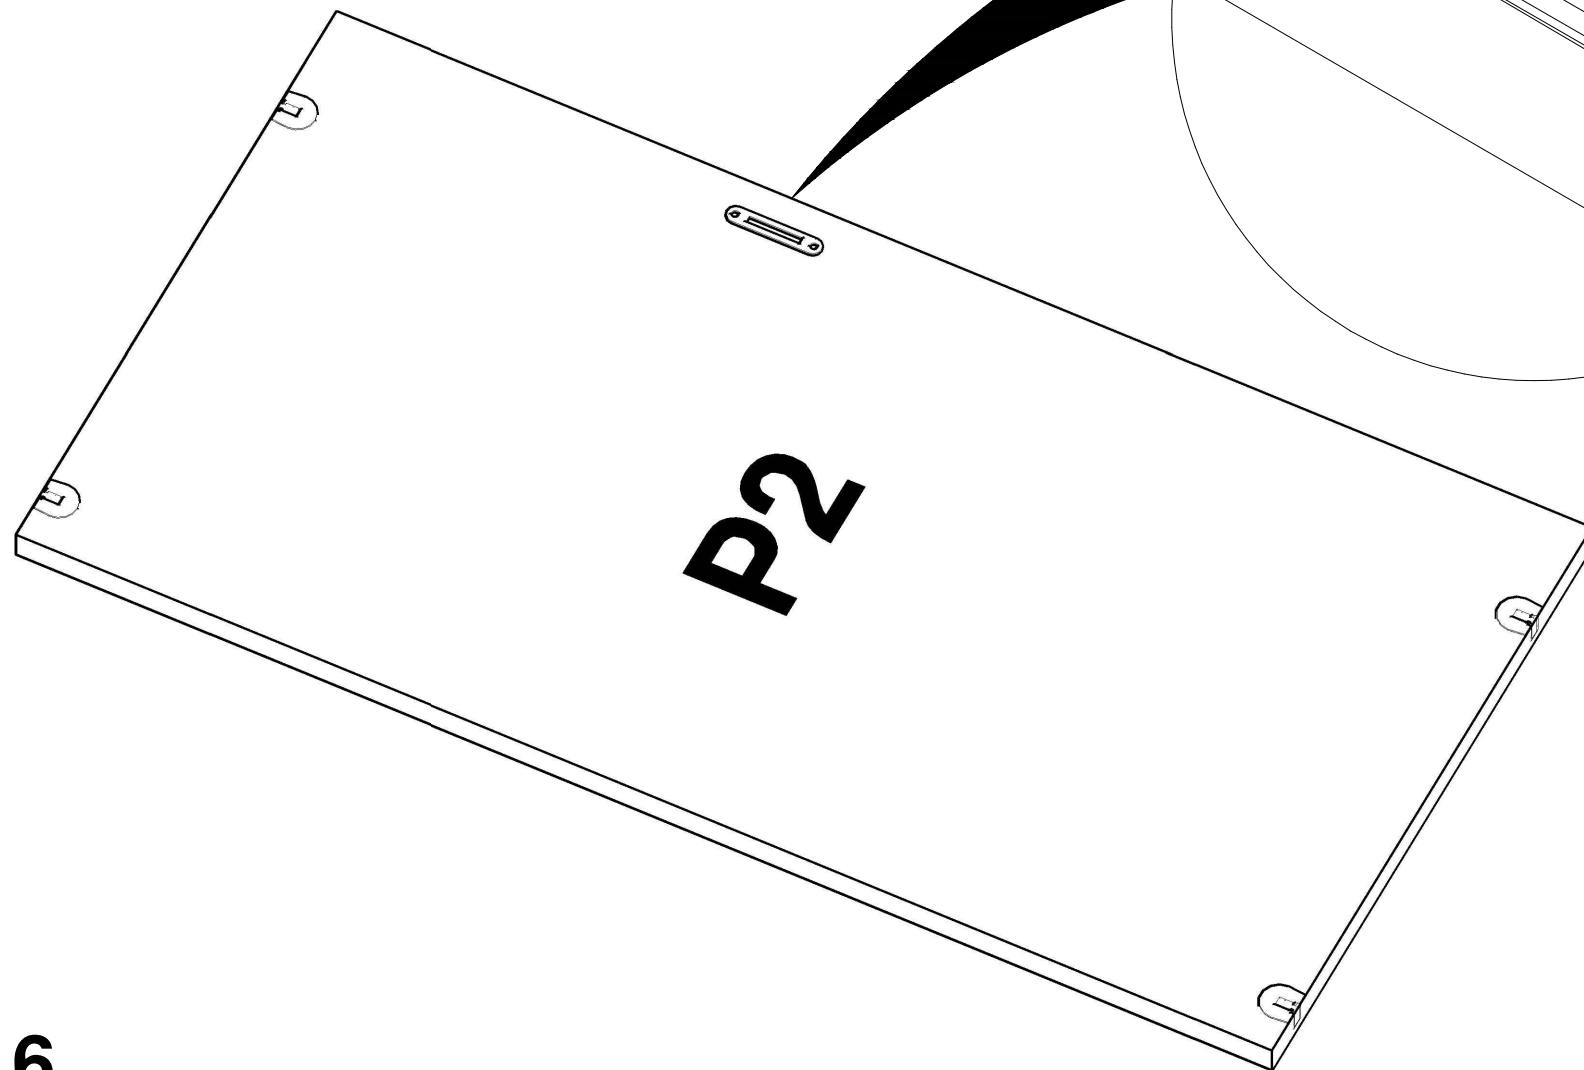


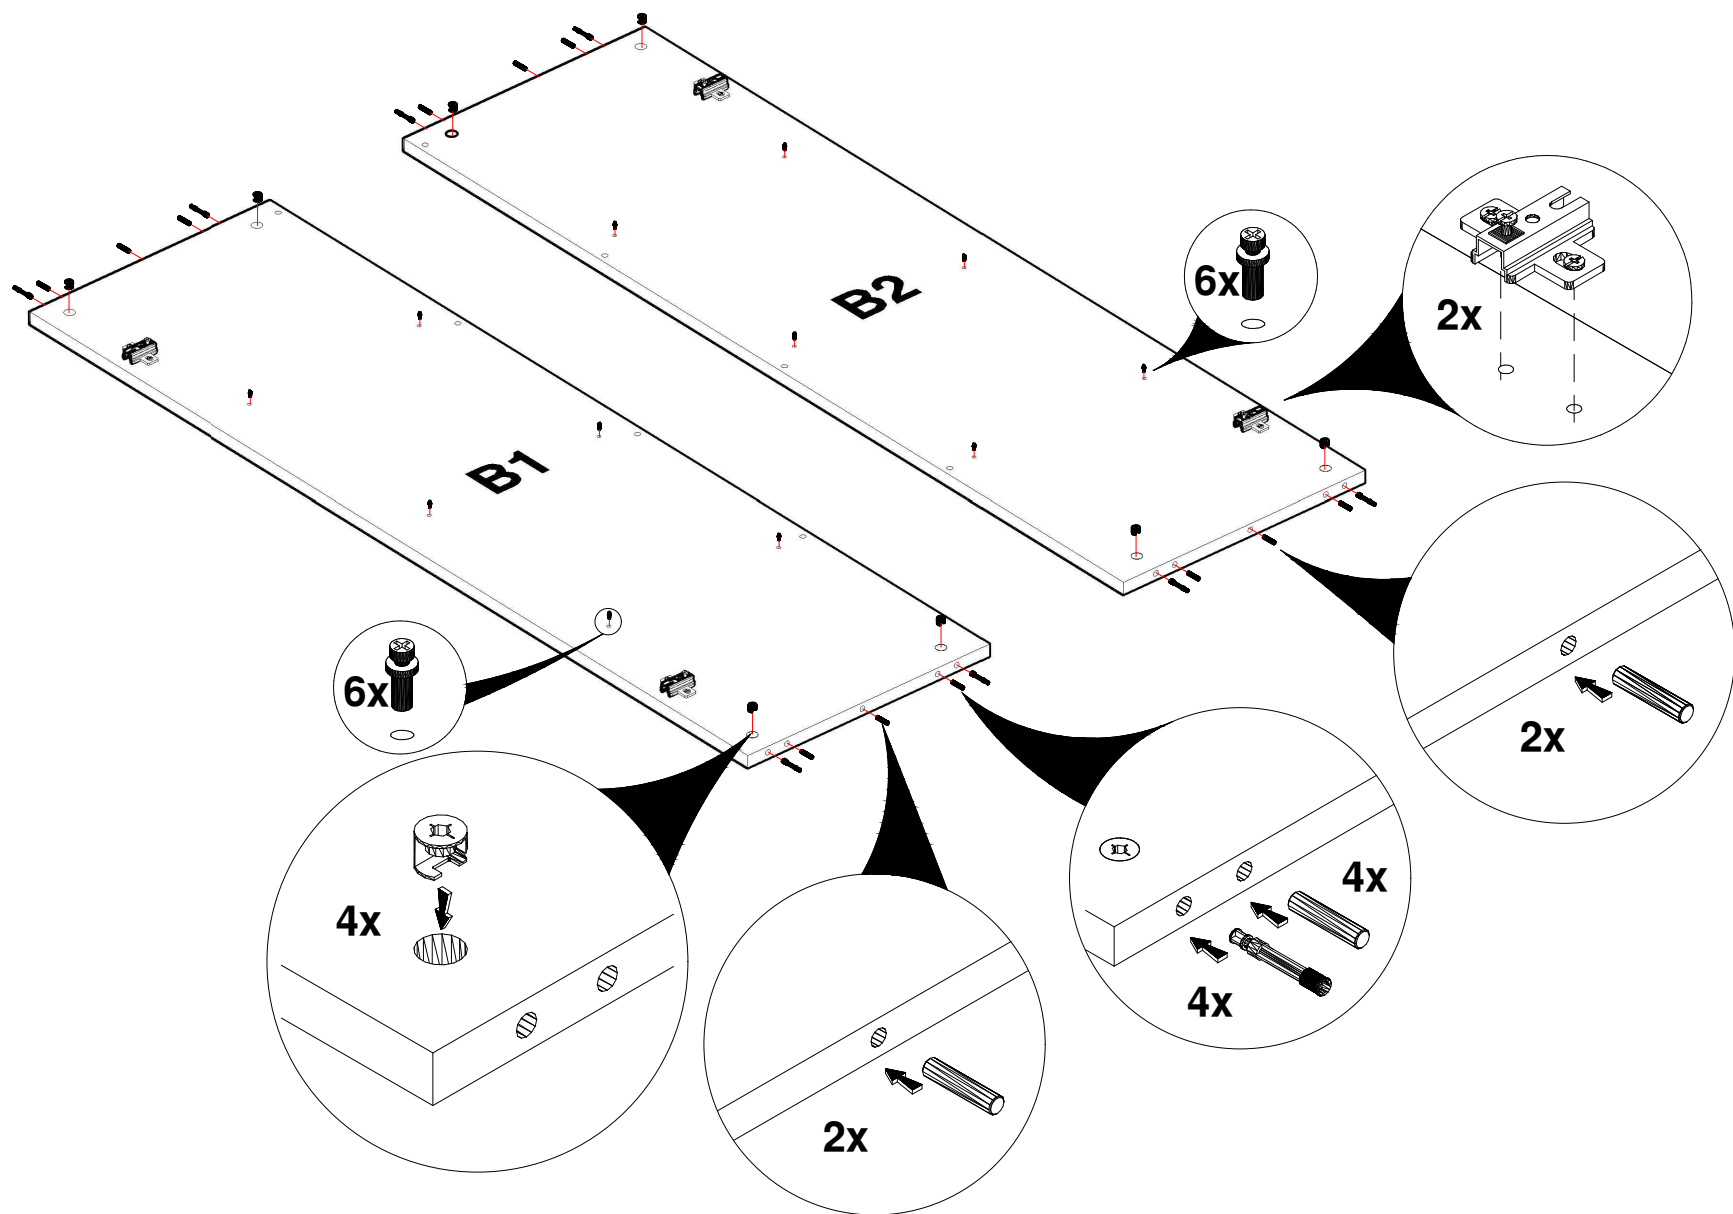



8

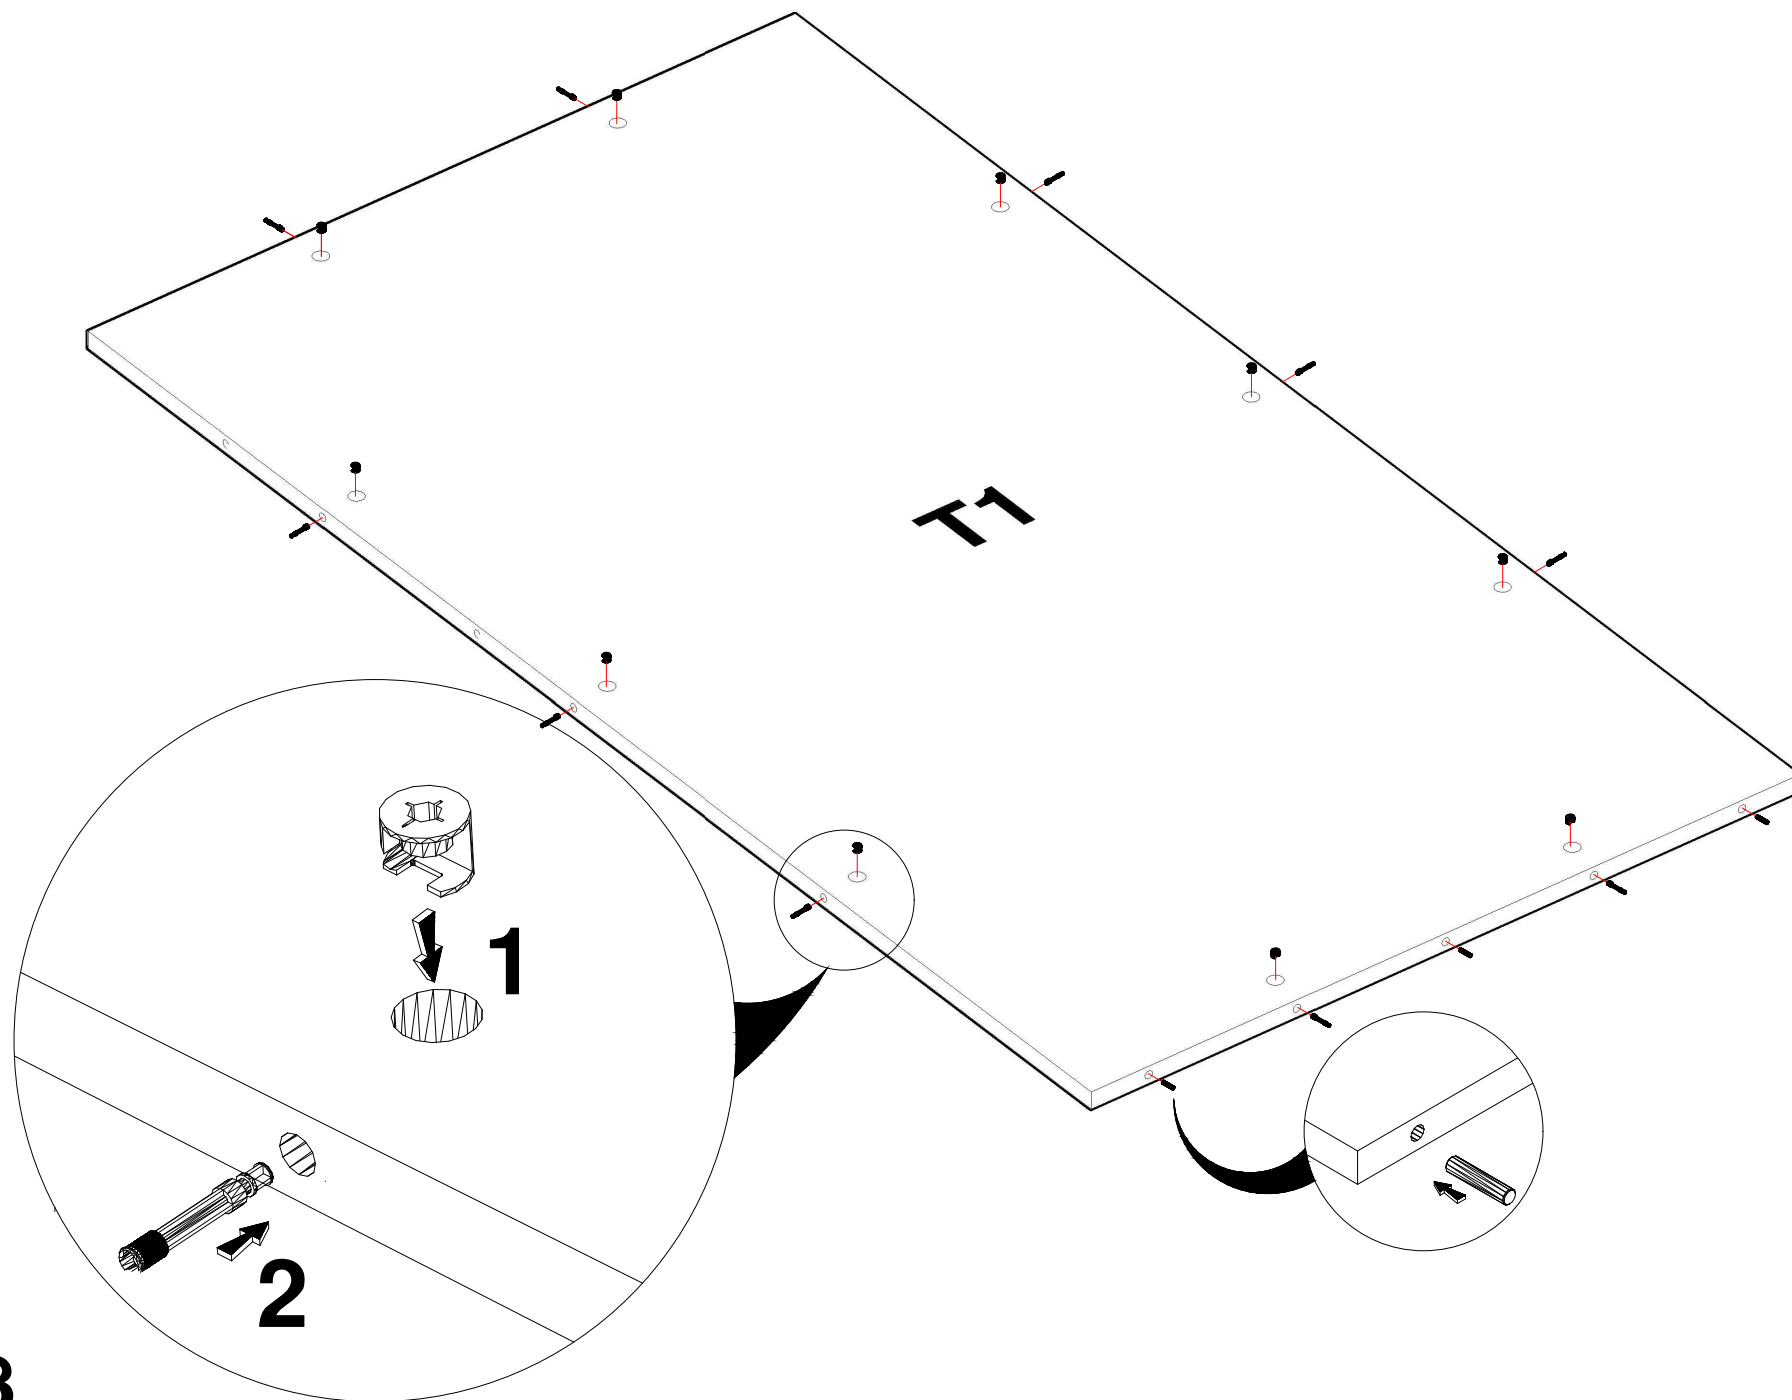


9

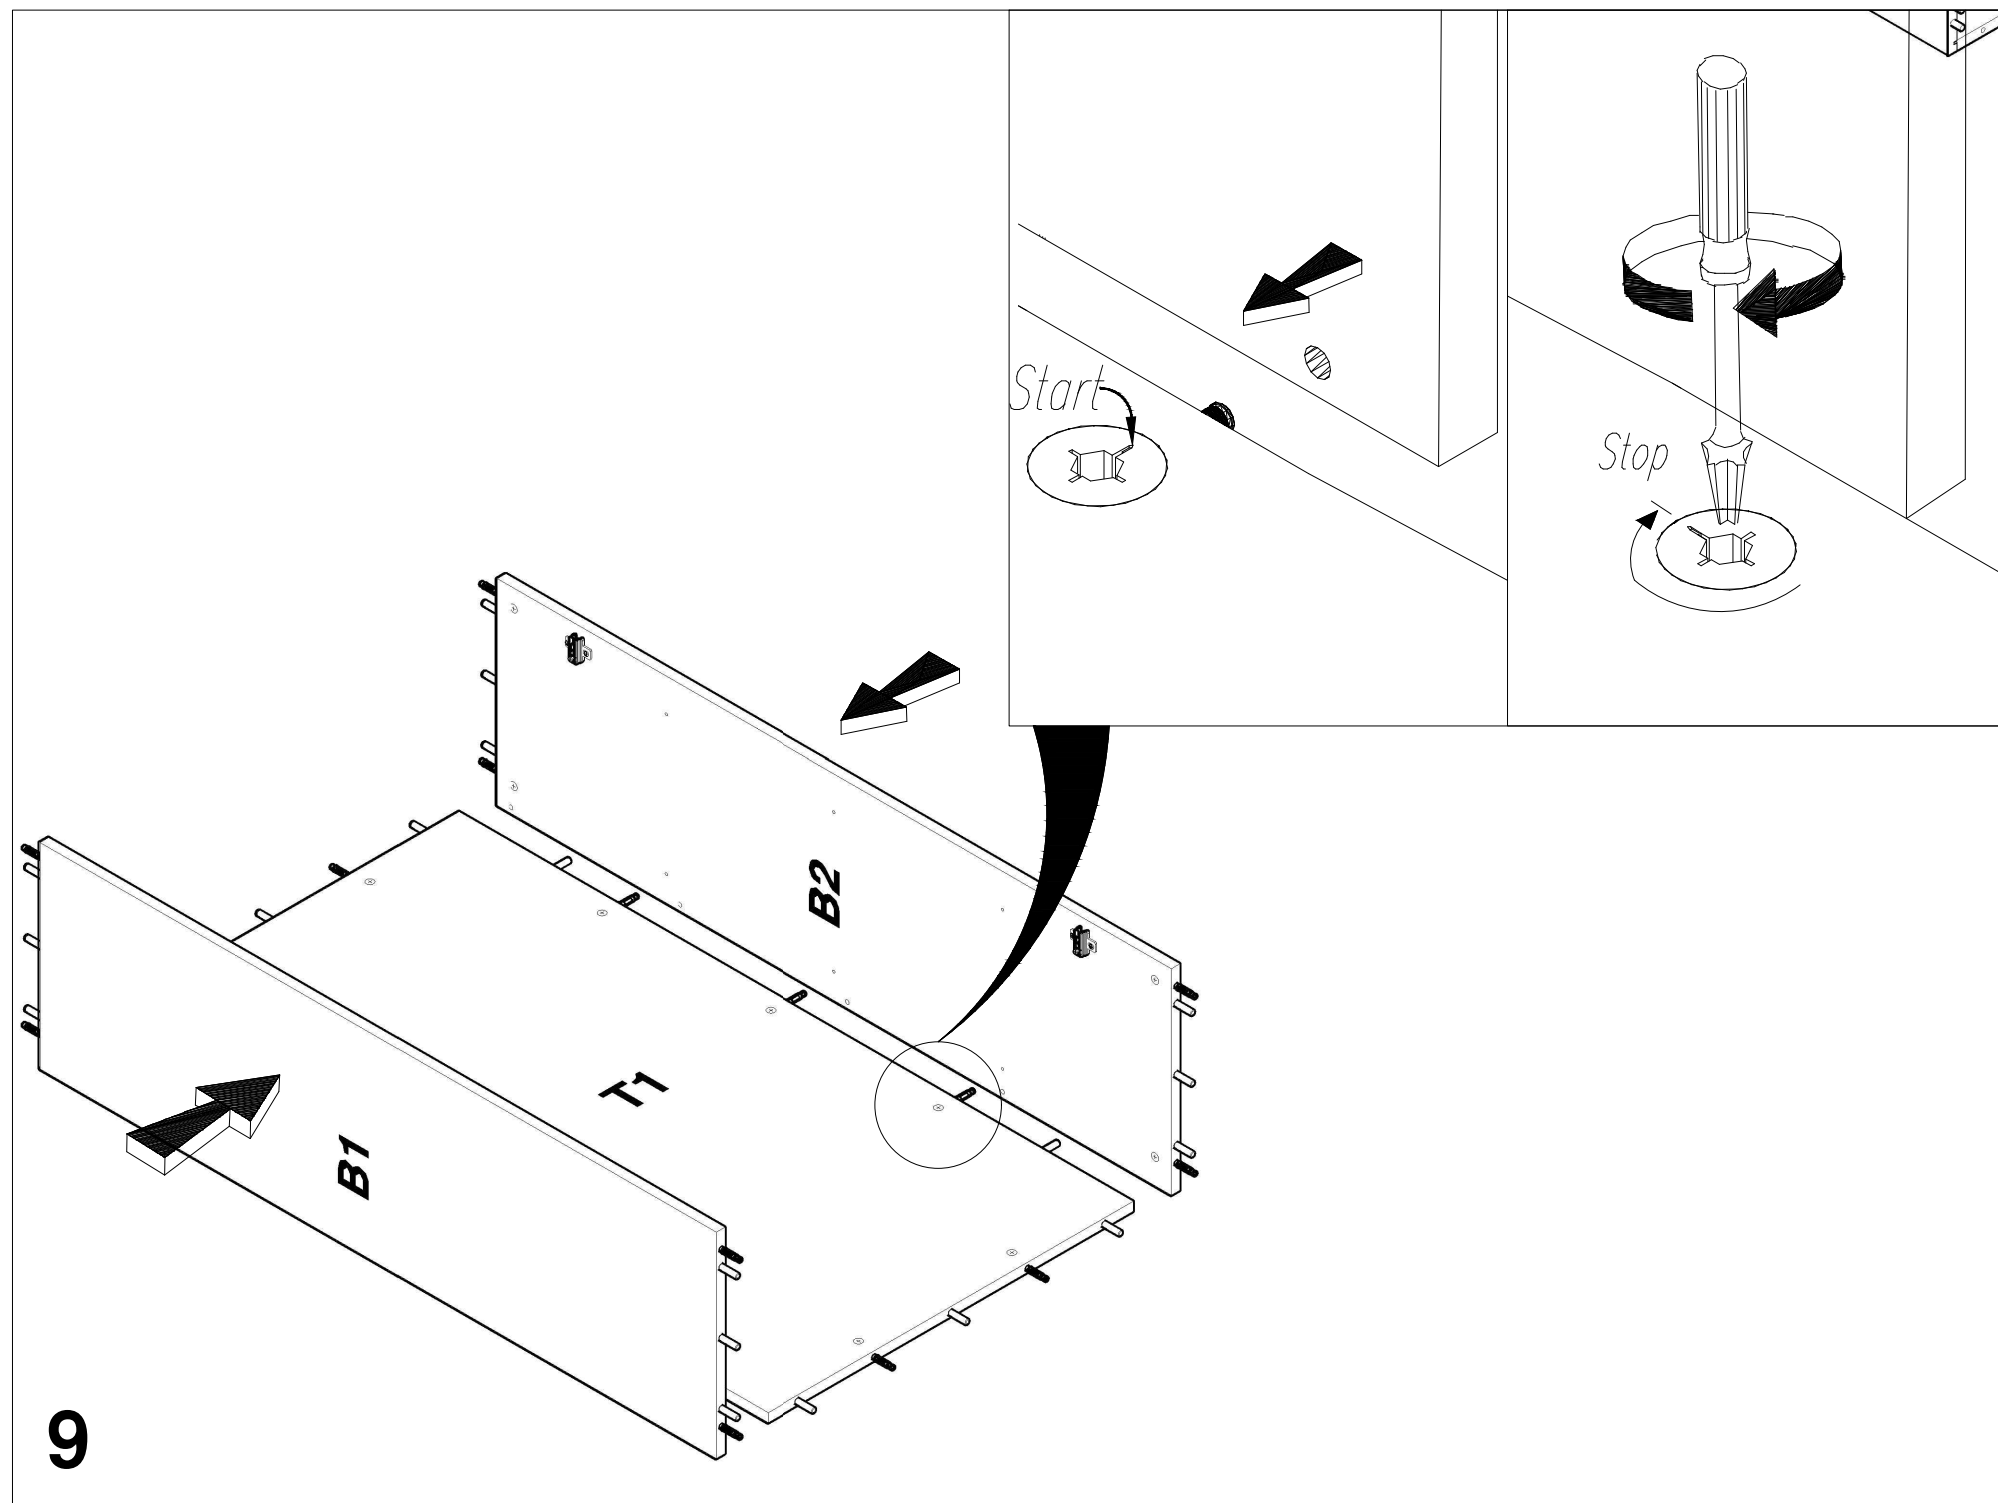


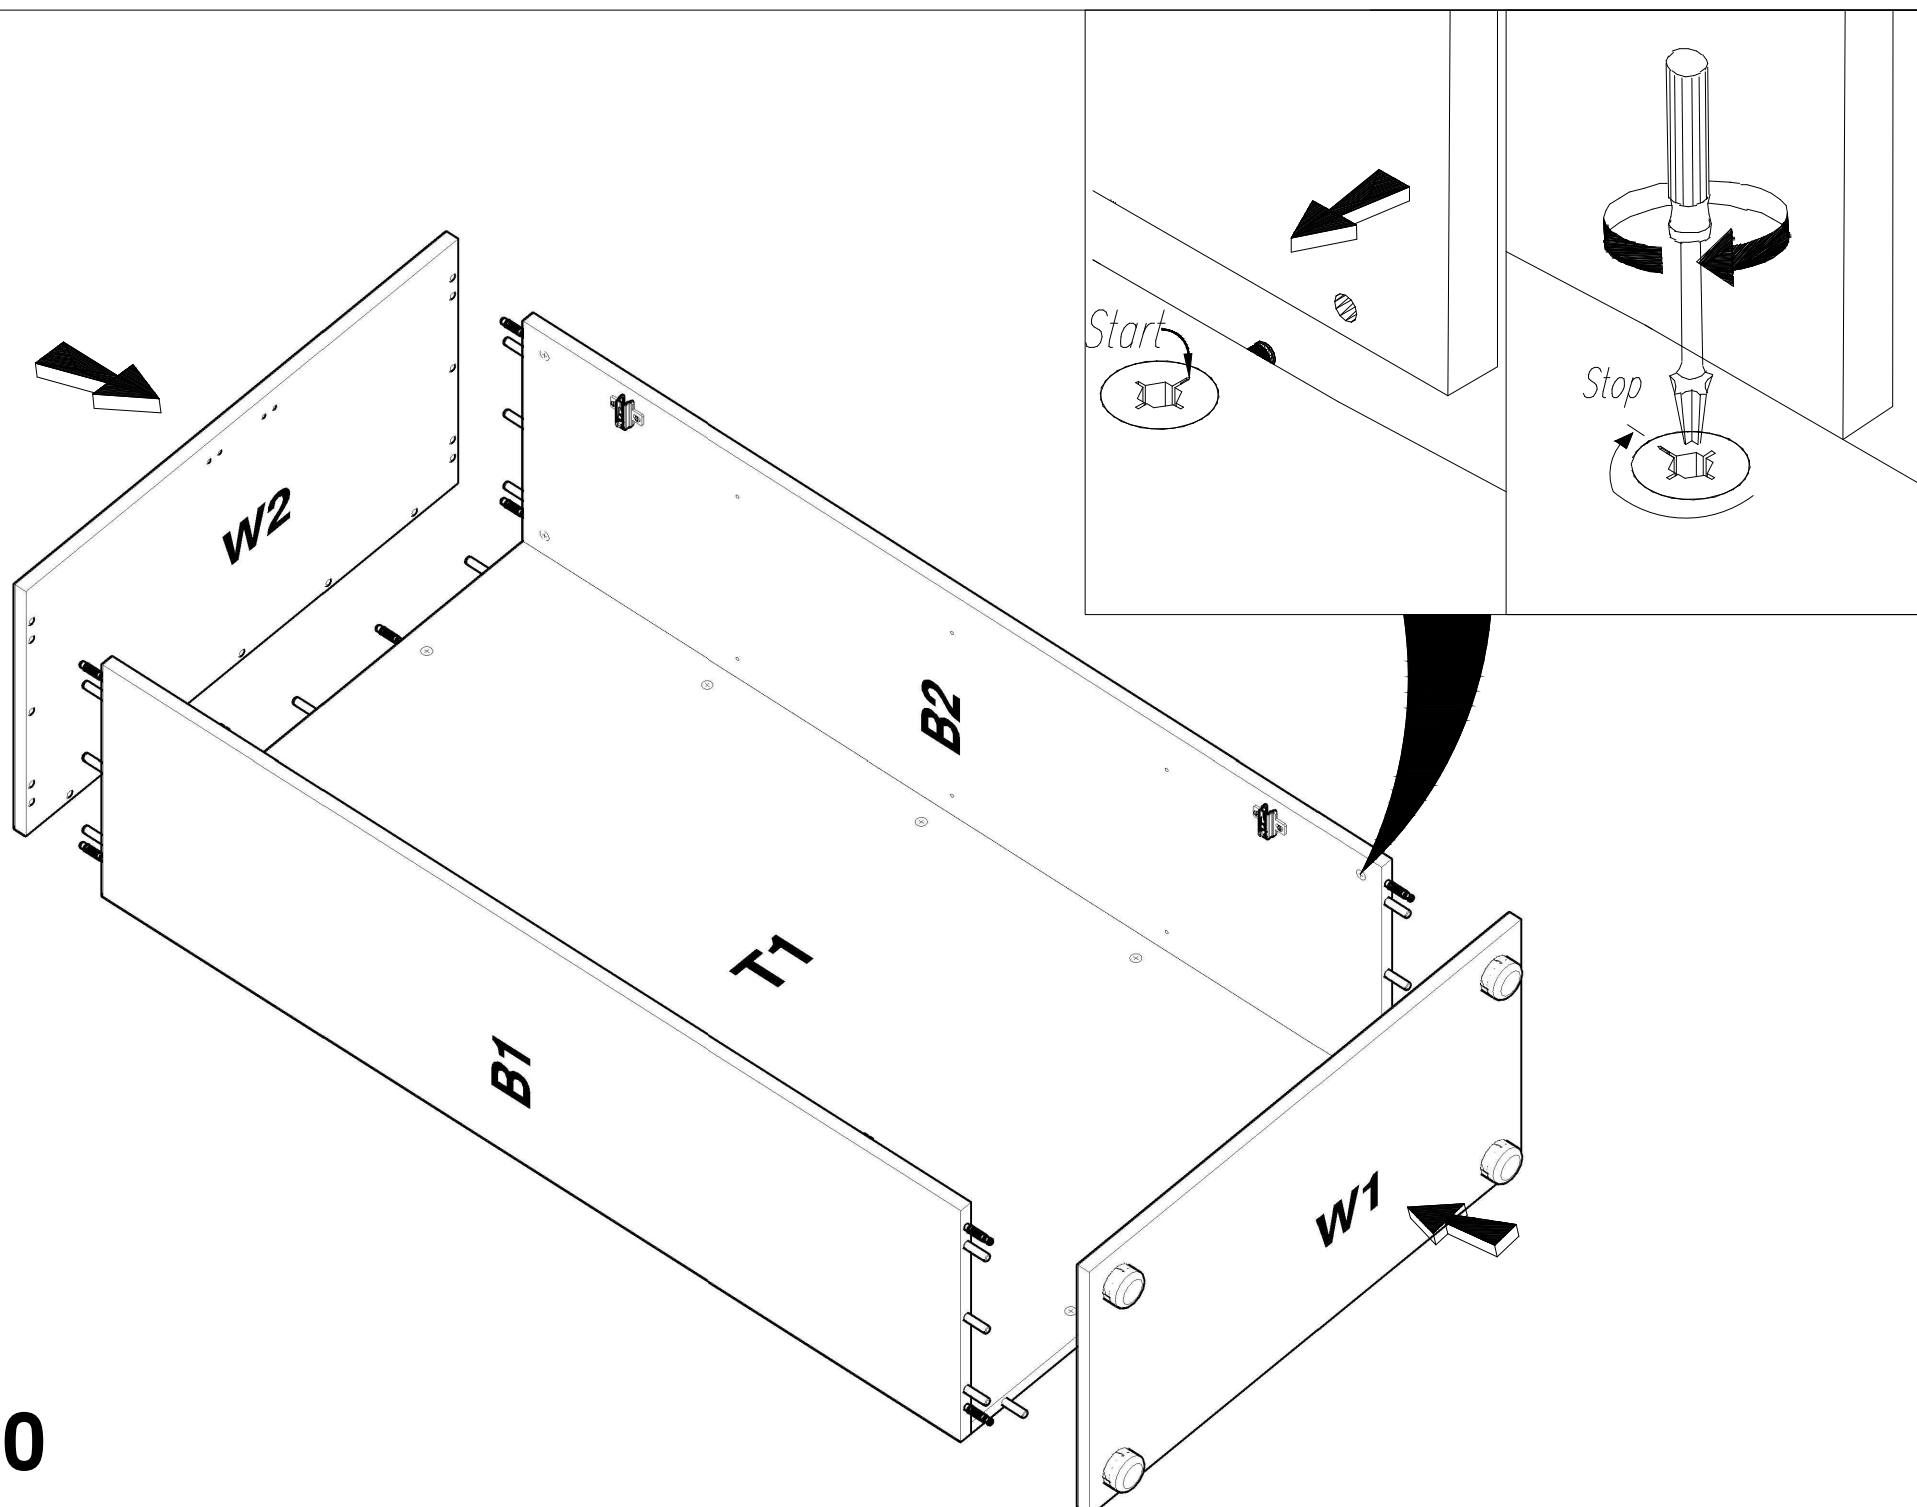



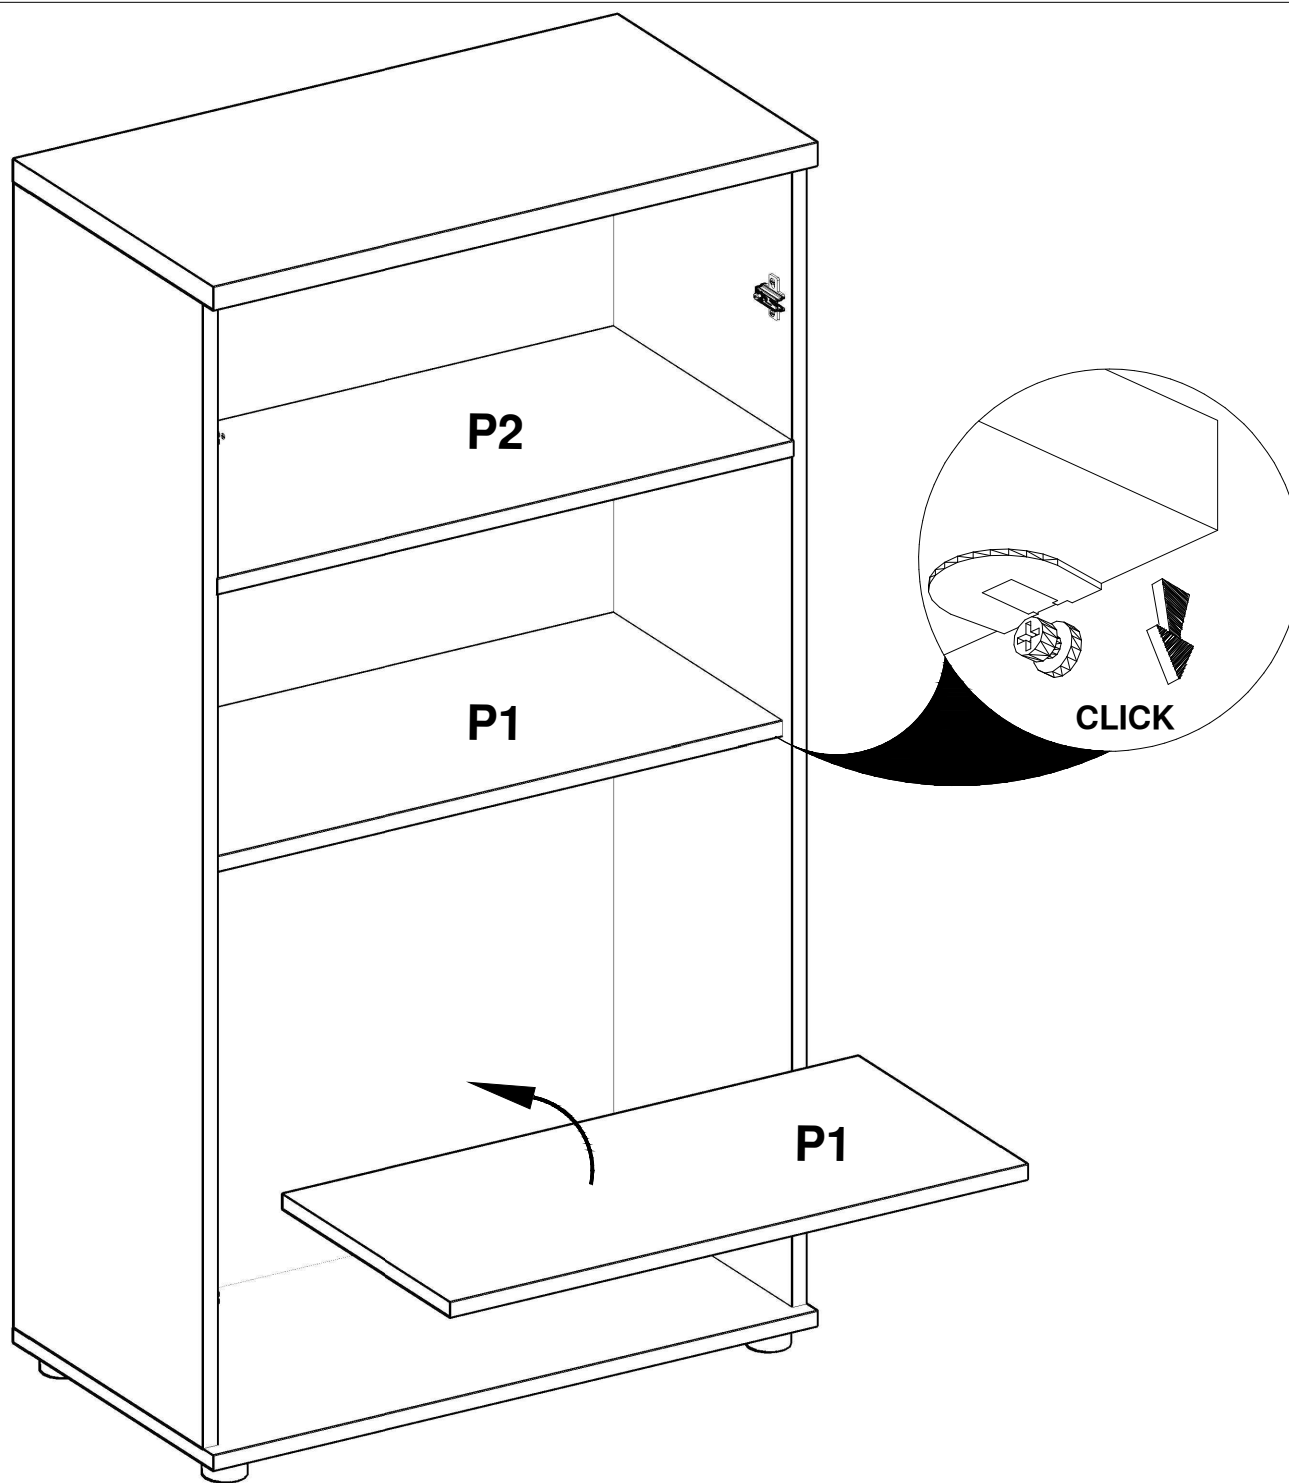


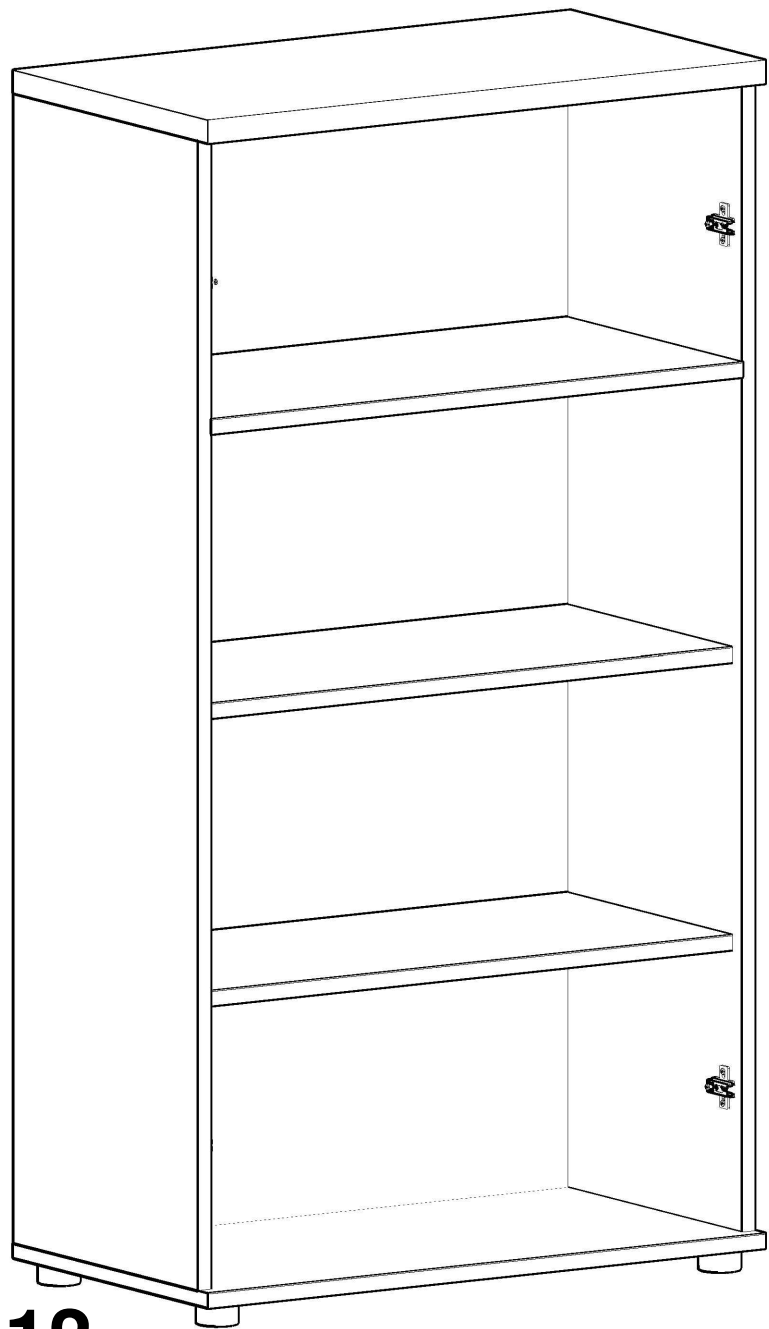


12

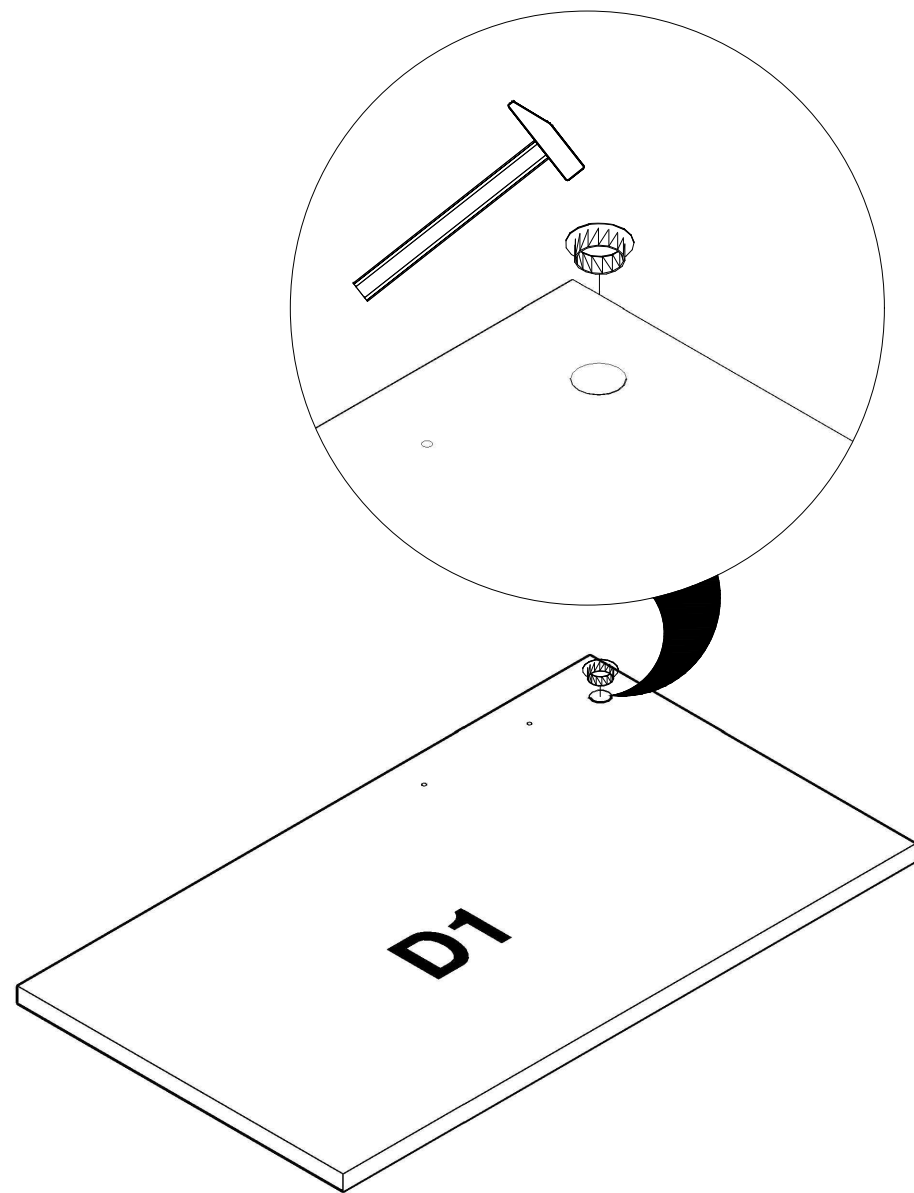


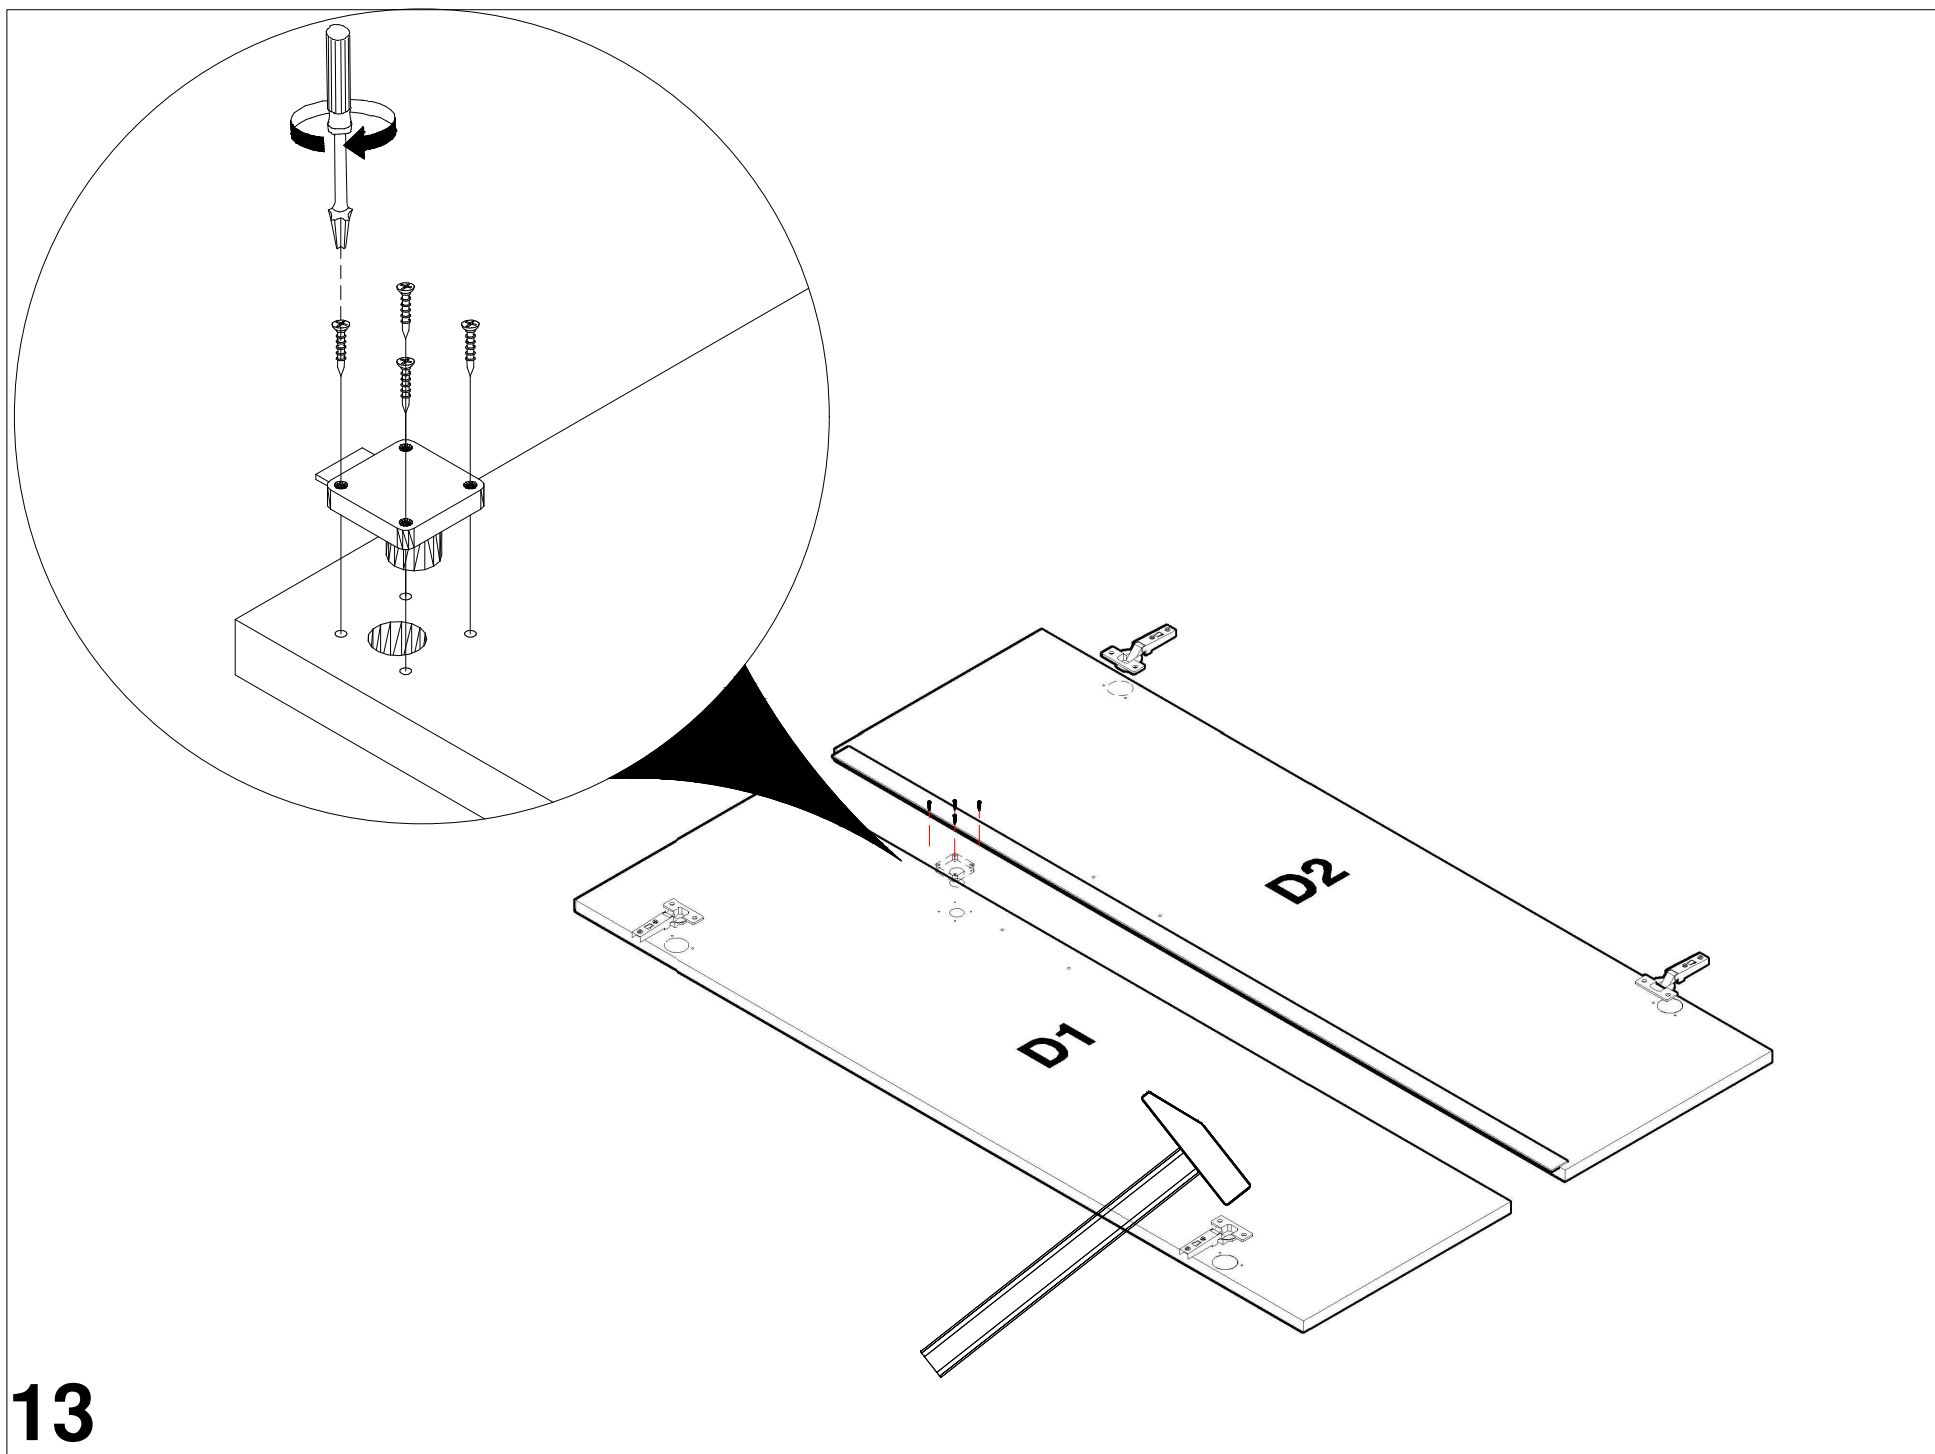



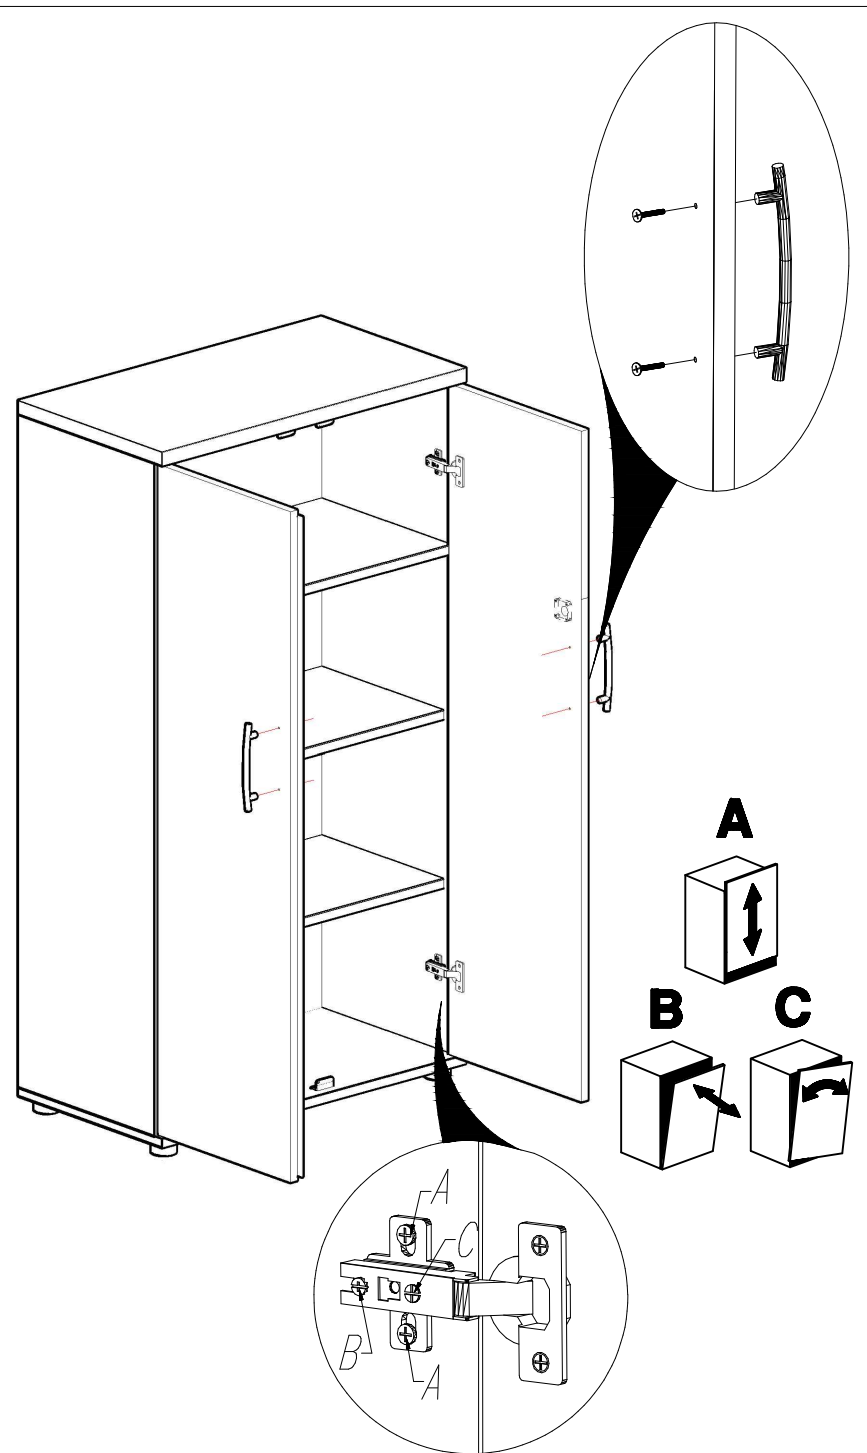
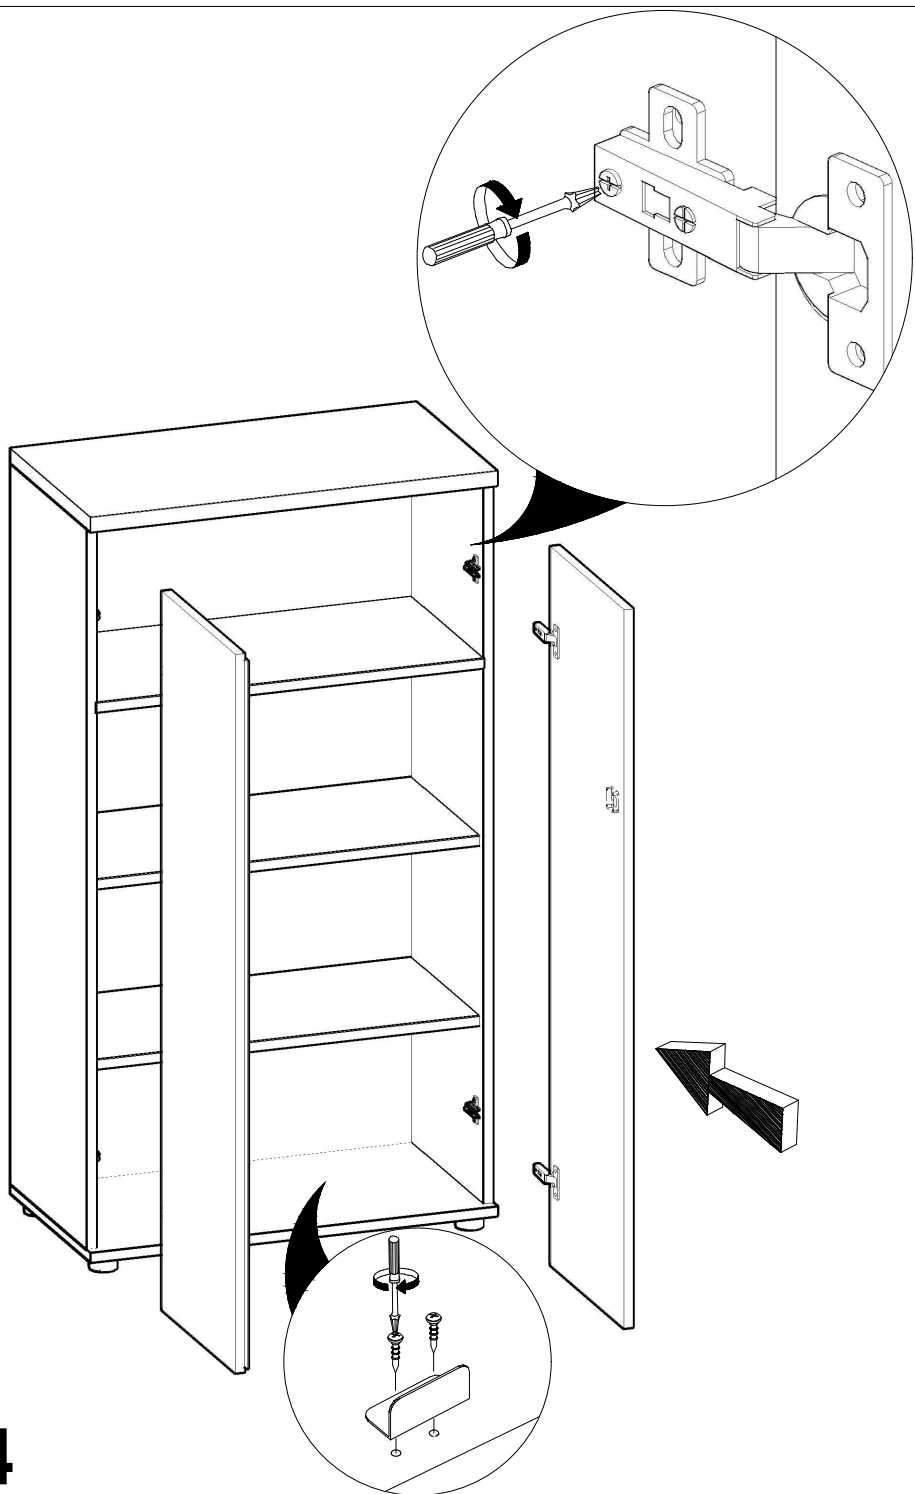



A52P4

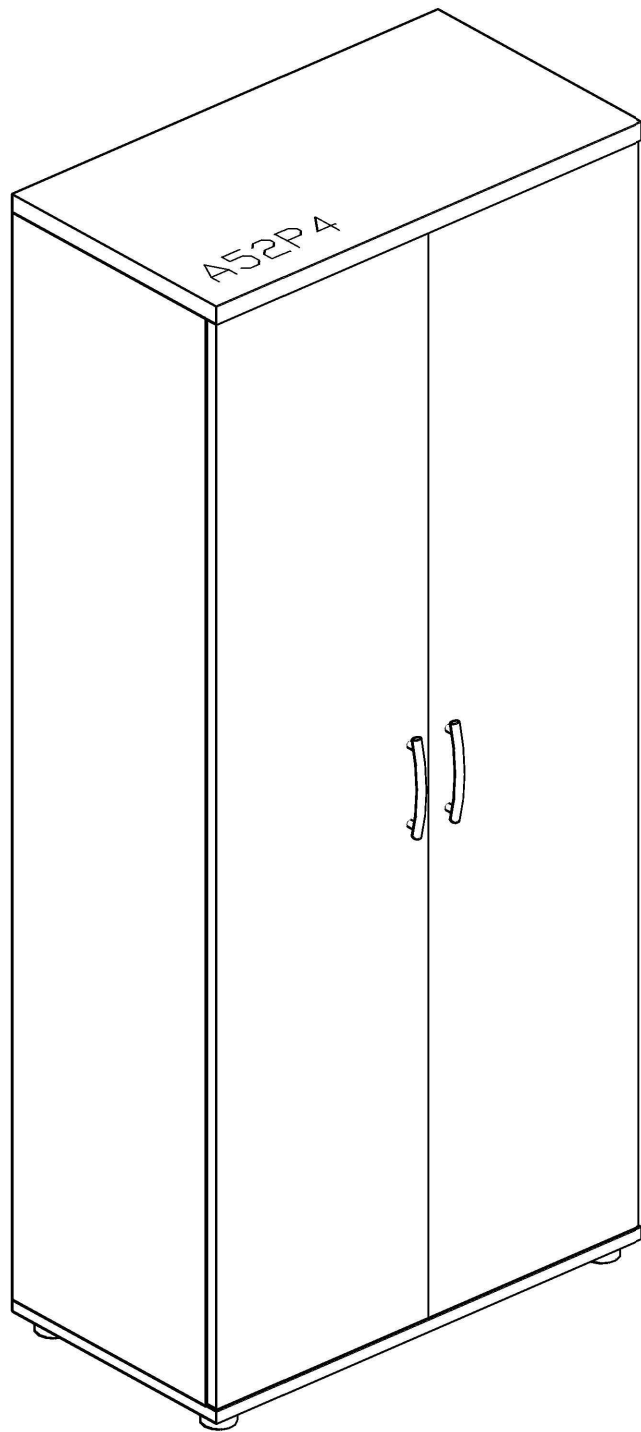


1

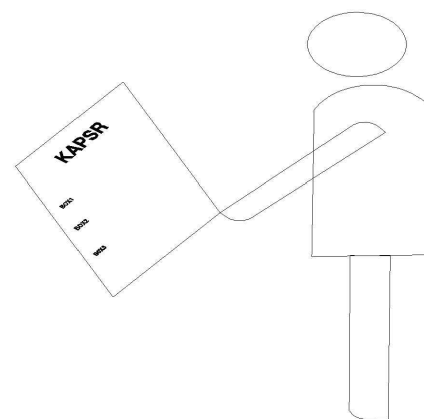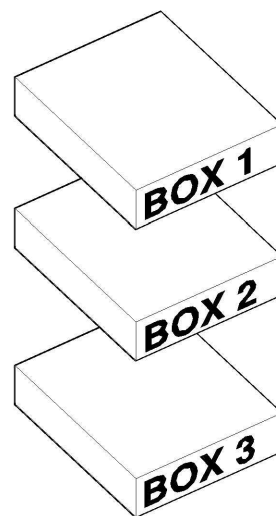


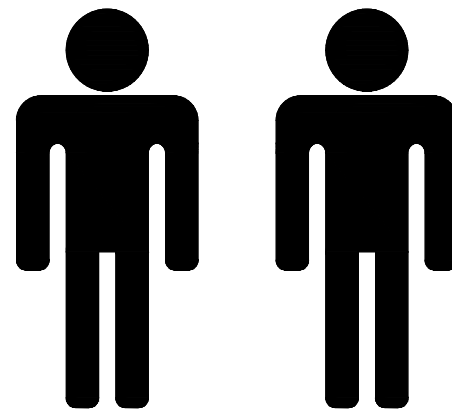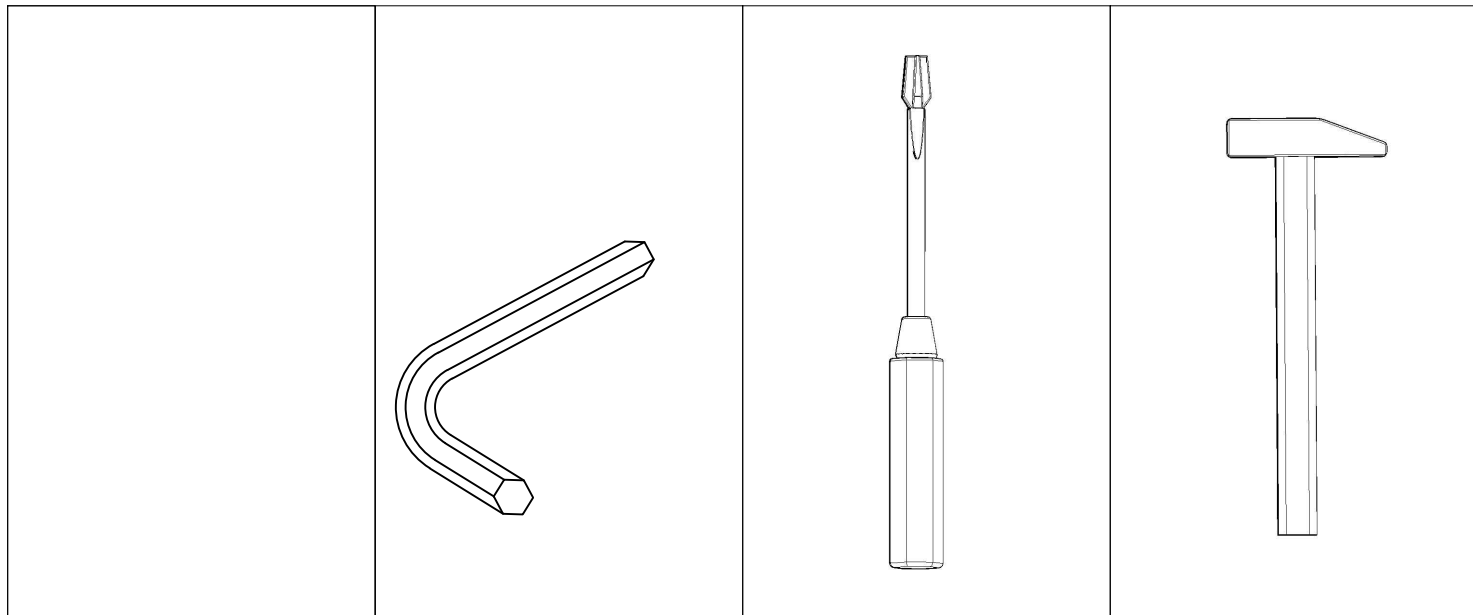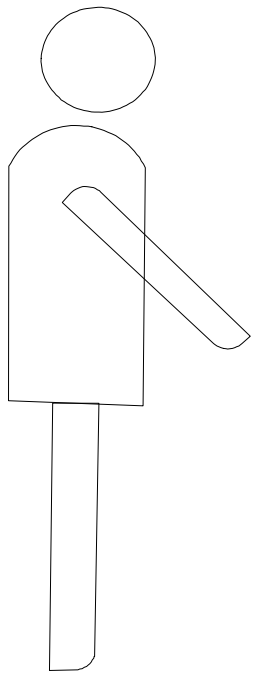

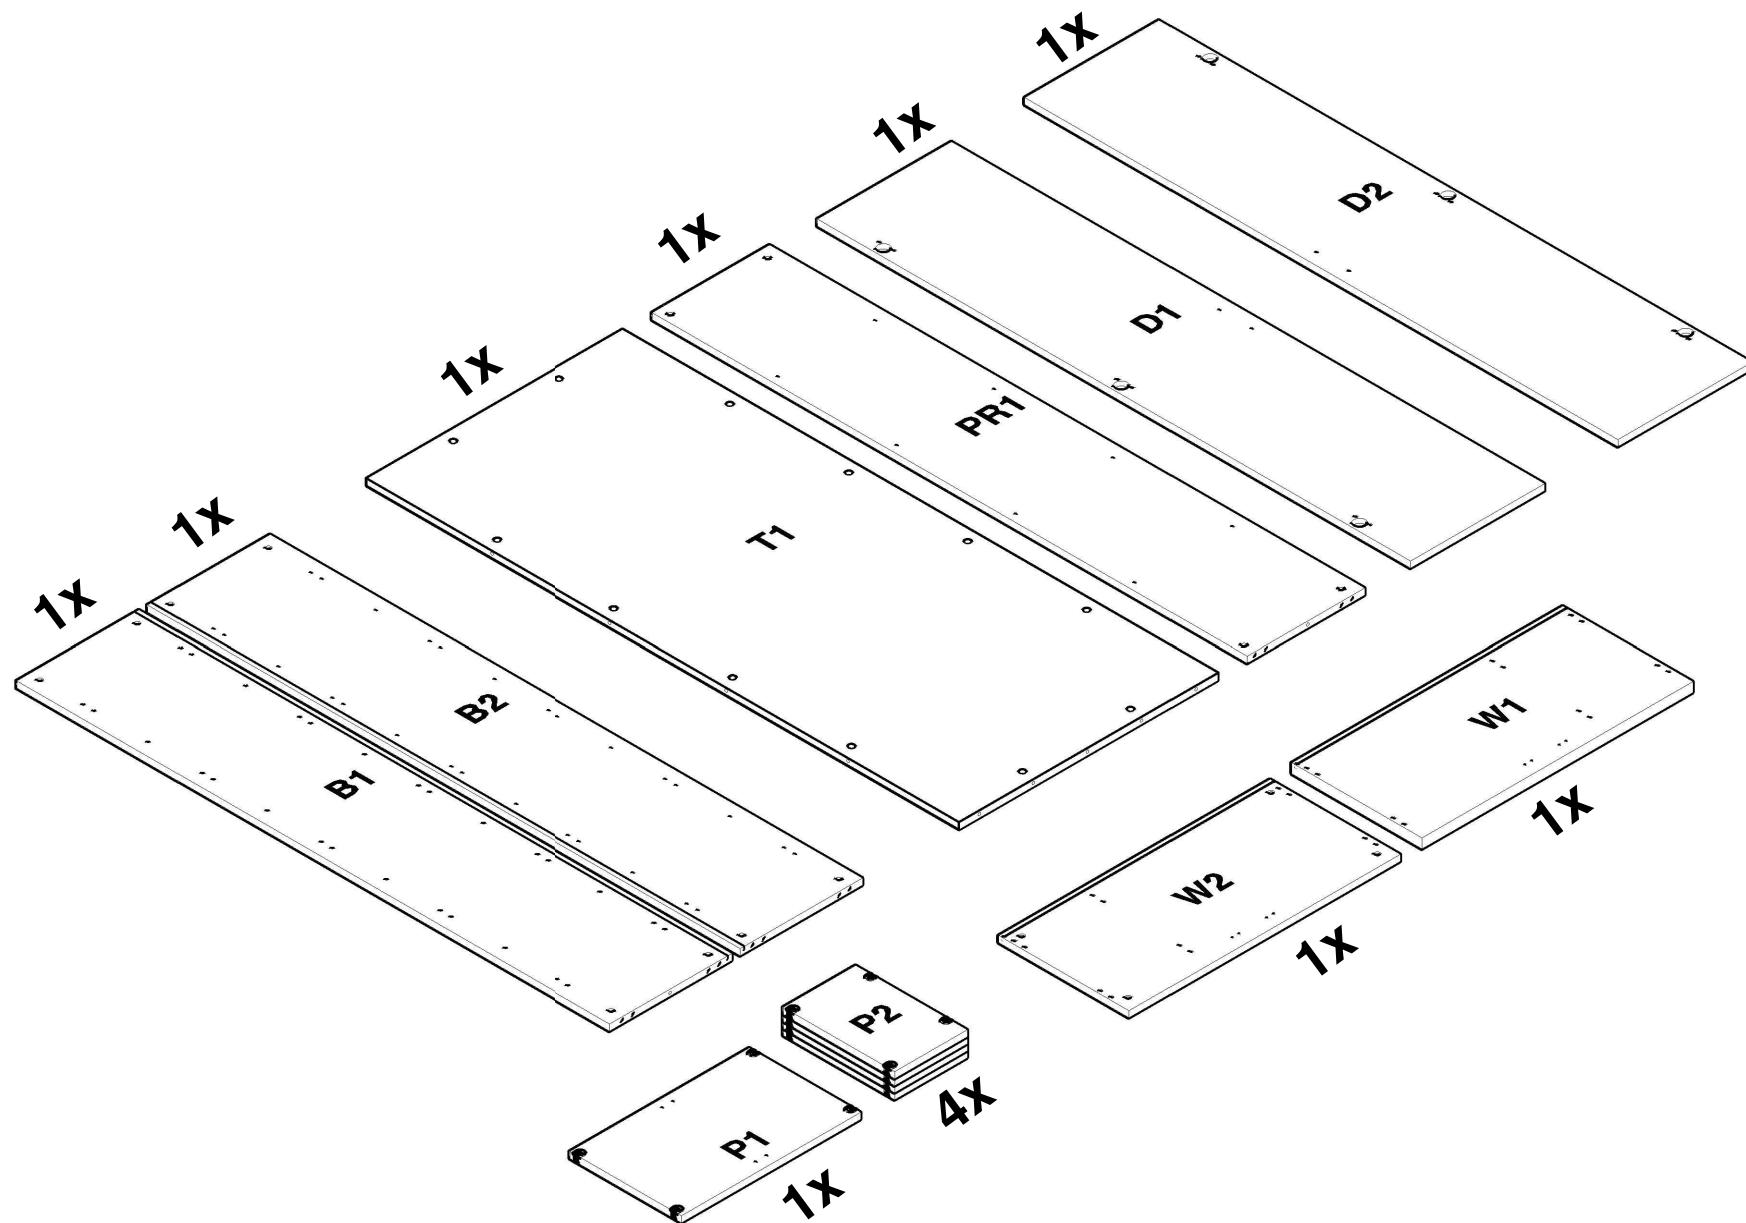


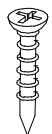


8x

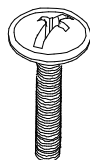


4x

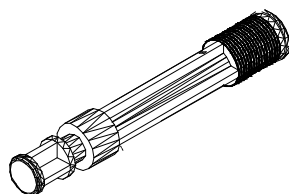

24x

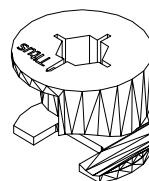


24x

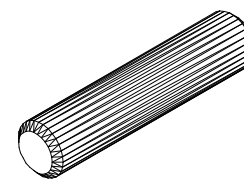


22x




20

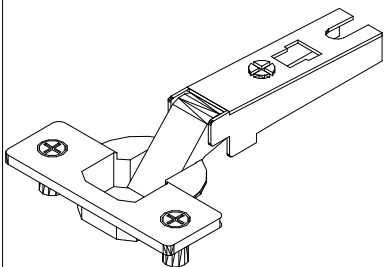


6x

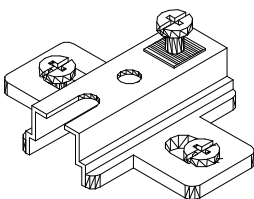


6x

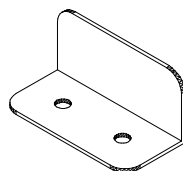

2x

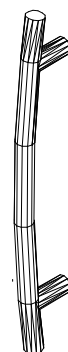



2x

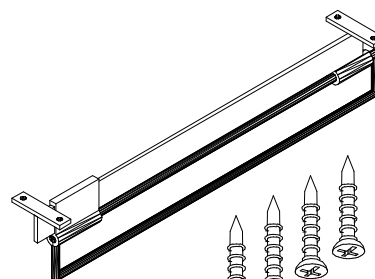



1x




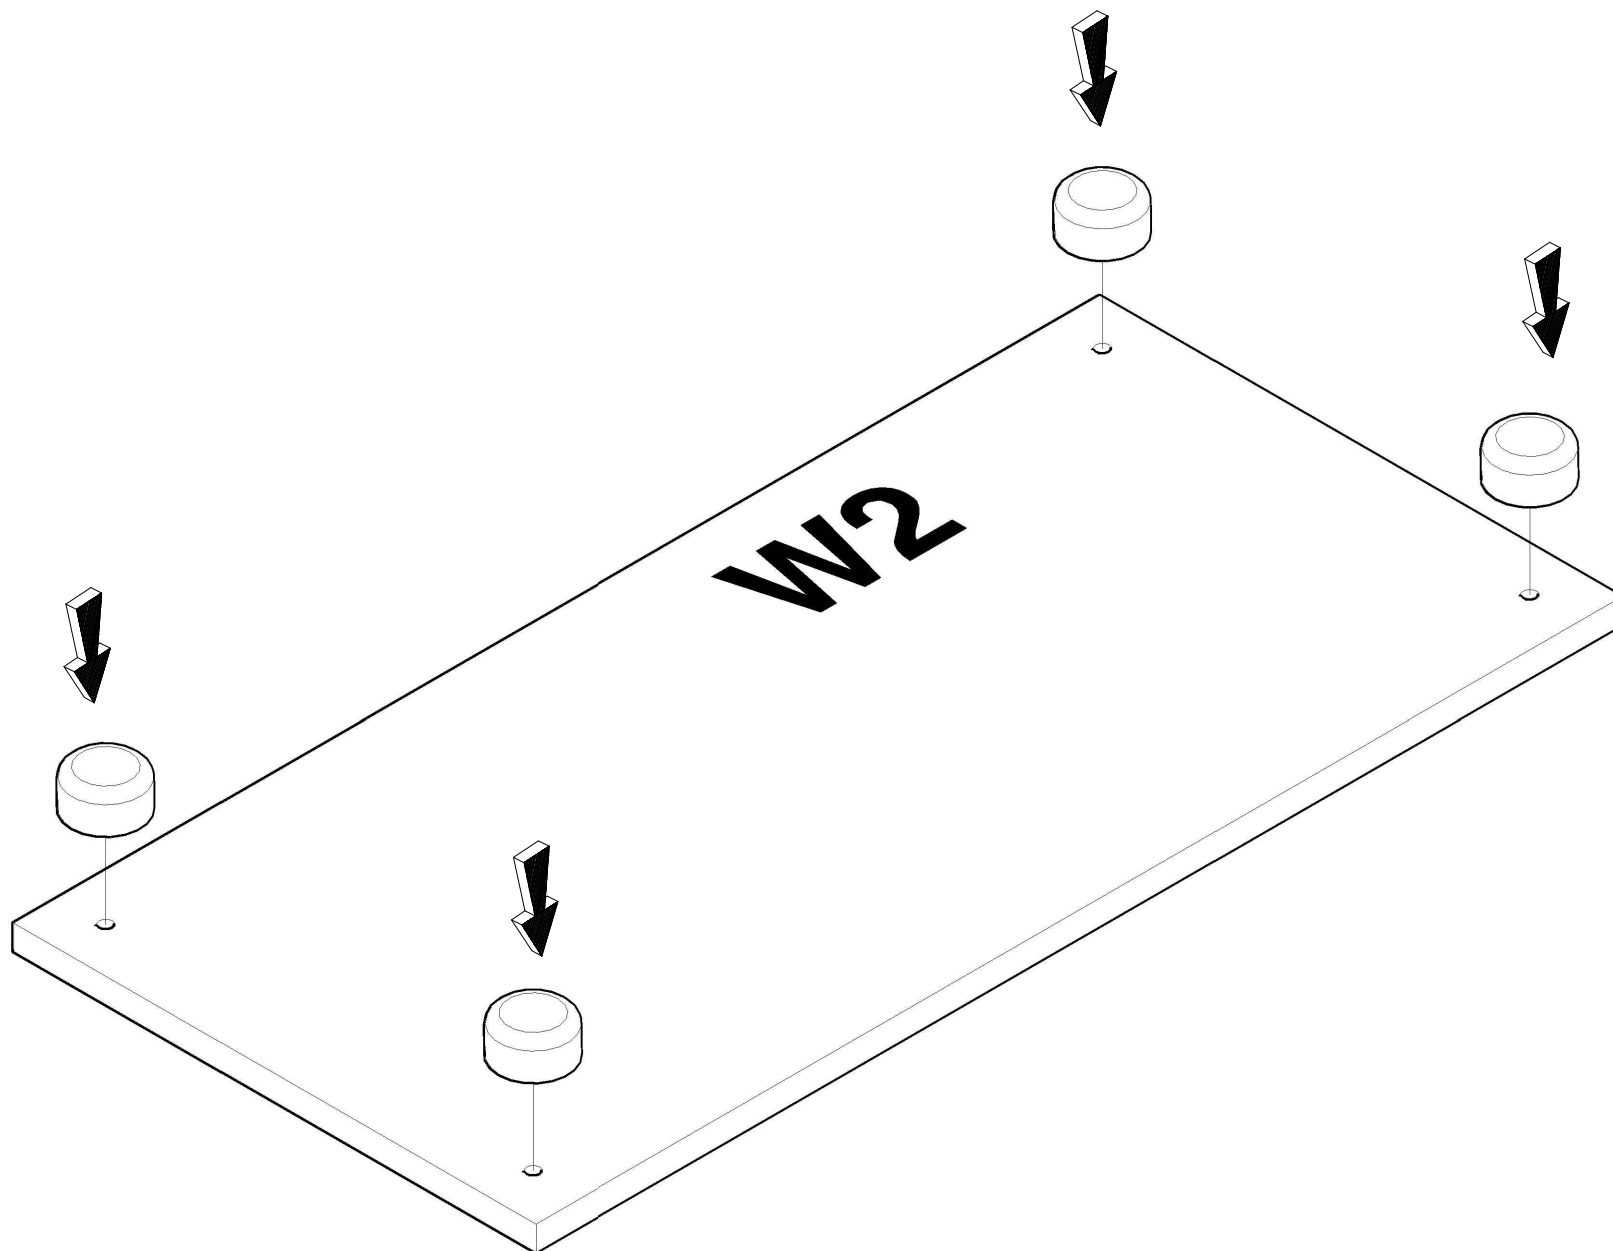


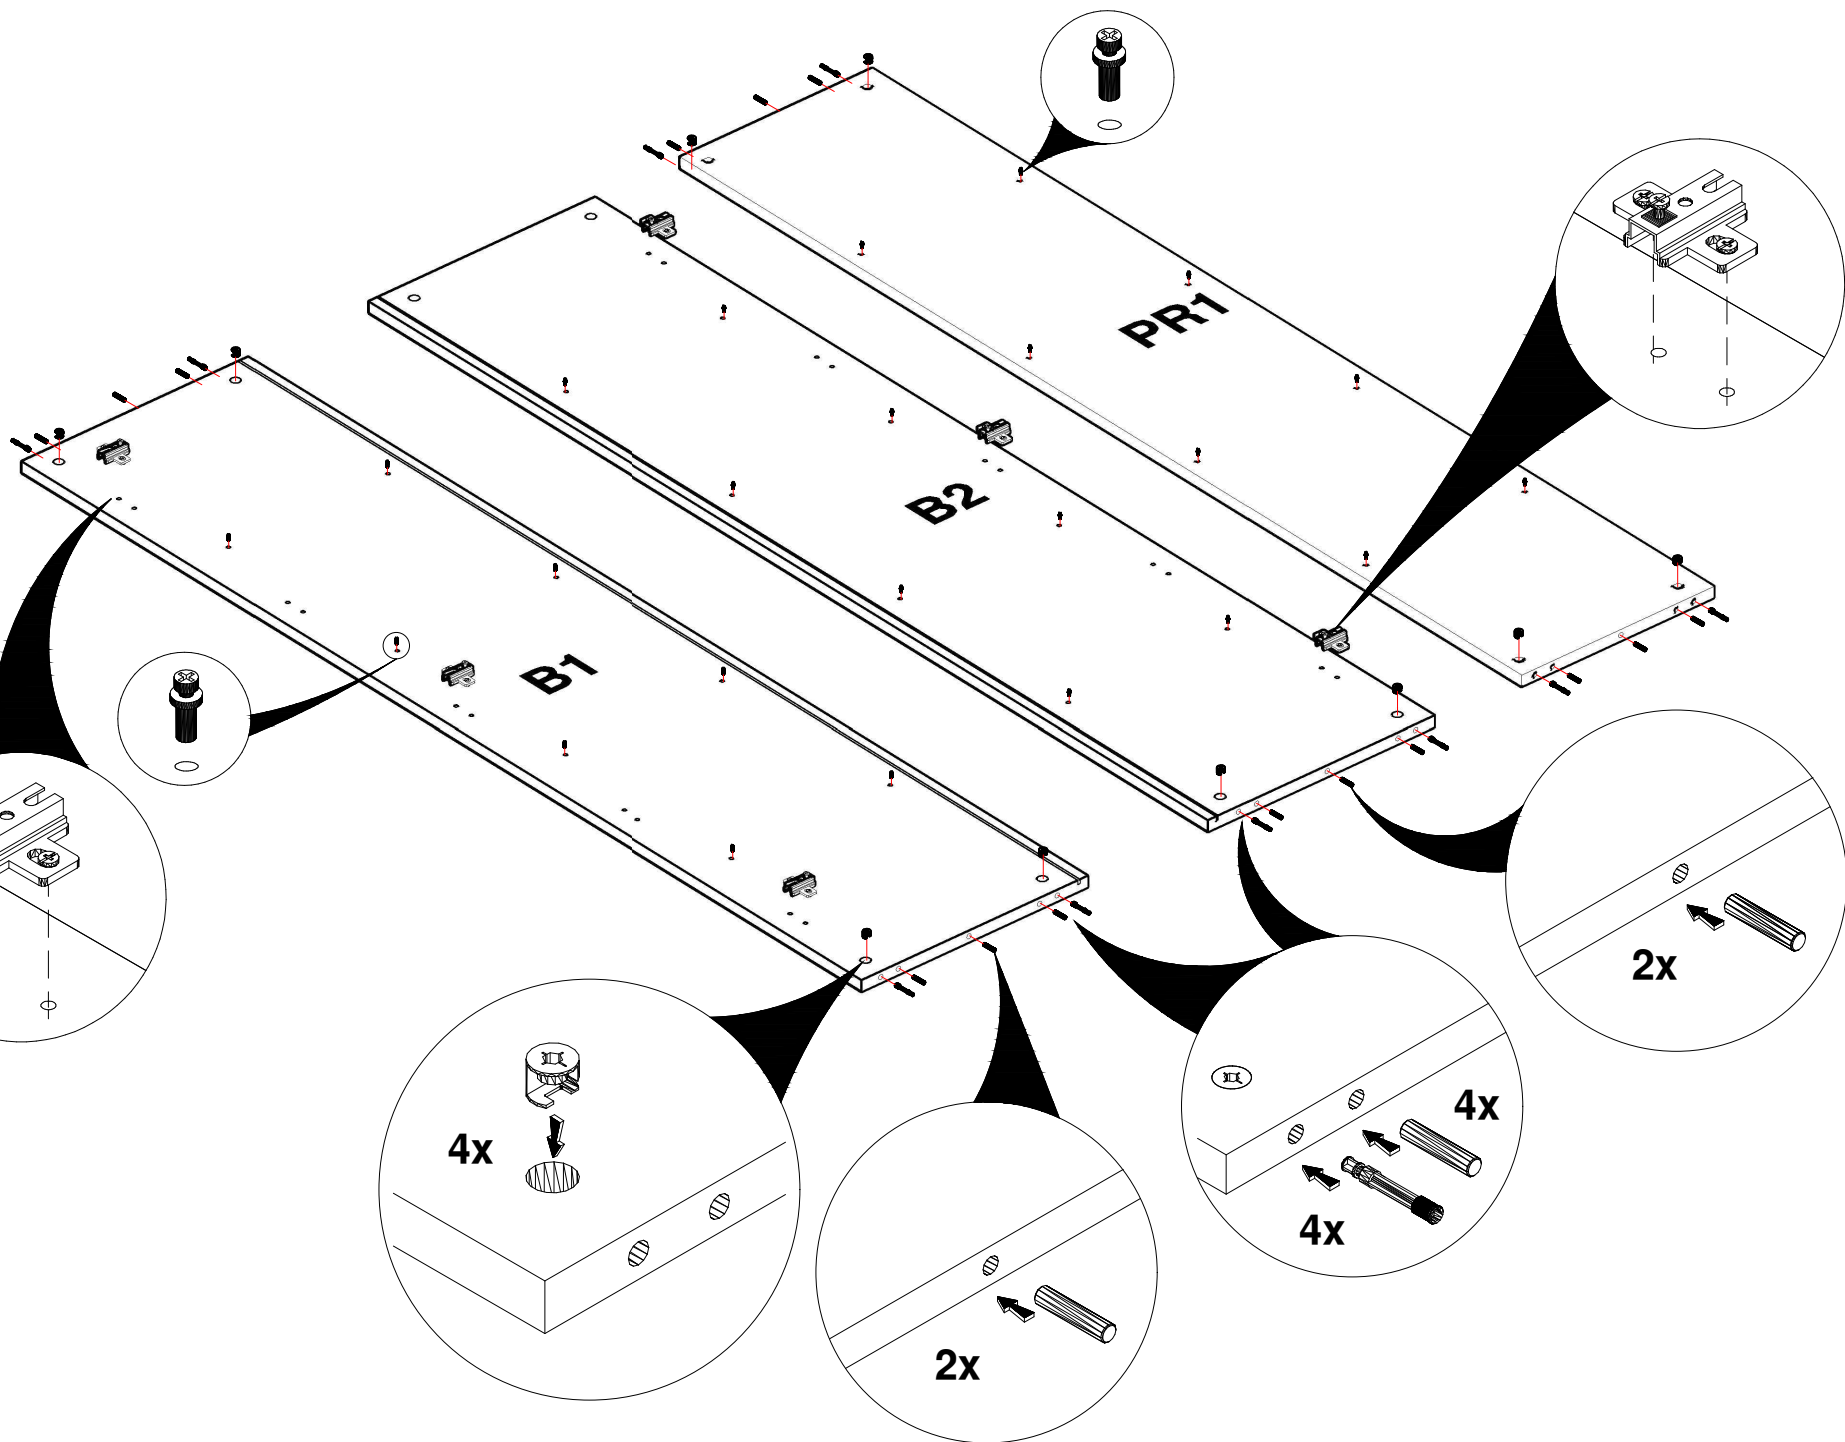

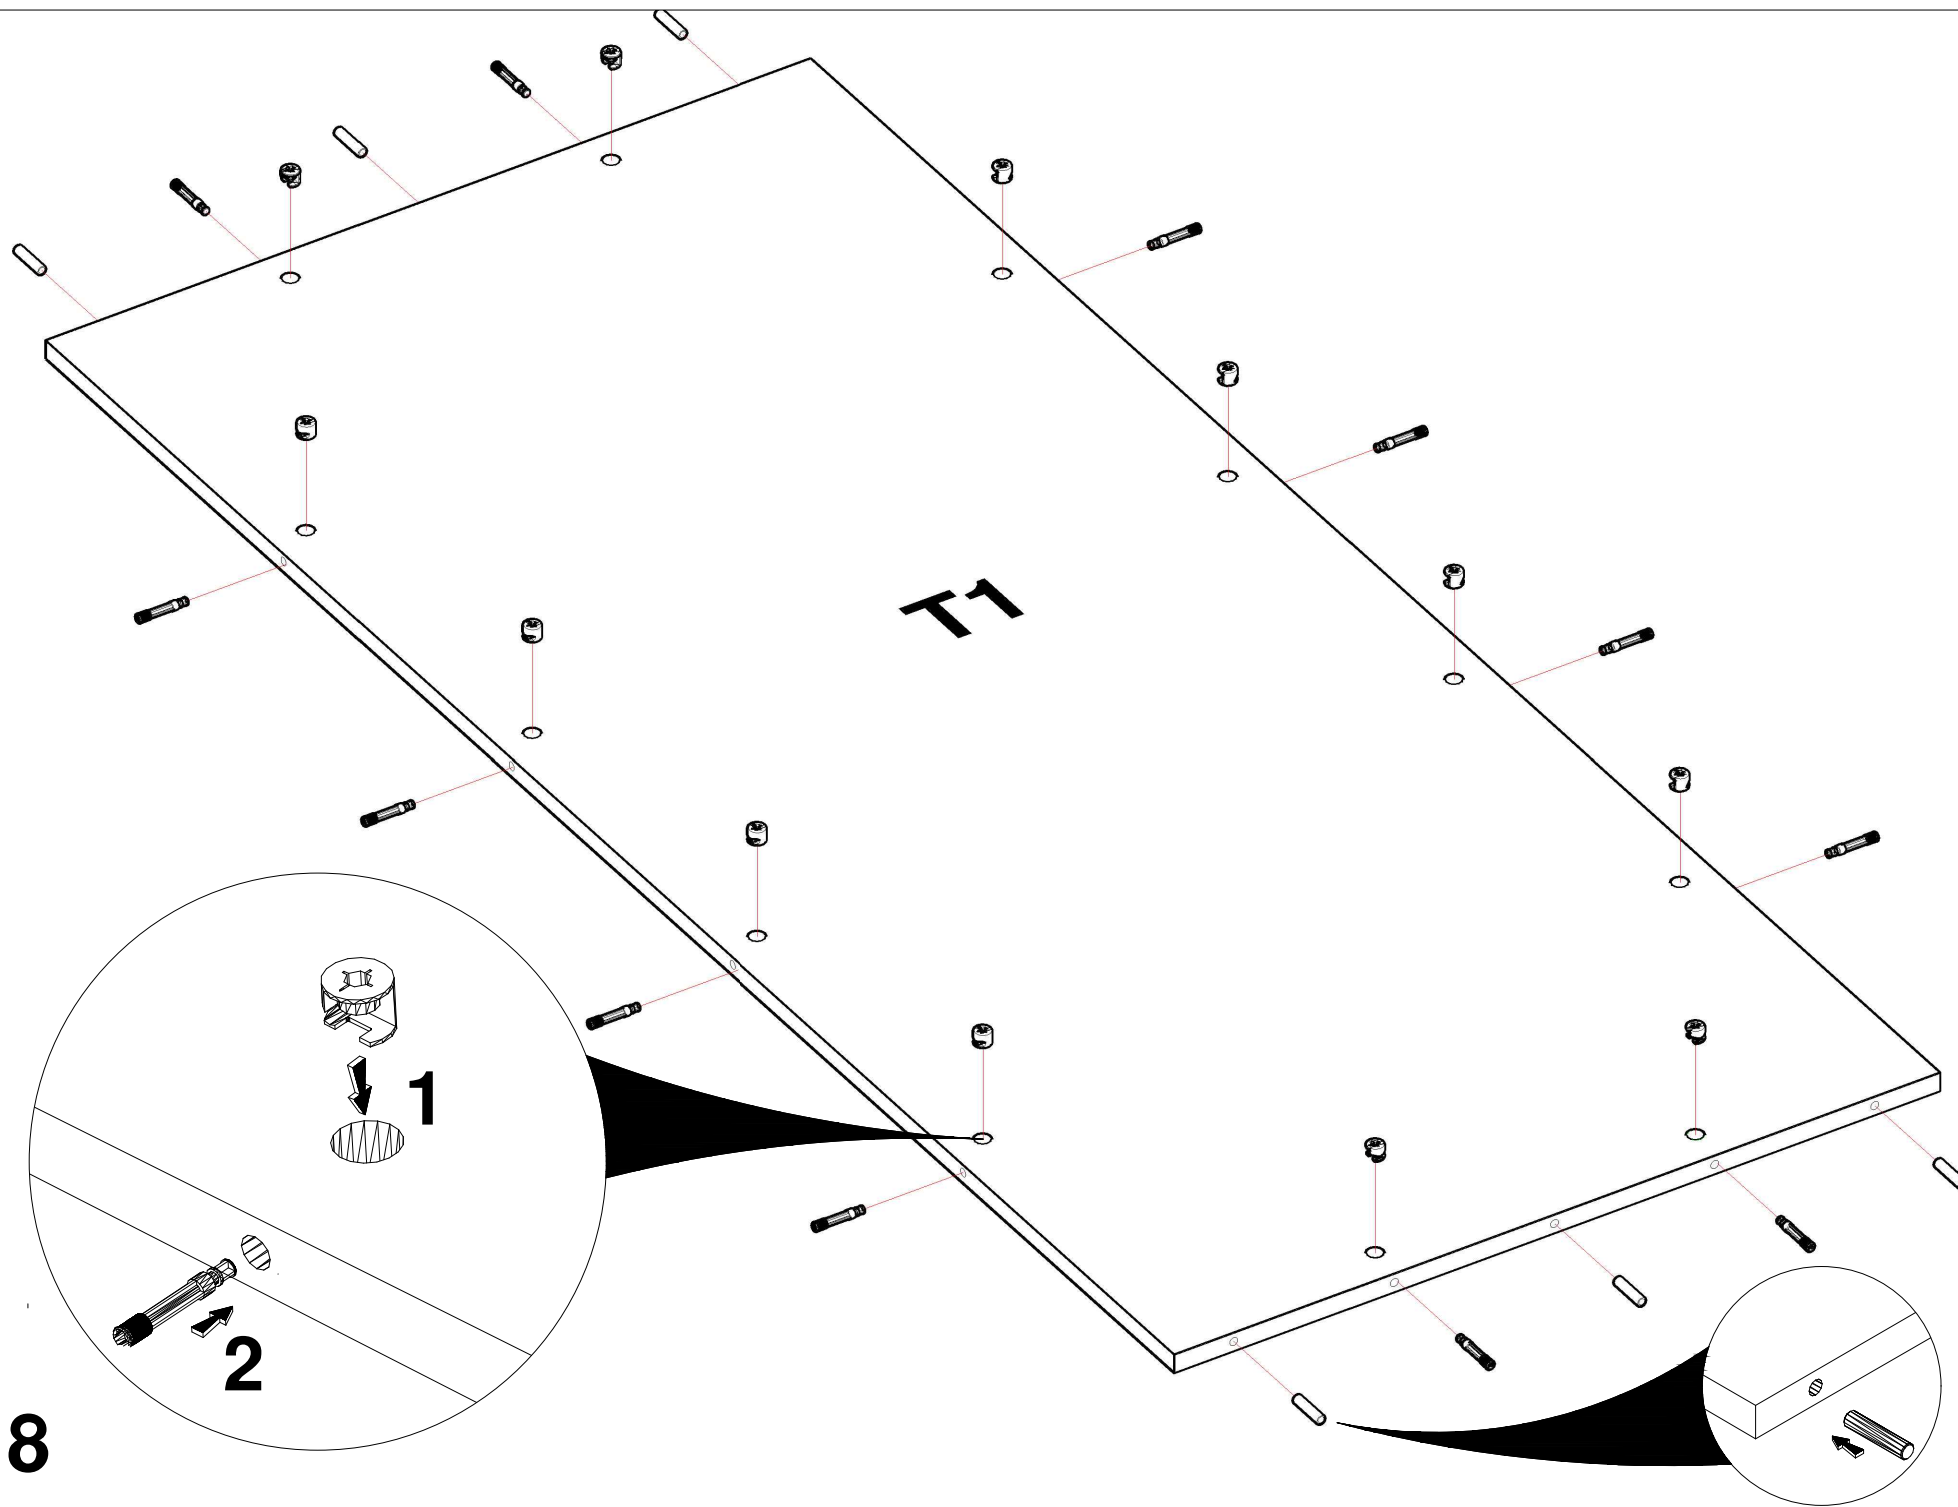


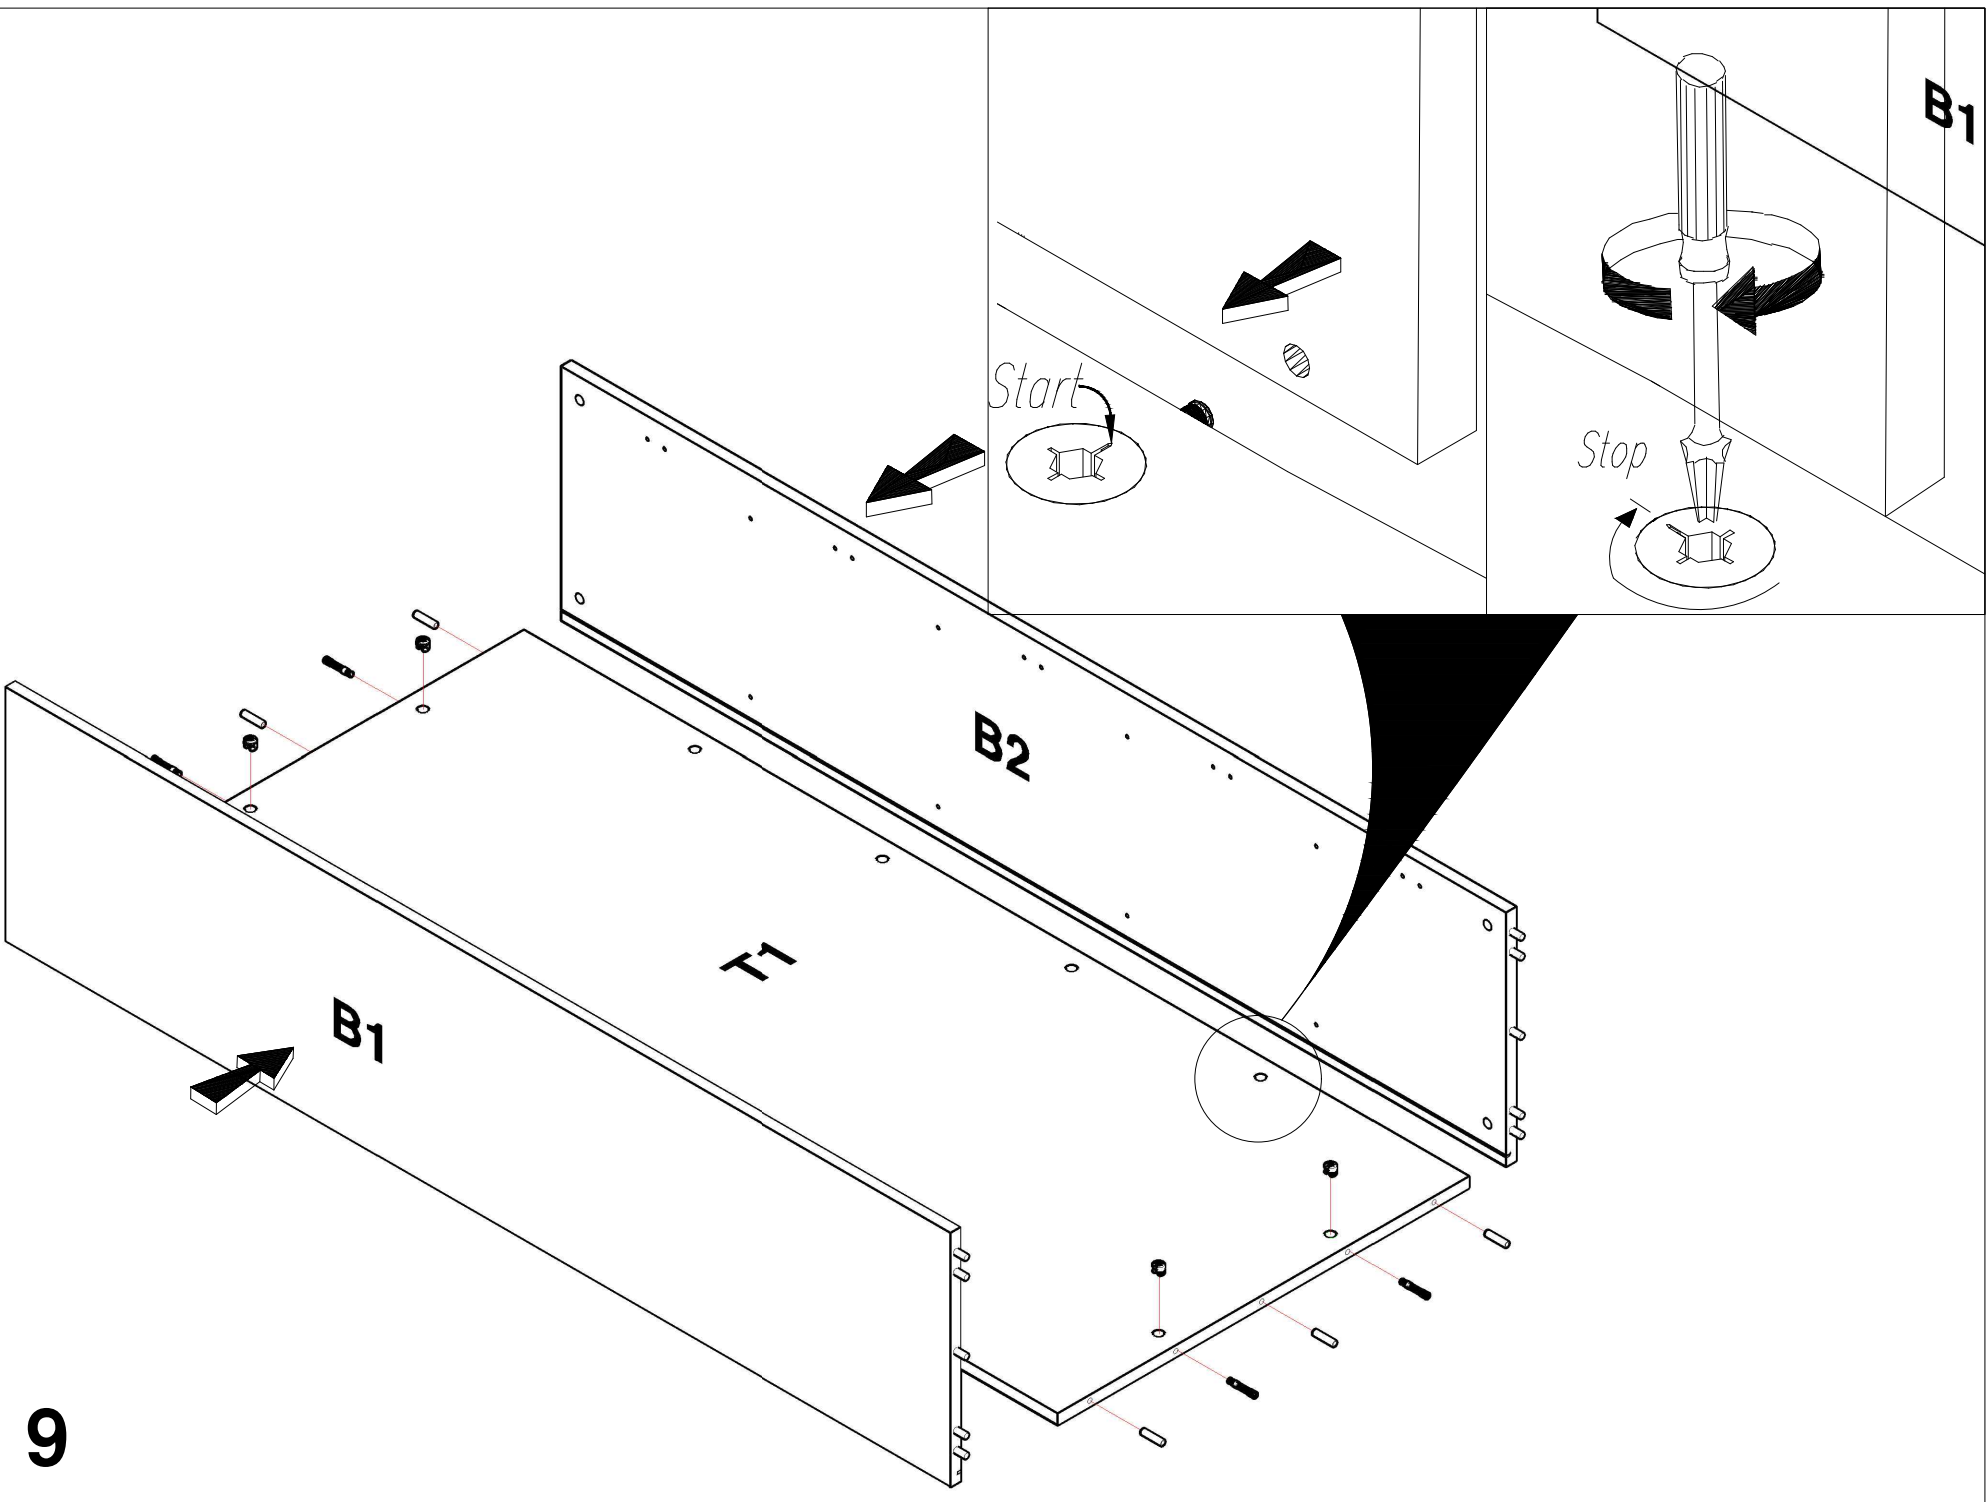





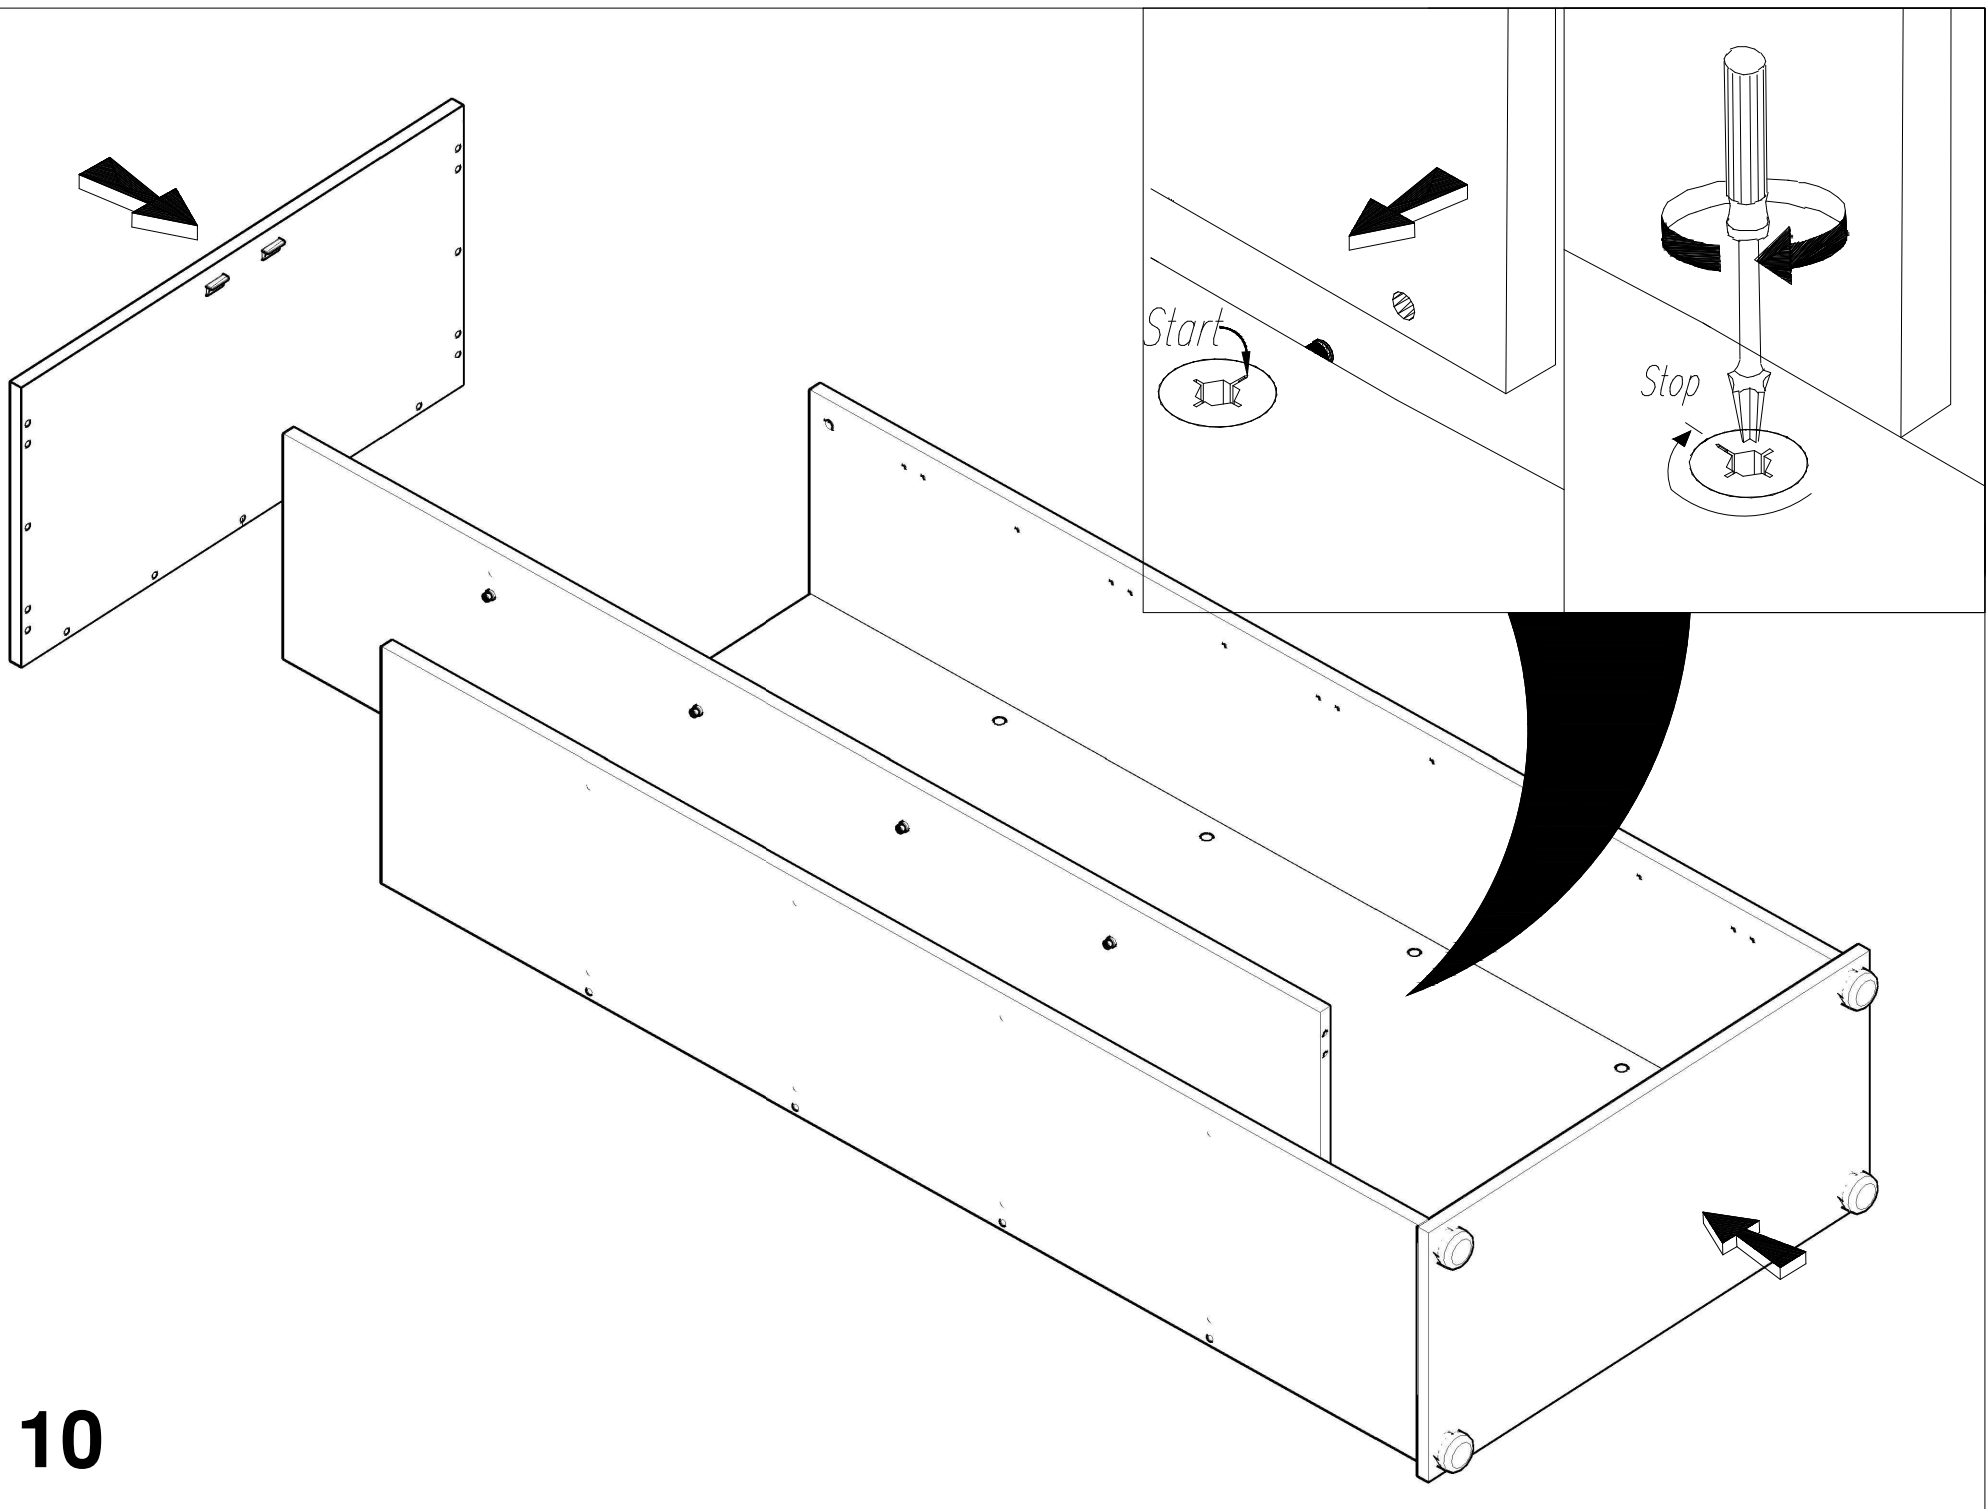



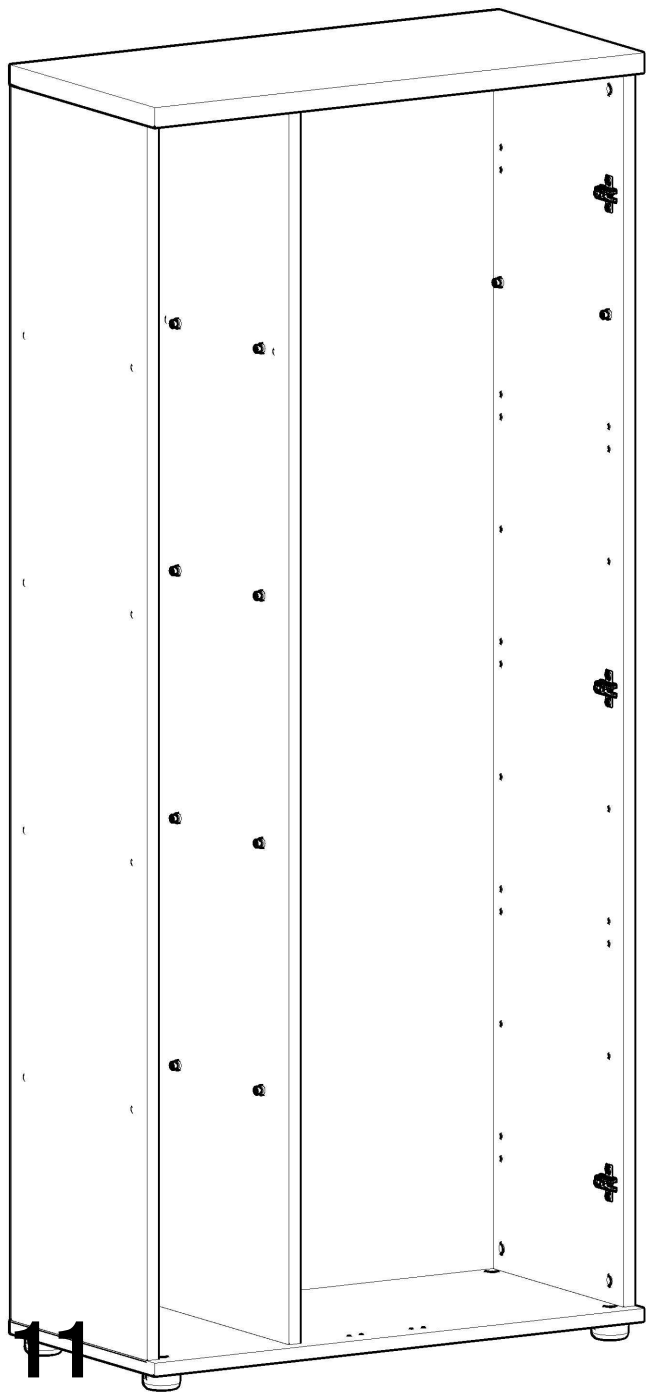




11

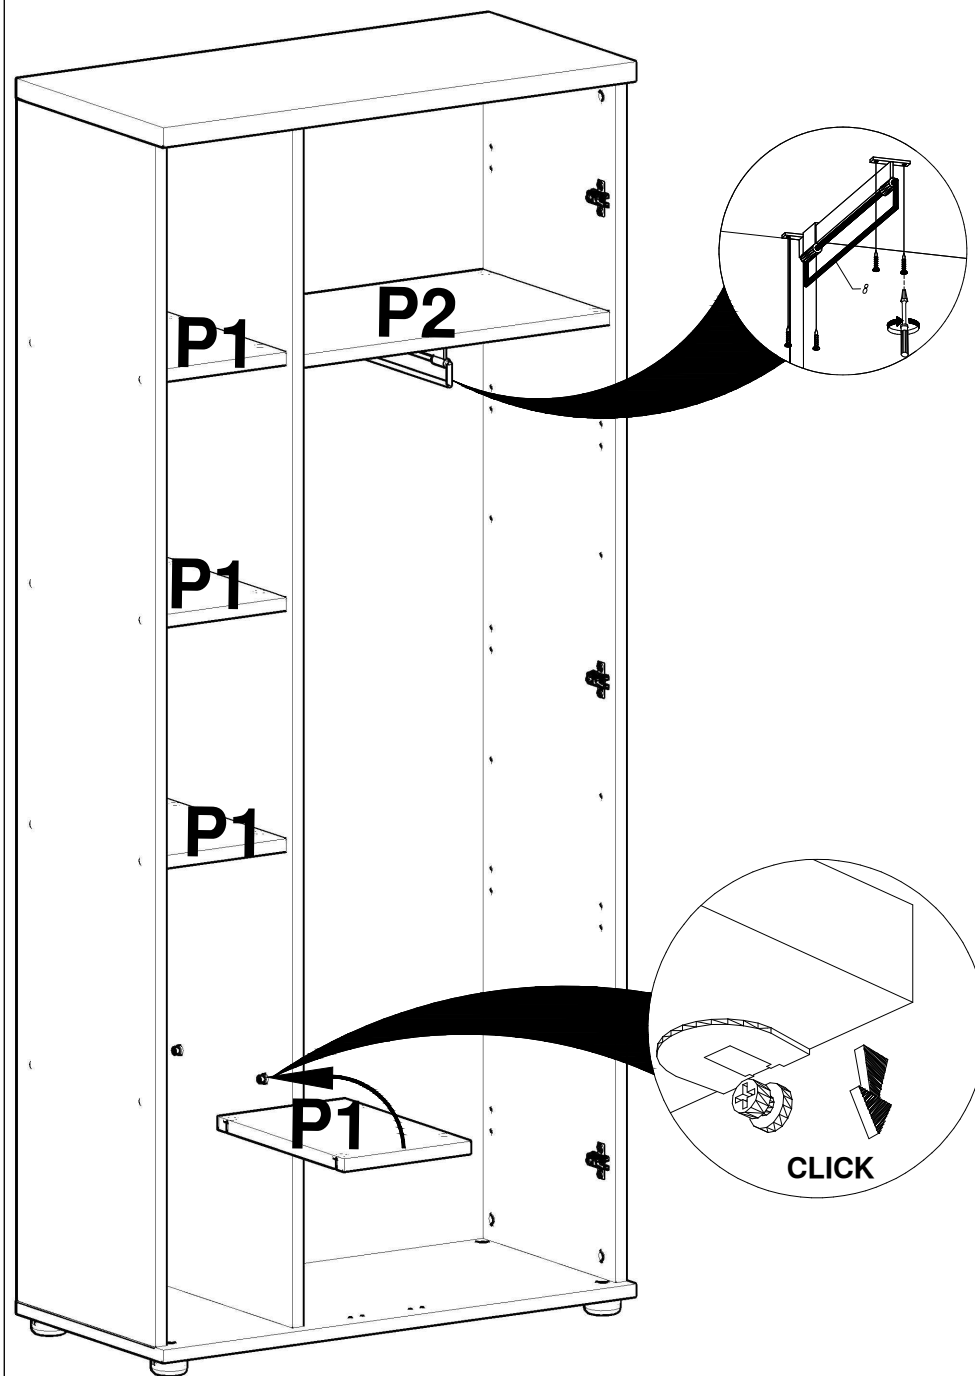


12

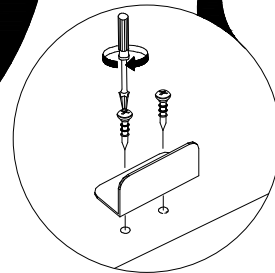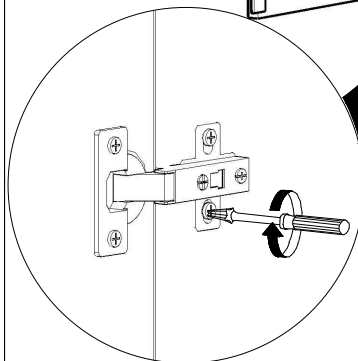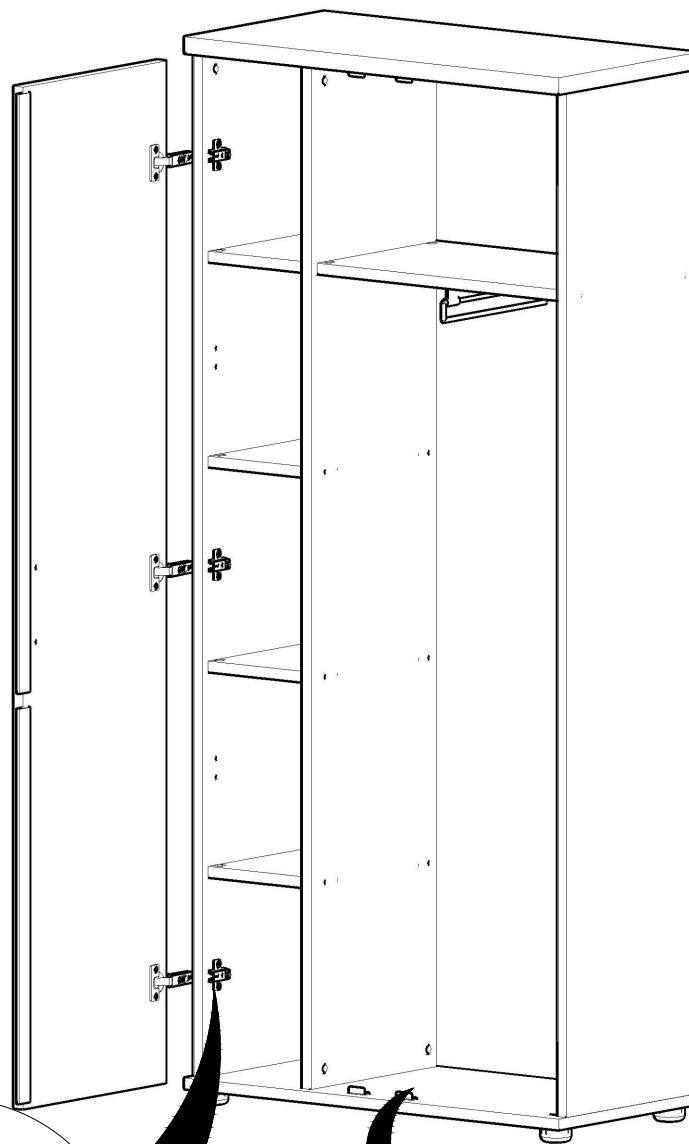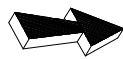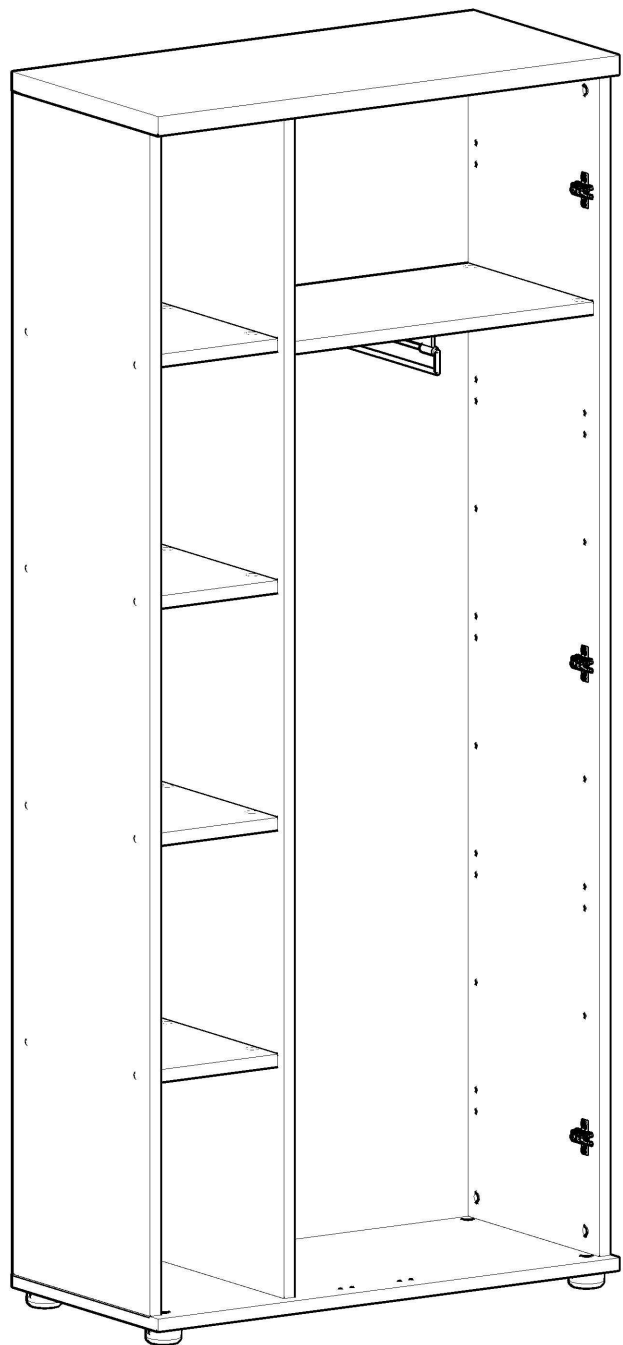

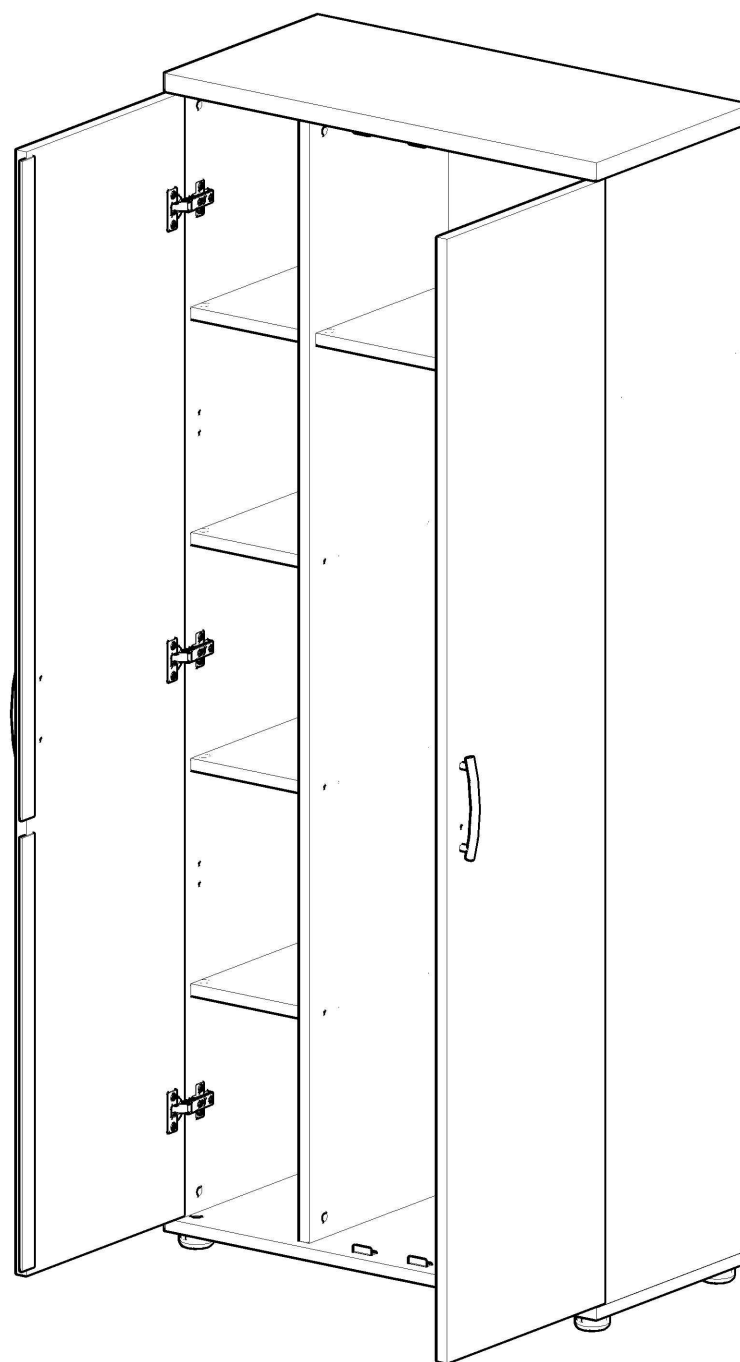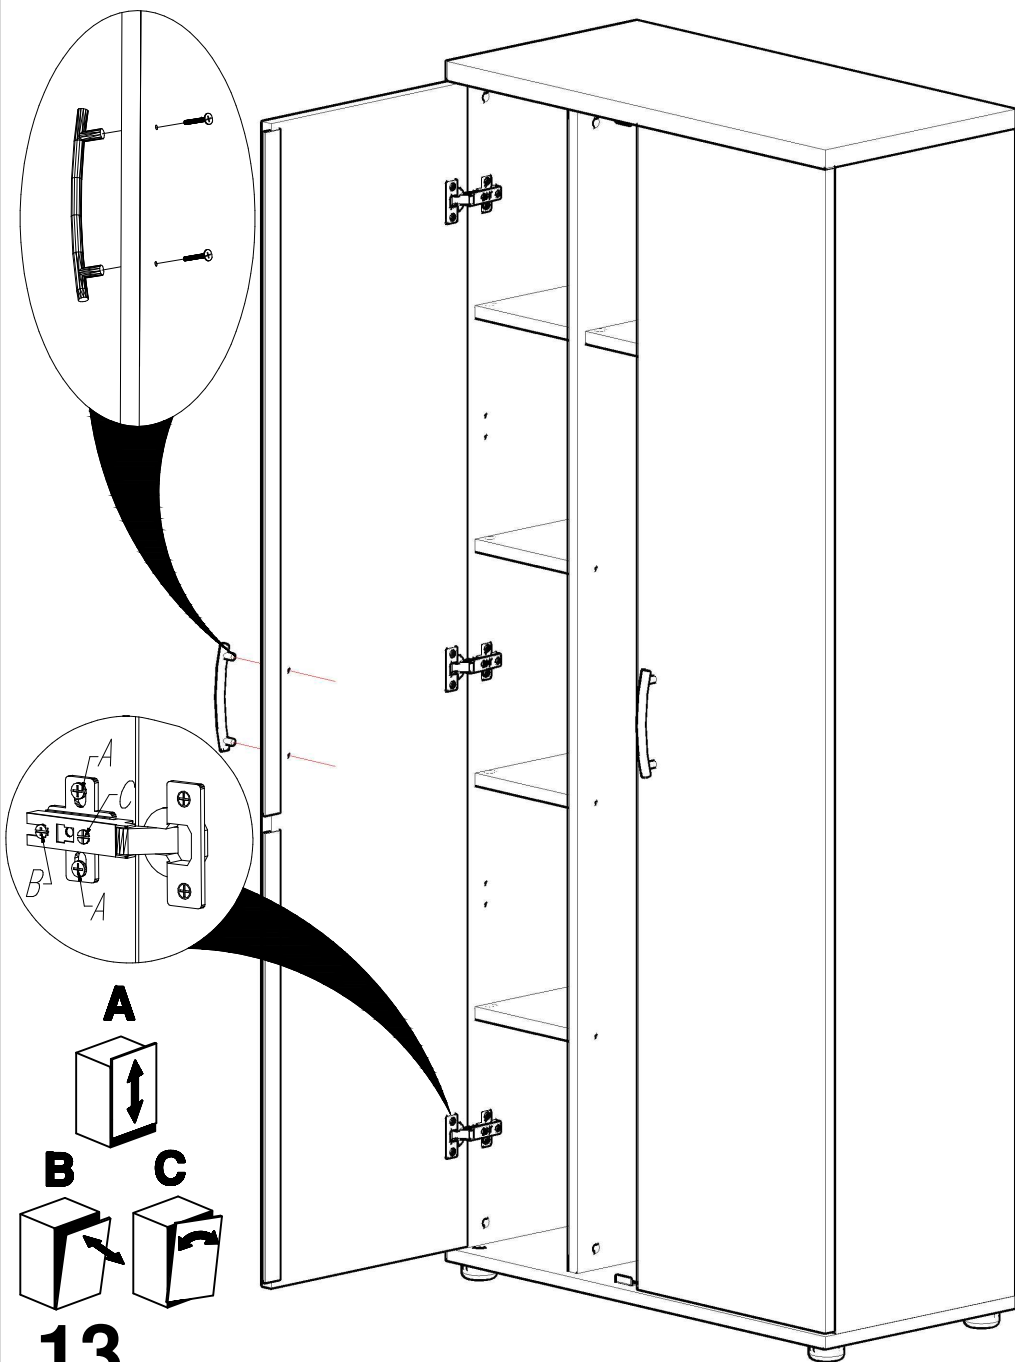


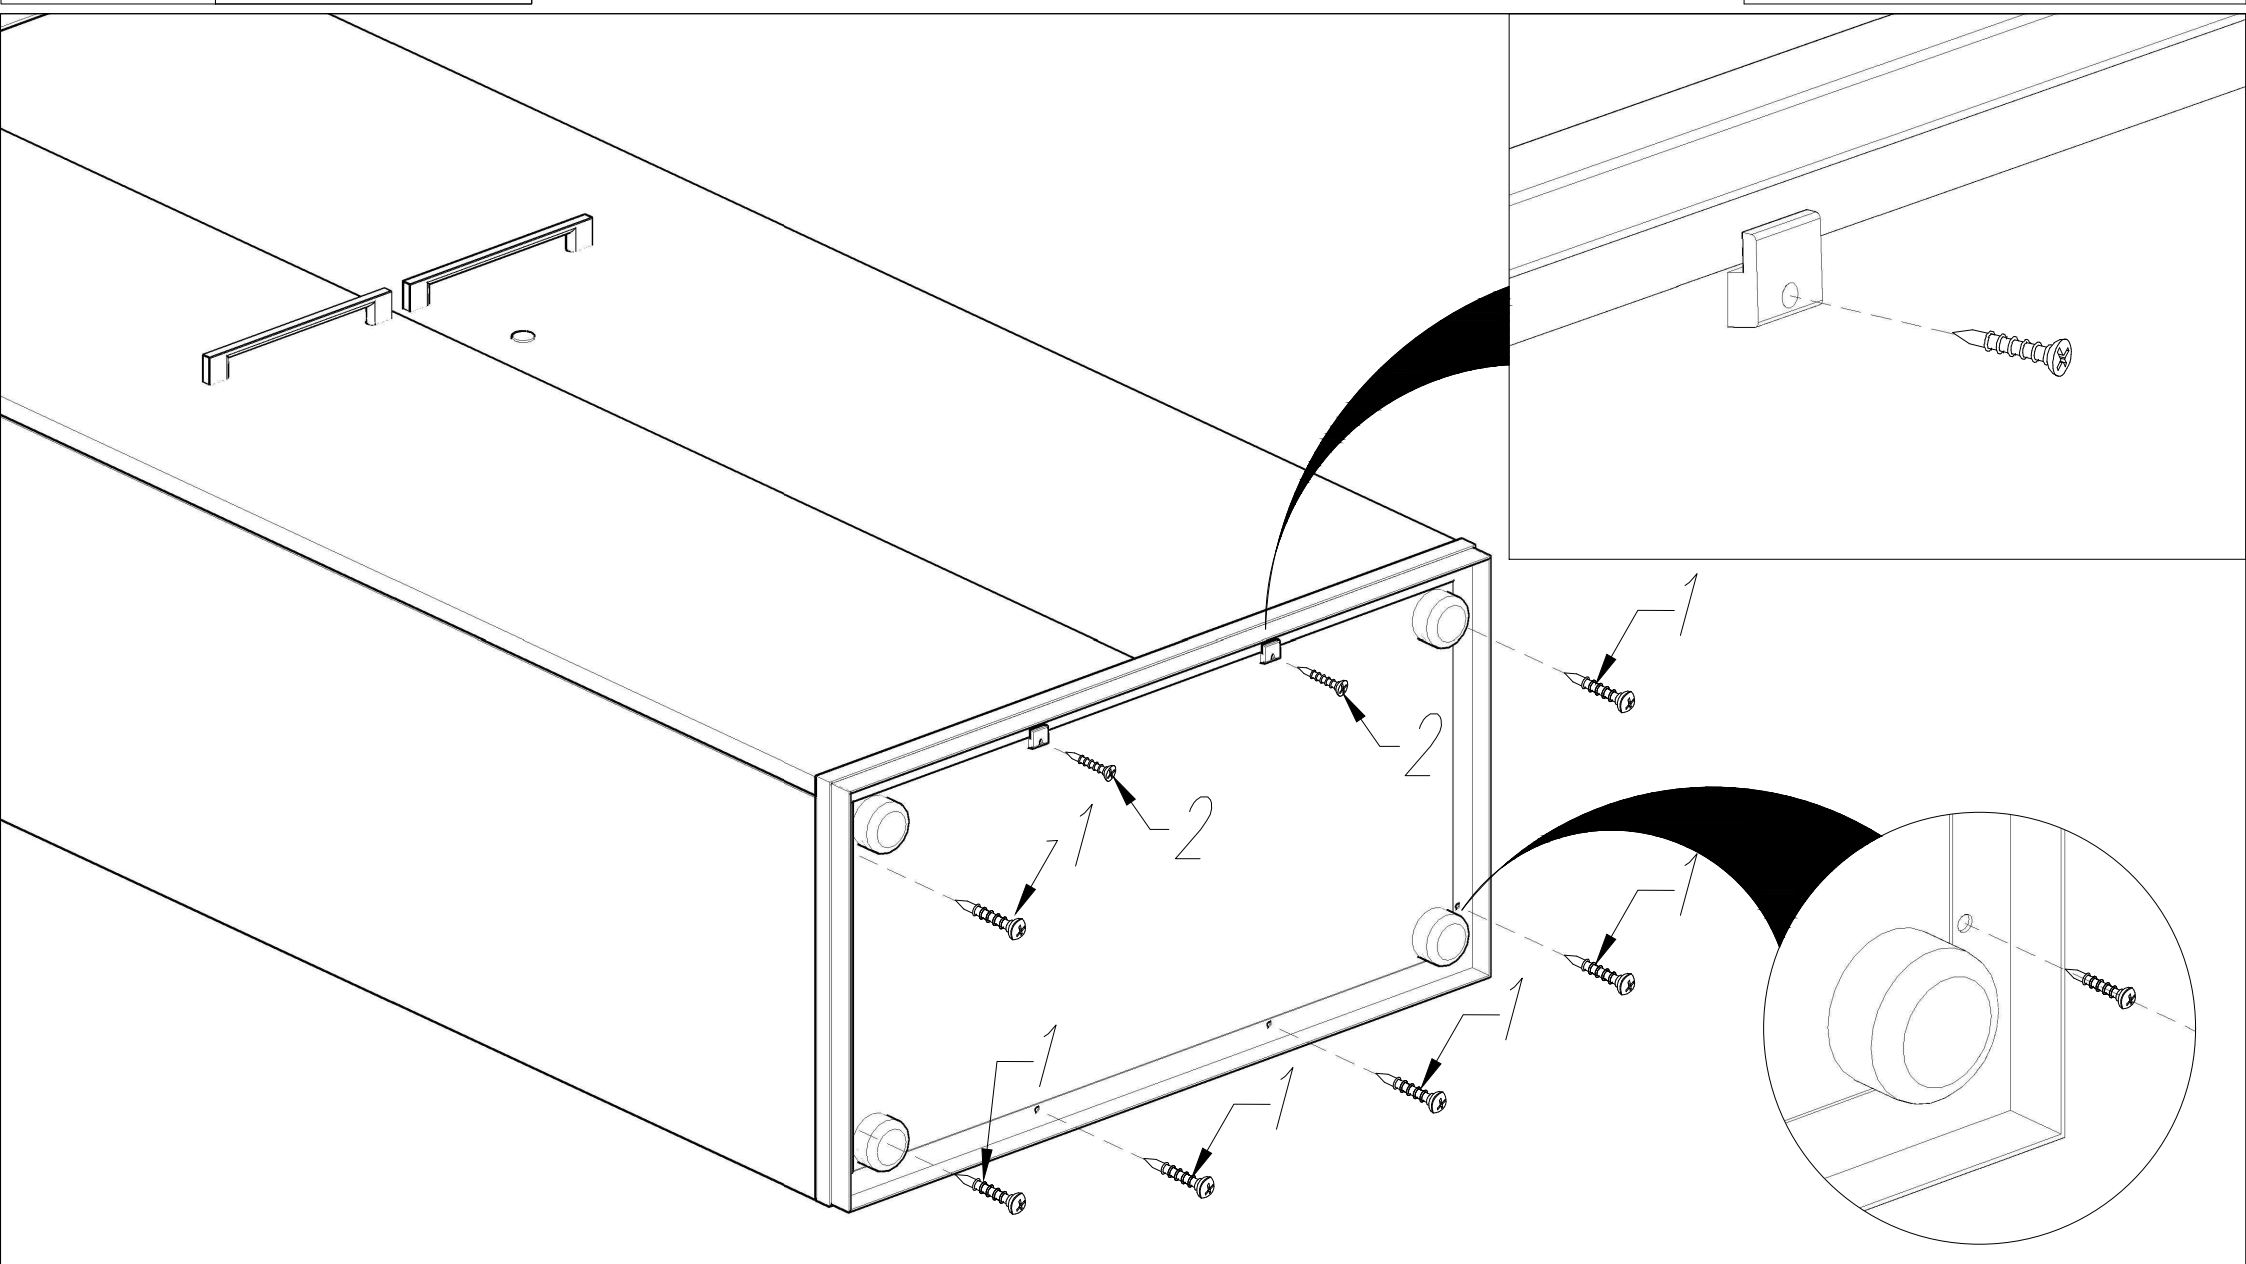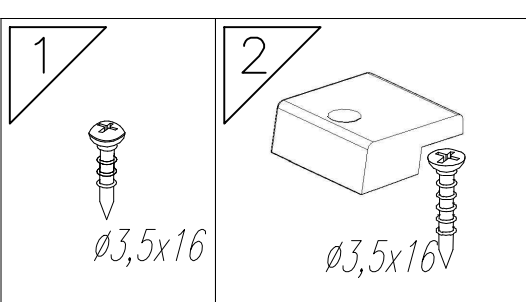



A

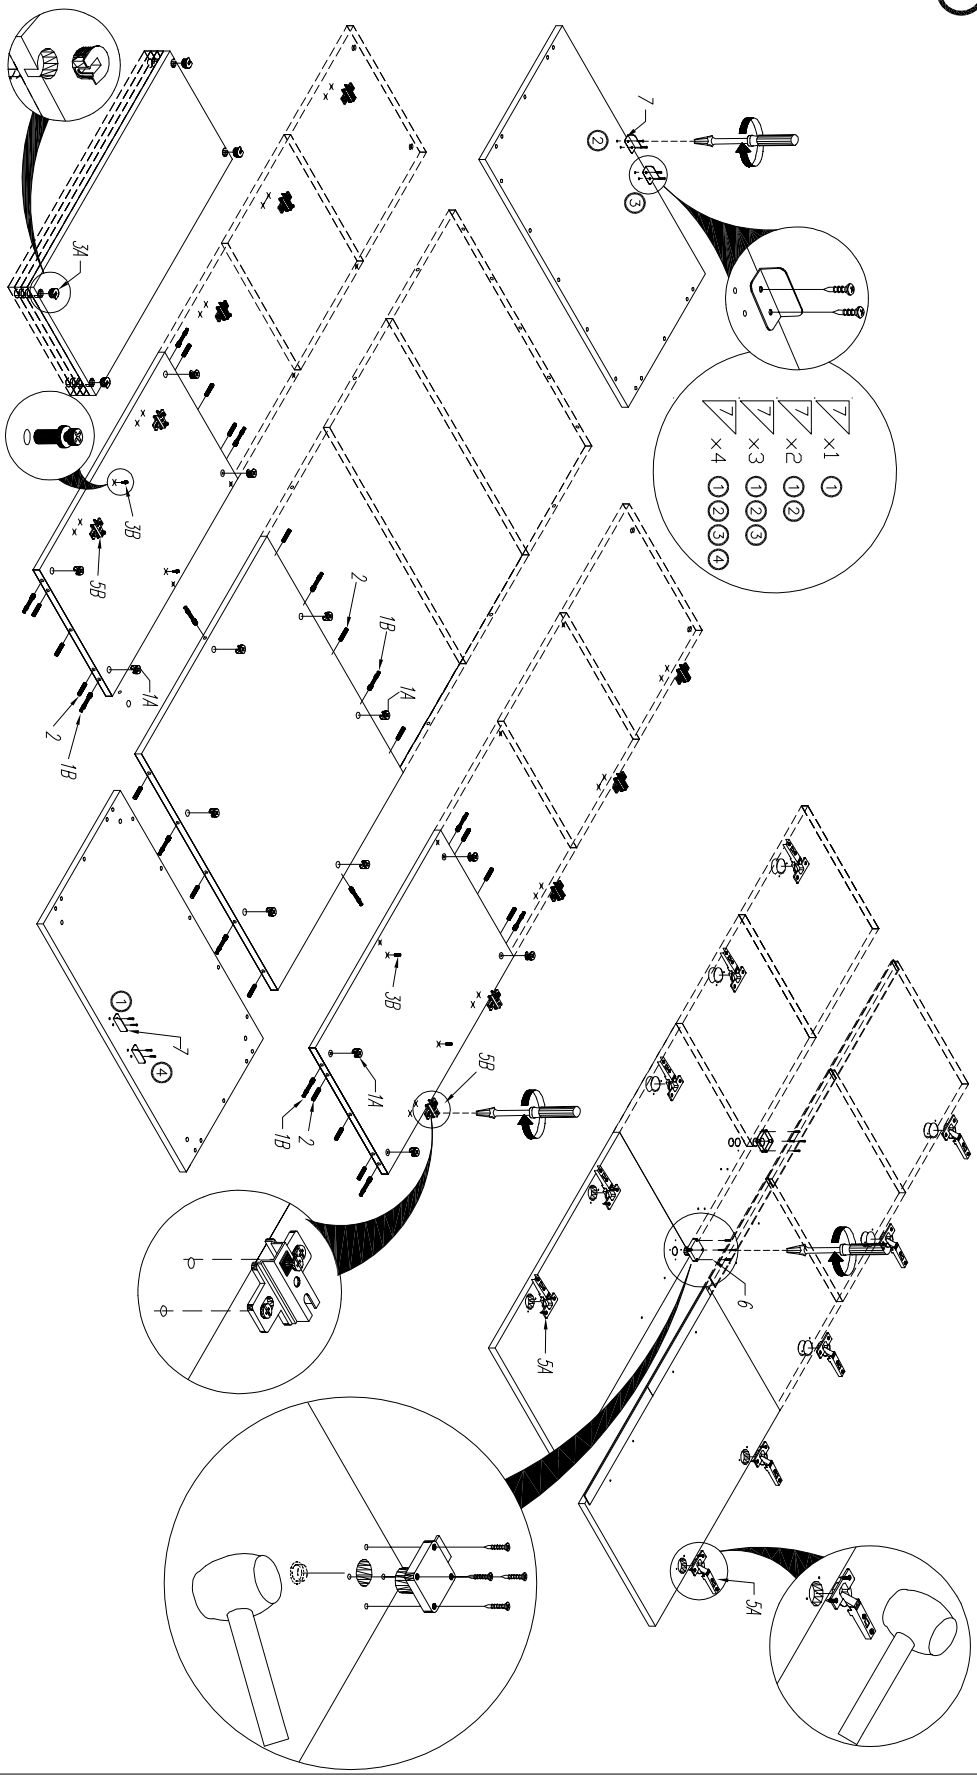

B





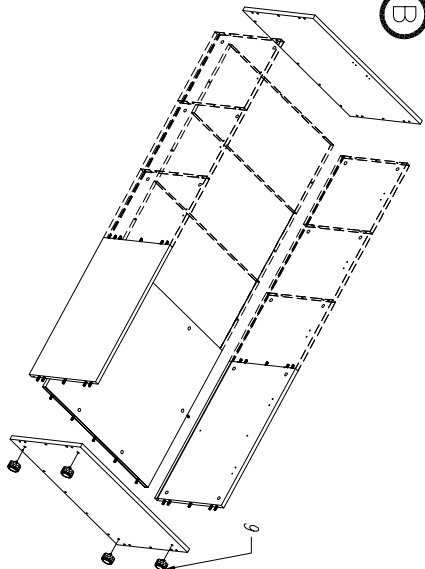


C

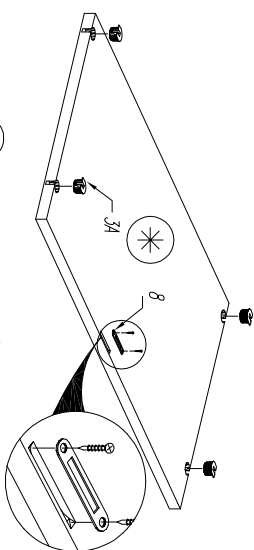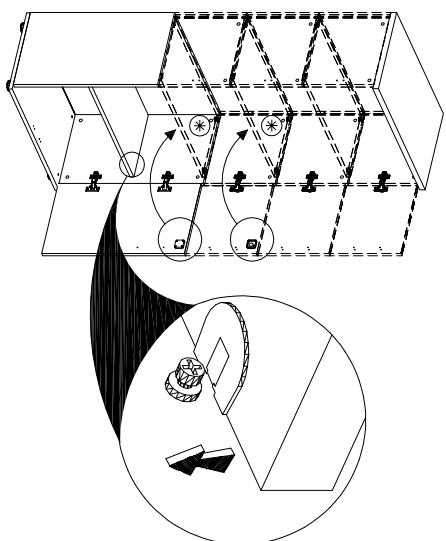


(*) – ZASTOSOWAĆ TEN ELEMENT
NEED TO USE THIS ELEMENT
DAS ELEMENT VERWENDEN



KOLEJNOŚĆ MONTAŻU
MIMOSRODOW I KOLKOW.
THE FITTINGS SEQUENCE OF THE
CAMS AND DOWELS.
DIE MONTAGEABFOLGE VON
EXZENTERN UND DÜBELN.

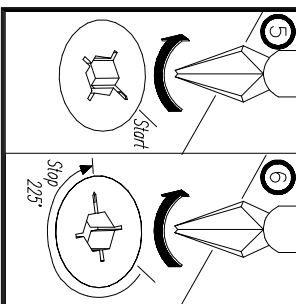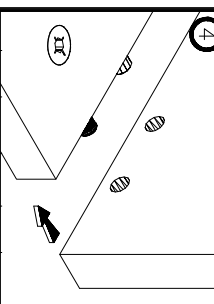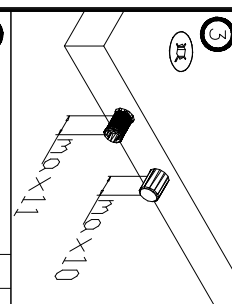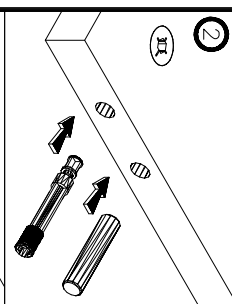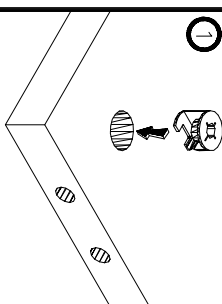


D

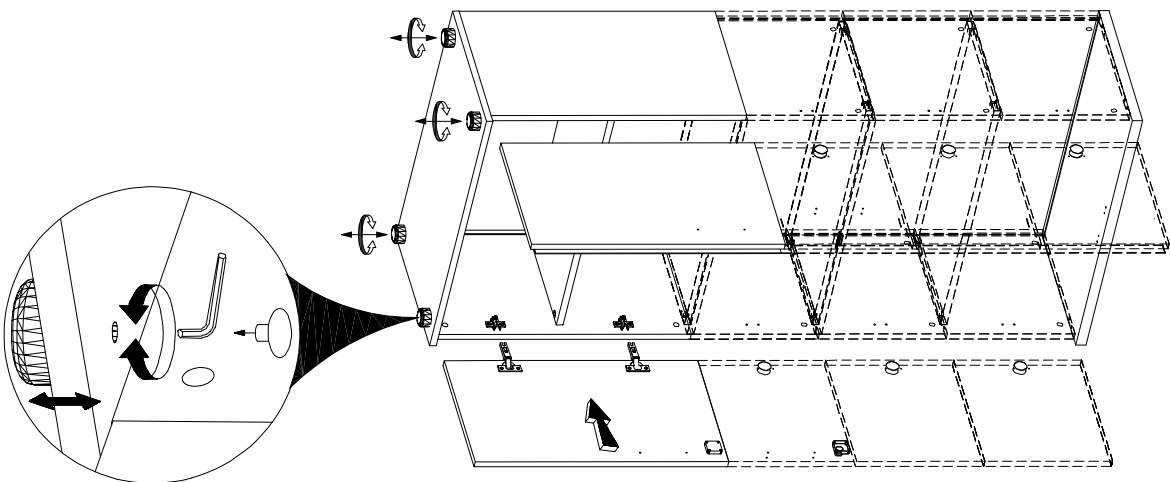

E

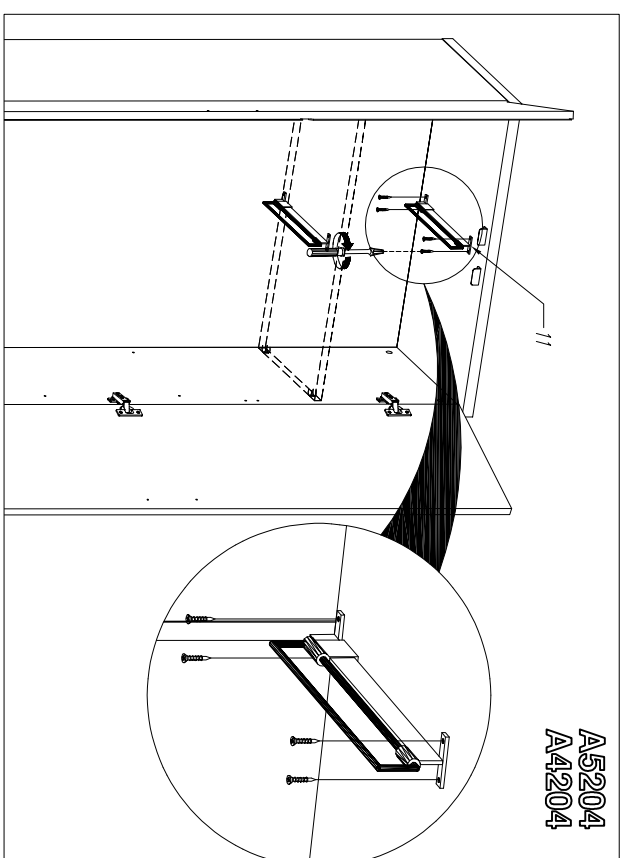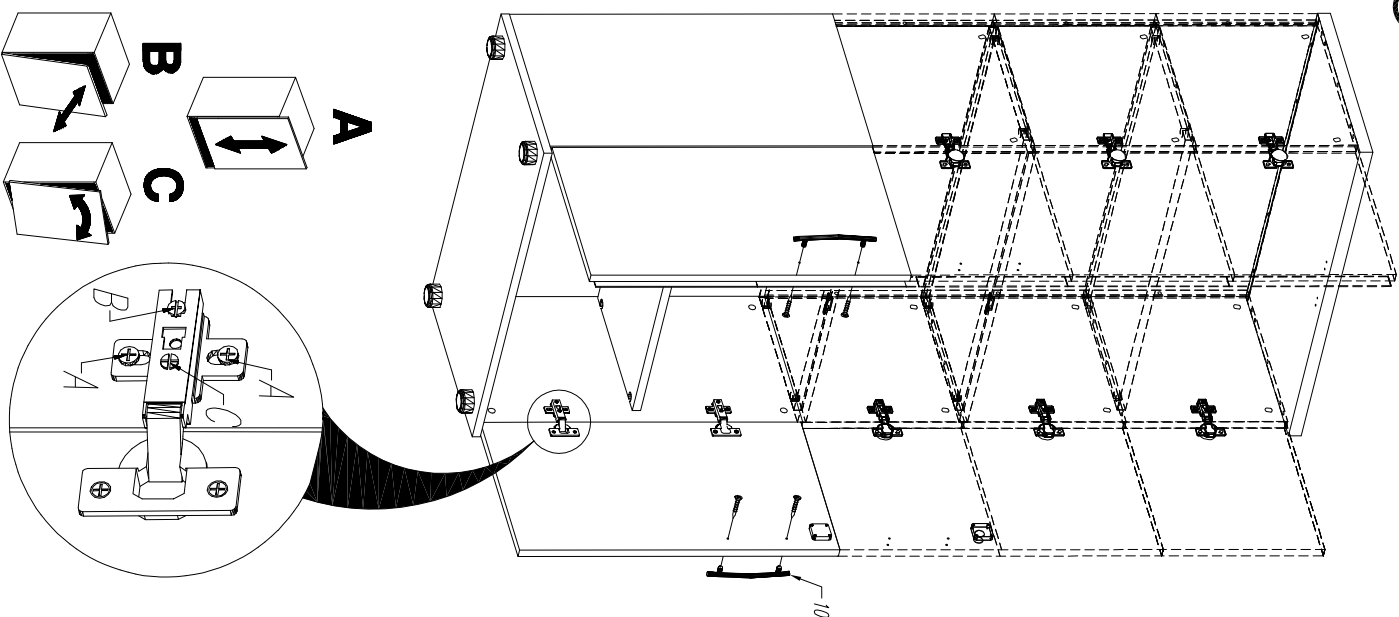

A5204
A4204

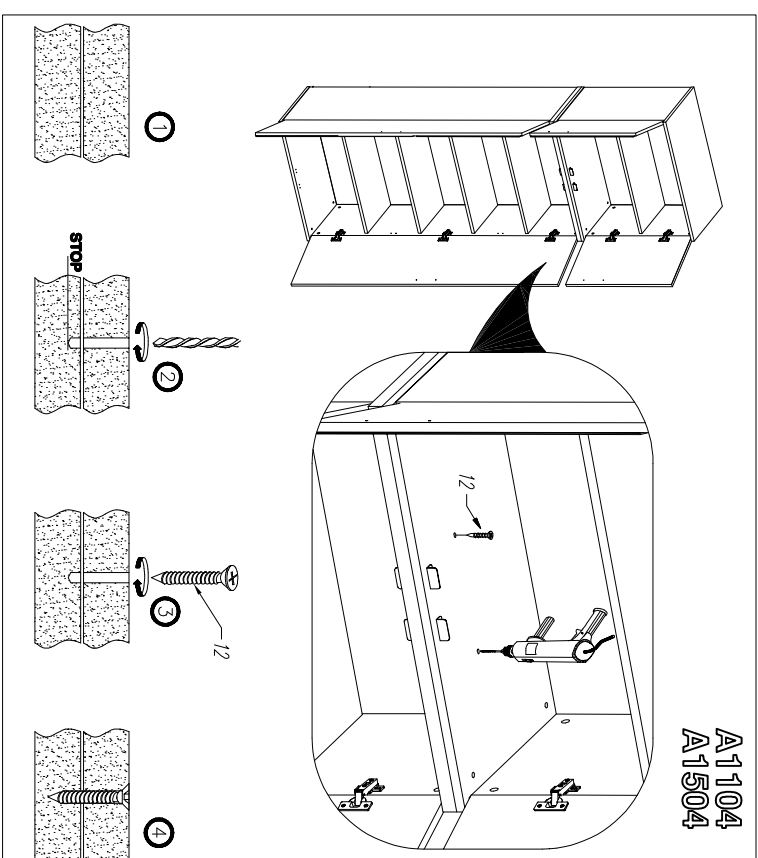

A1104
A1504

