


.mdd

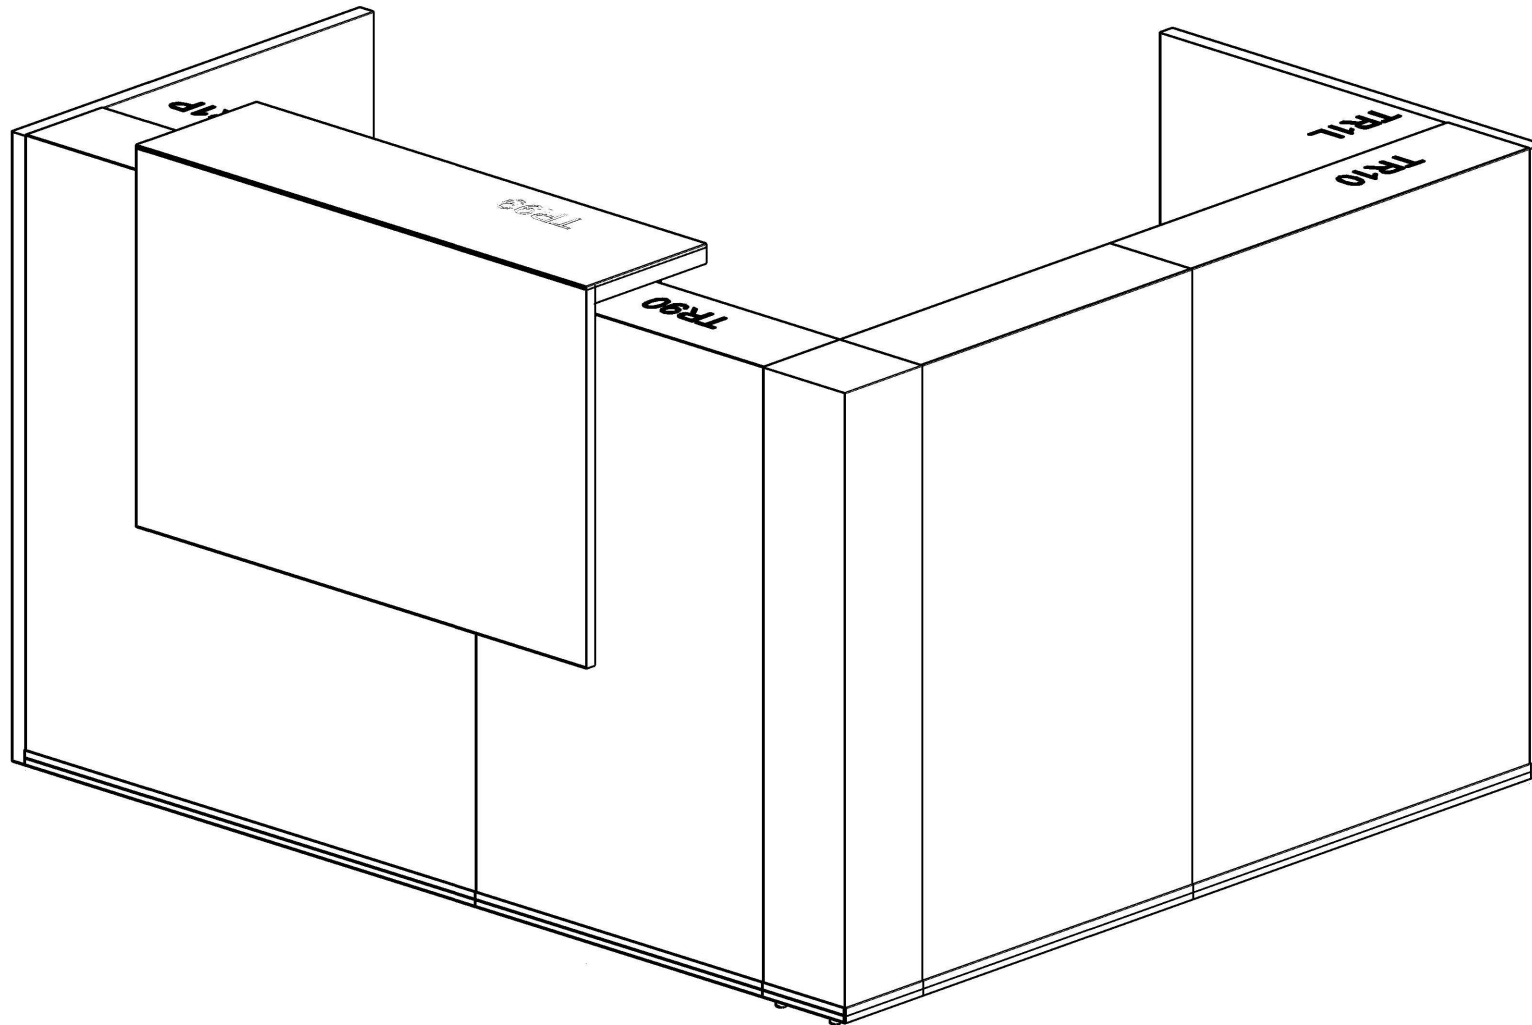

TRA26

1 	2 	3 	4 	5 	6 	7
--------------	--------------	--------------	--------------	--------------	--------------	--------------

KOLEJNOŚĆ MONTAŻU
MIMOŚRODÓW.

THE FITTINGS SEQUENCE OF THE
CAMS.

DIE MONTAGEABFOLGE VON
EXZENTERN.


1

2

3





4


5

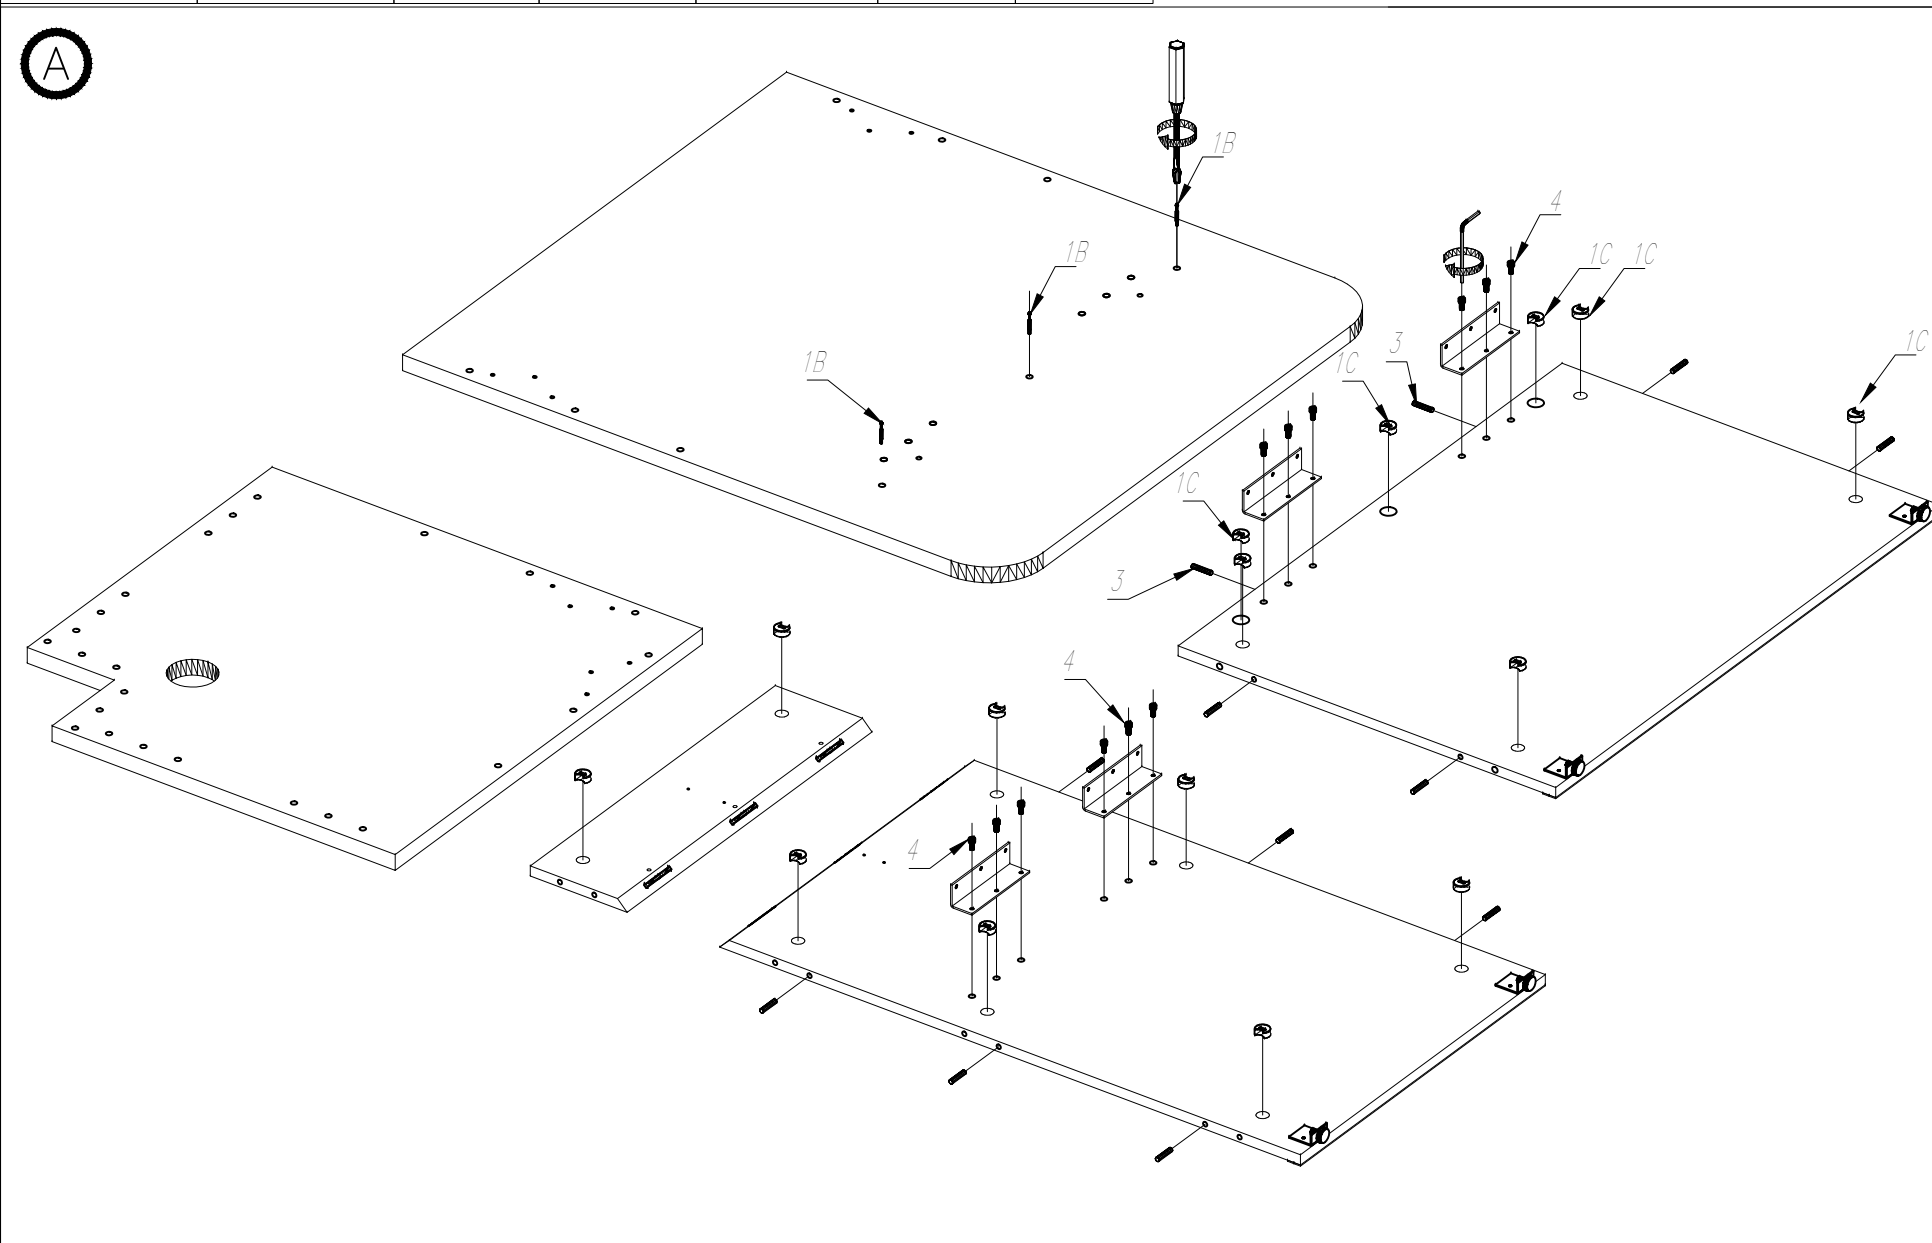





E

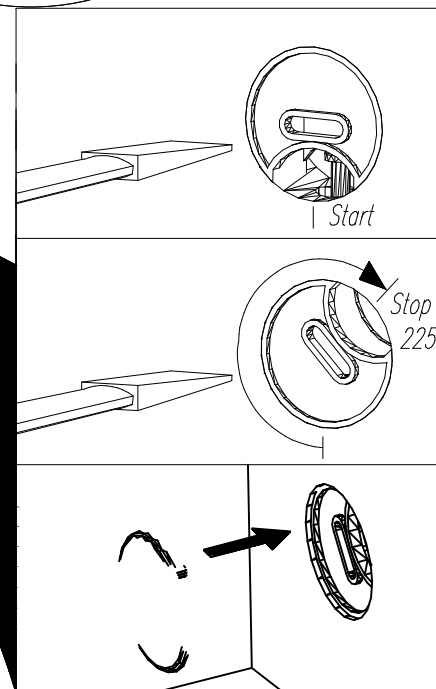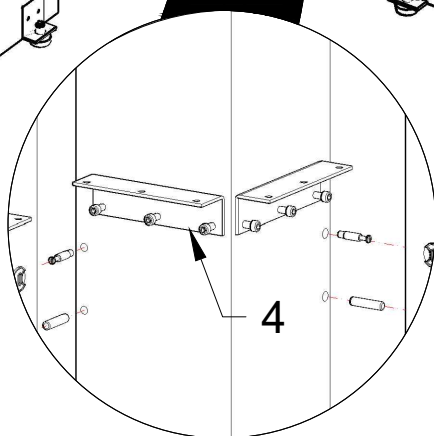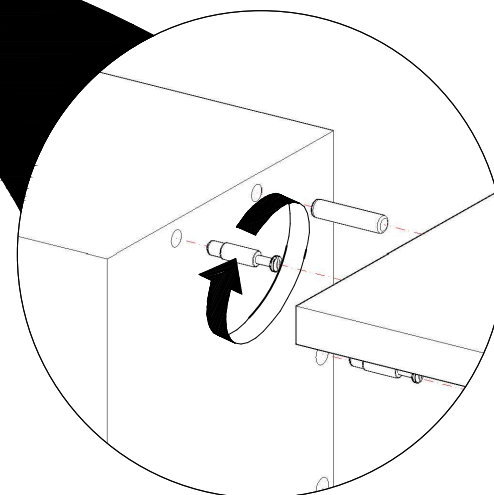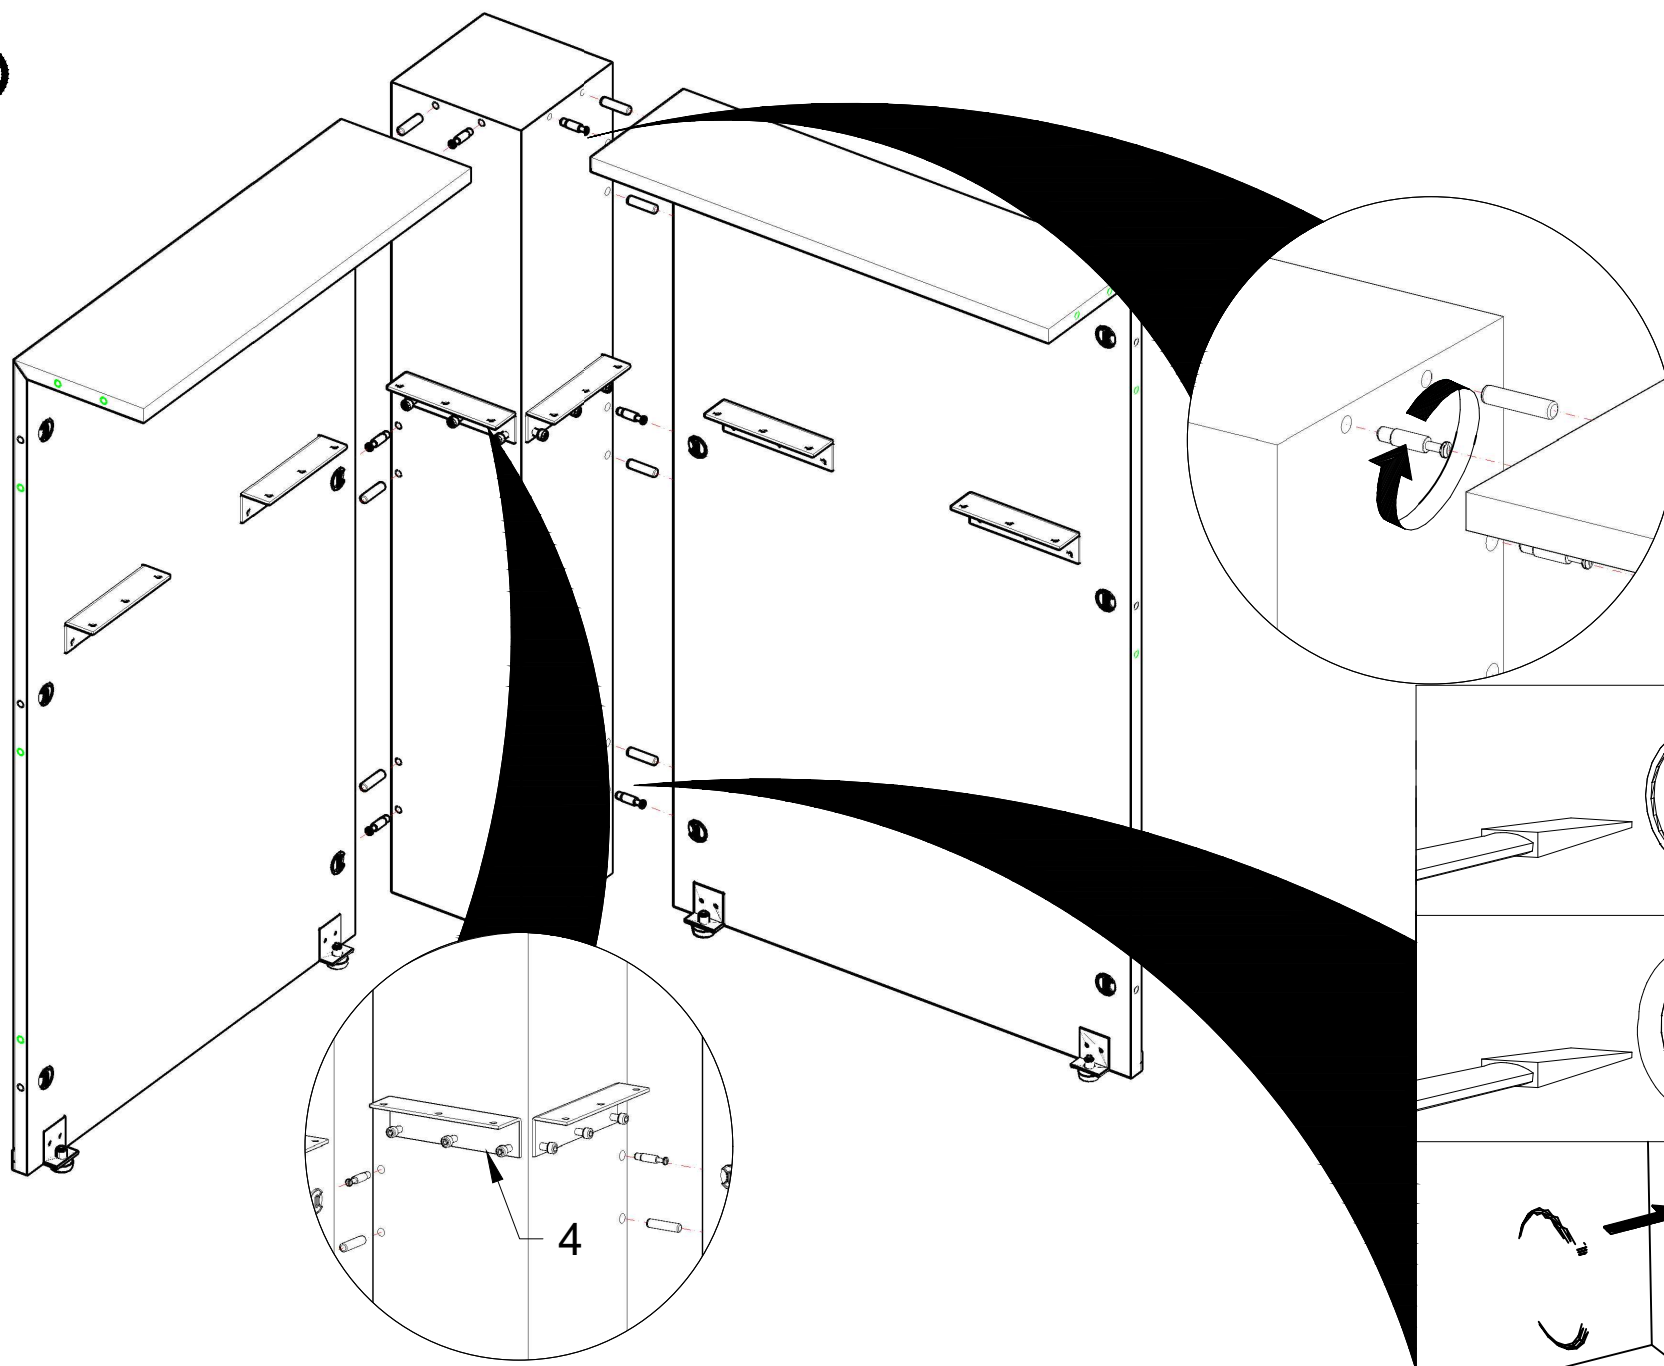


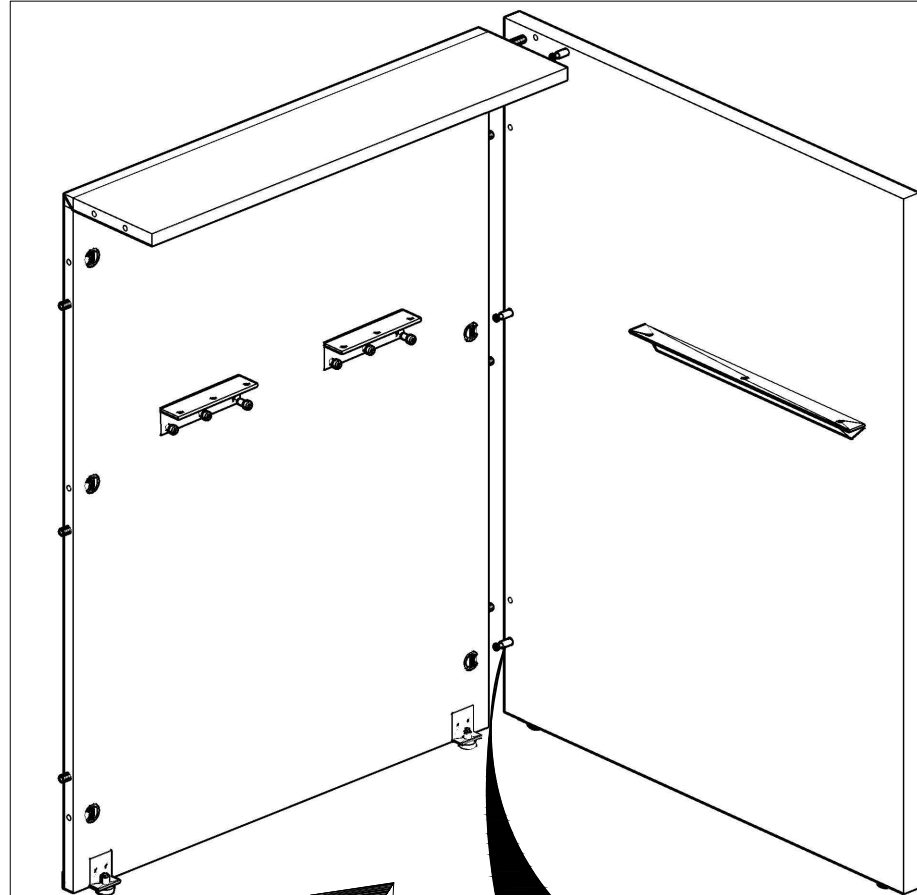


- KOLGOROŠE MONTAŽNI
ANORDNUNG.
THE FITTING SEQUENCE OF THE
CHAS.
DIE MONTAGEFOLGE VON
EXZENTRIK.
1. Insert the cam bolt into the side panel.
 2. Tighten the cam lock with the provided key.
 3. Insert the cam bolt into the back panel.
 4. Tighten the cam lock with the provided key.
 5. Insert the cam bolt into the side panel.
 6. Tighten the cam lock with the provided key.
 7. Insert the cam bolt into the back panel.
 8. Tighten the cam lock with the provided key.
 9. Insert the cam bolt into the side panel.
 10. Tighten the cam lock with the provided key.

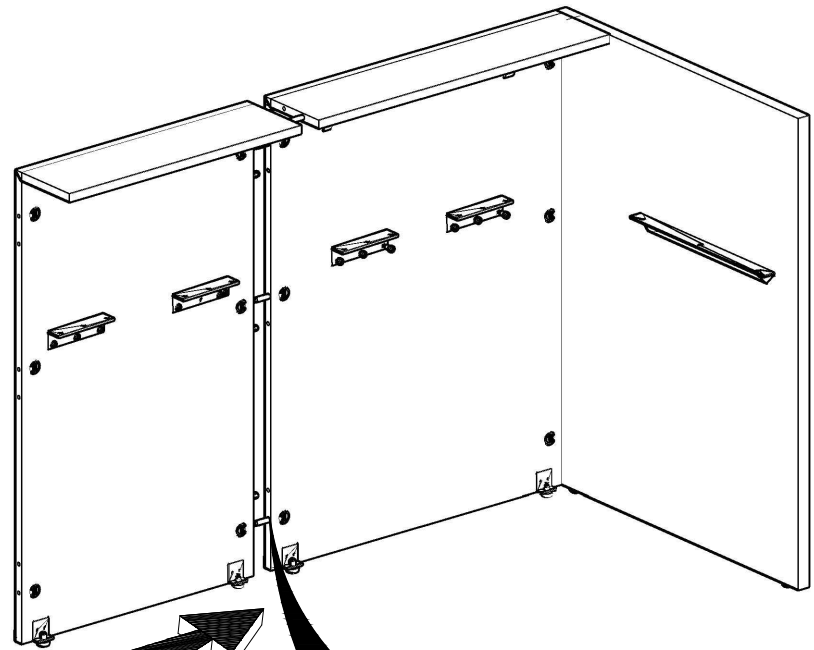
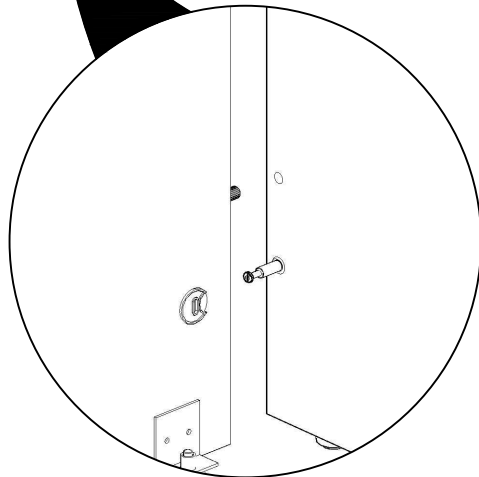


- KOLGOROŠE MONTAŽNI
ANORDNUNG.
THE FITTING SEQUENCE OF THE
CHAS.
DIE MONTAGEFOLGE VON
EXZENTRIK.
1. Insert the cam bolt into the side panel.
 2. Tighten the cam lock with the provided key.
 3. Insert the cam bolt into the back panel.
 4. Tighten the cam lock with the provided key.
 5. Insert the cam bolt into the side panel.
 6. Tighten the cam lock with the provided key.
 7. Insert the cam bolt into the back panel.
 8. Tighten the cam lock with the provided key.
 9. Insert the cam bolt into the side panel.
 10. Tighten the cam lock with the provided key.


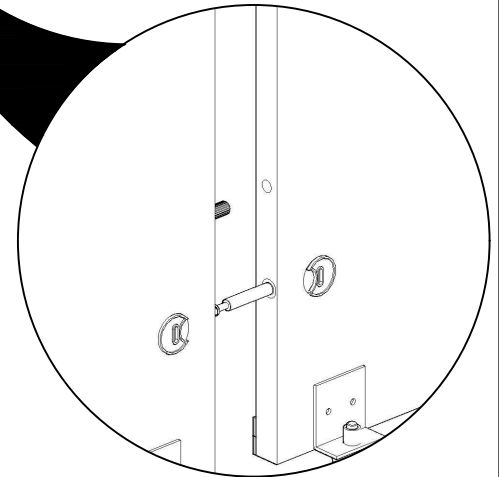






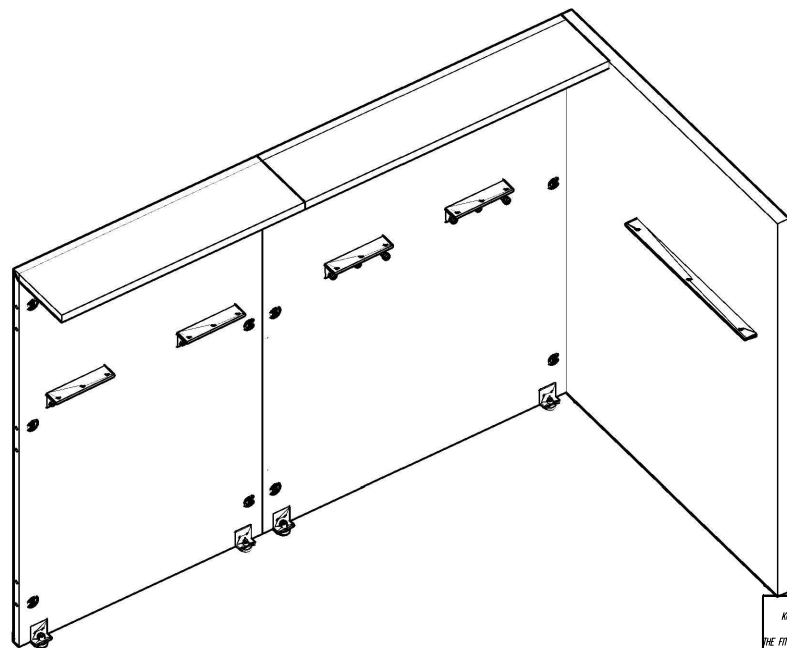




KOLEJNOŚĆ MONTAŻU
MIMOŚRODKIEM.
THE FITTING SEQUENCE OF THE
CABS.
DIE MONTAGEABFOLGE VON
EXZENTERN.

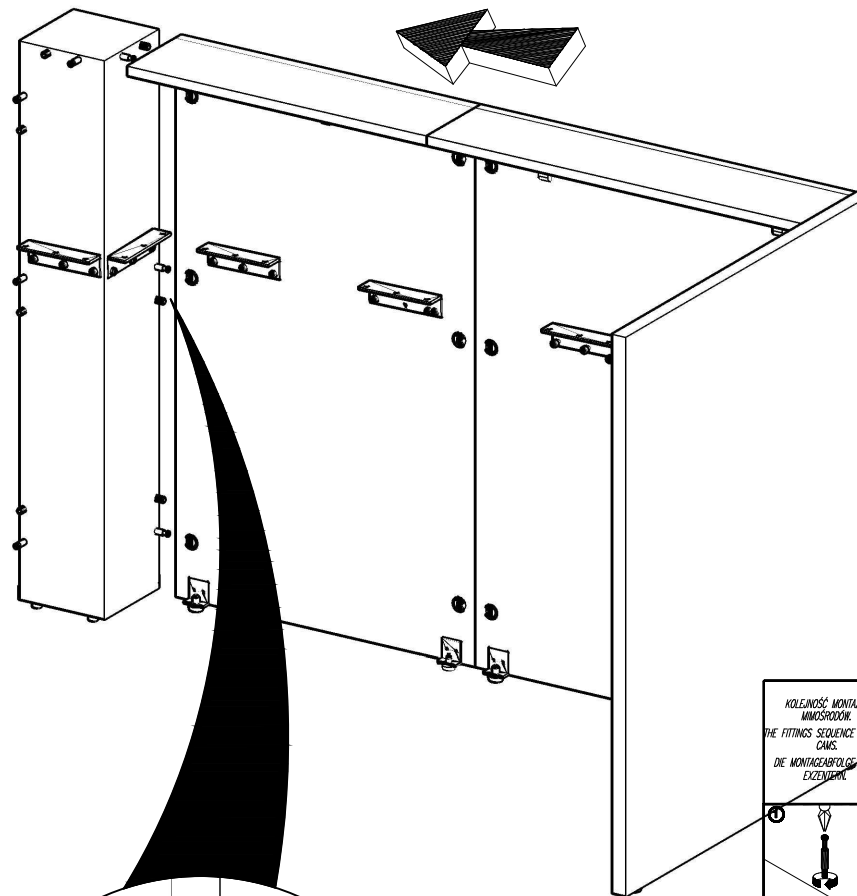



KOLEJNOŚĆ MONTAŻU
MIMOŚRODKIEM.
THE FITTING SEQUENCE OF THE
CABS.
DIE MONTAGEABFOLGE VON
EXZENTERN.

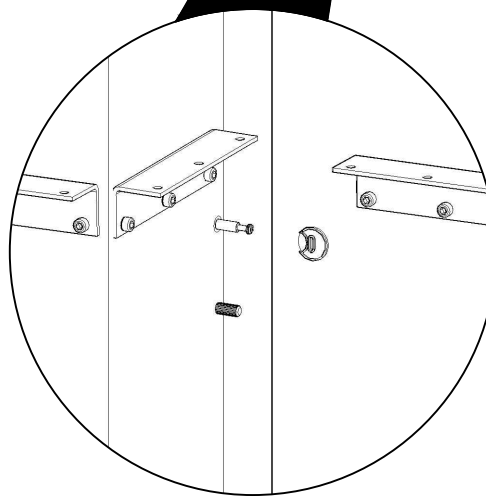

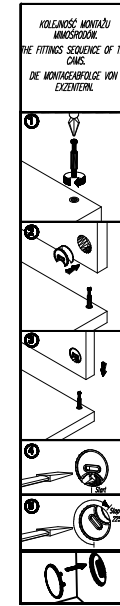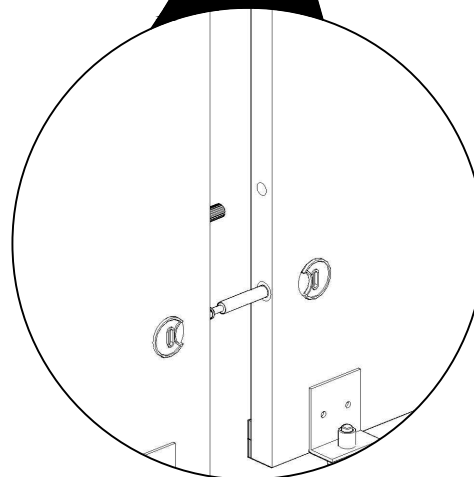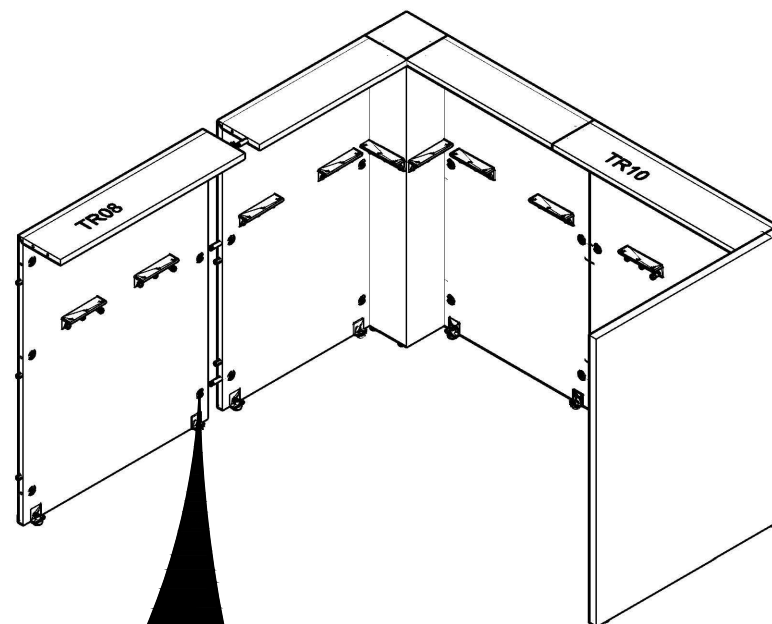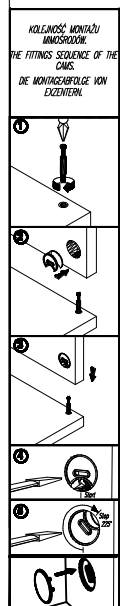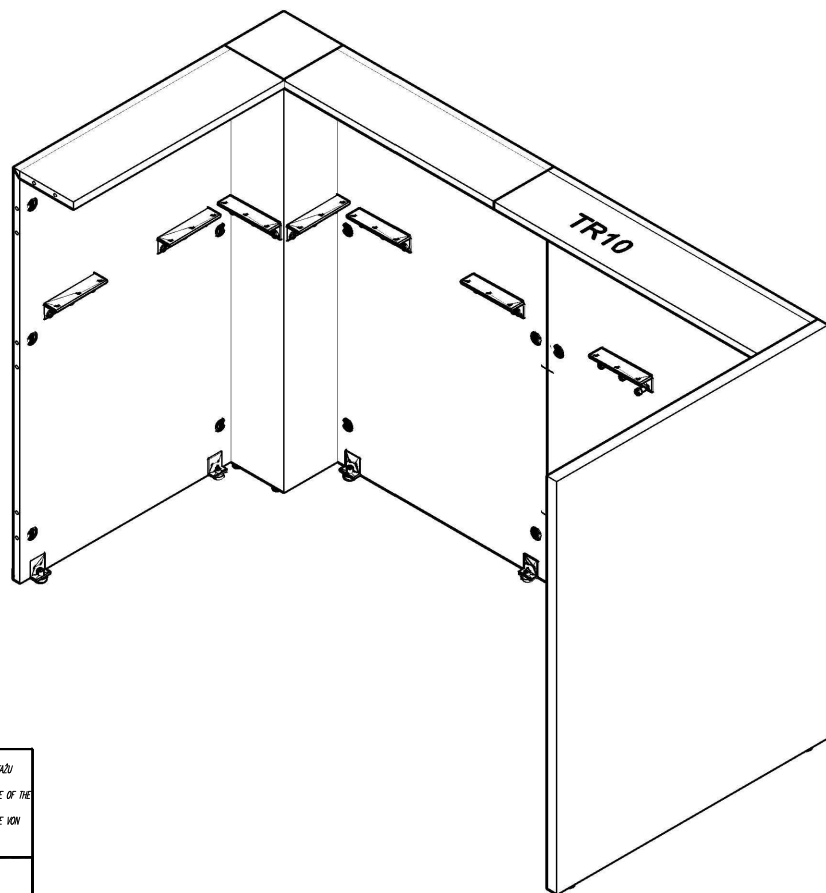

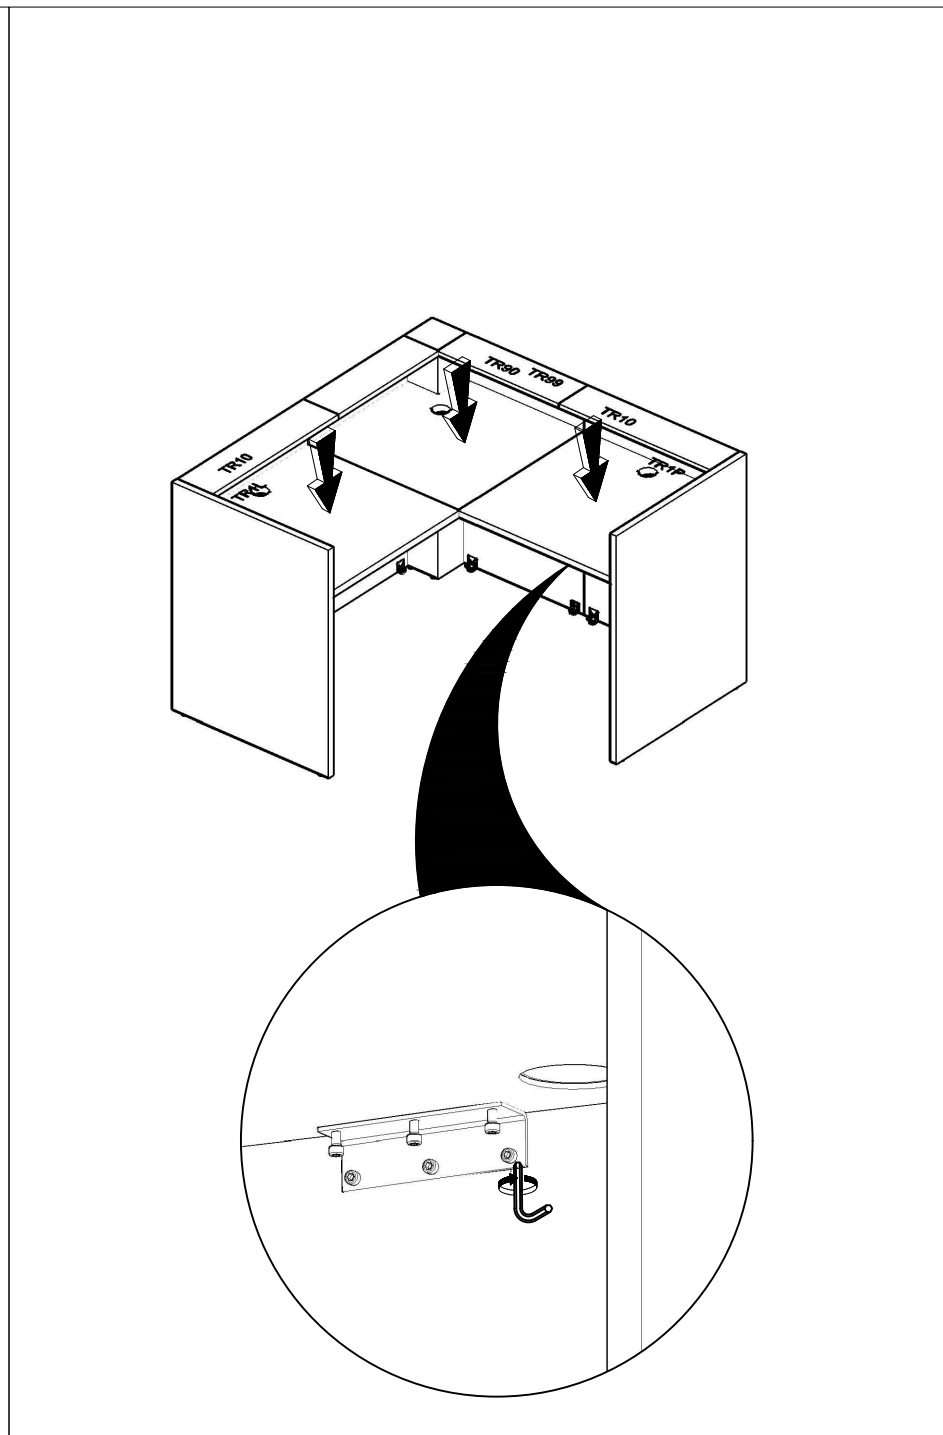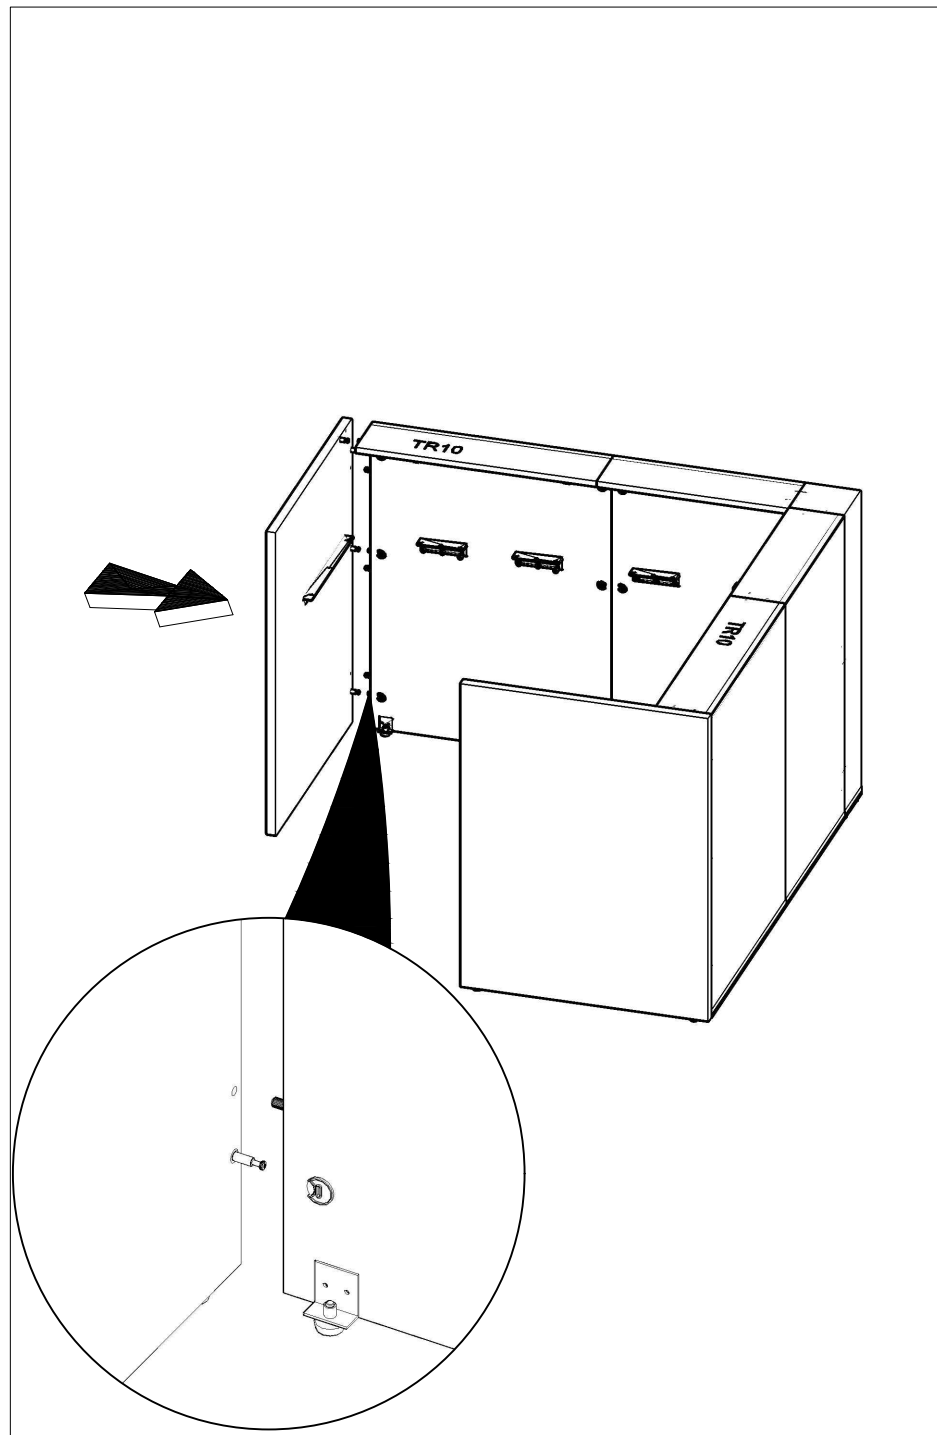

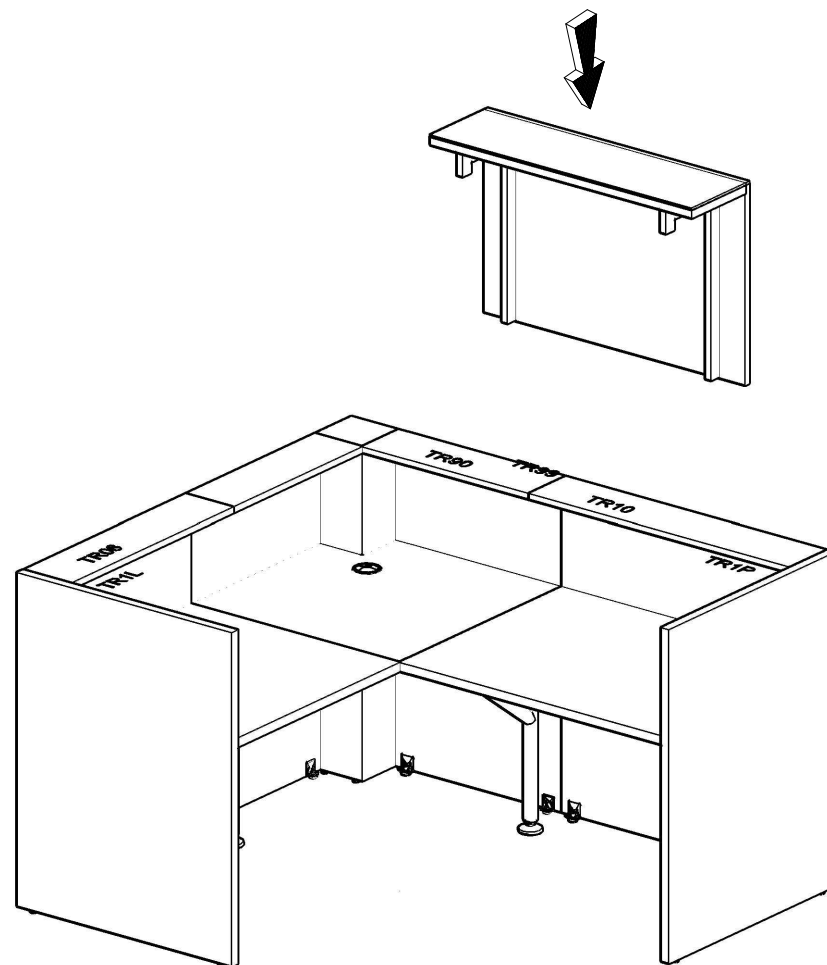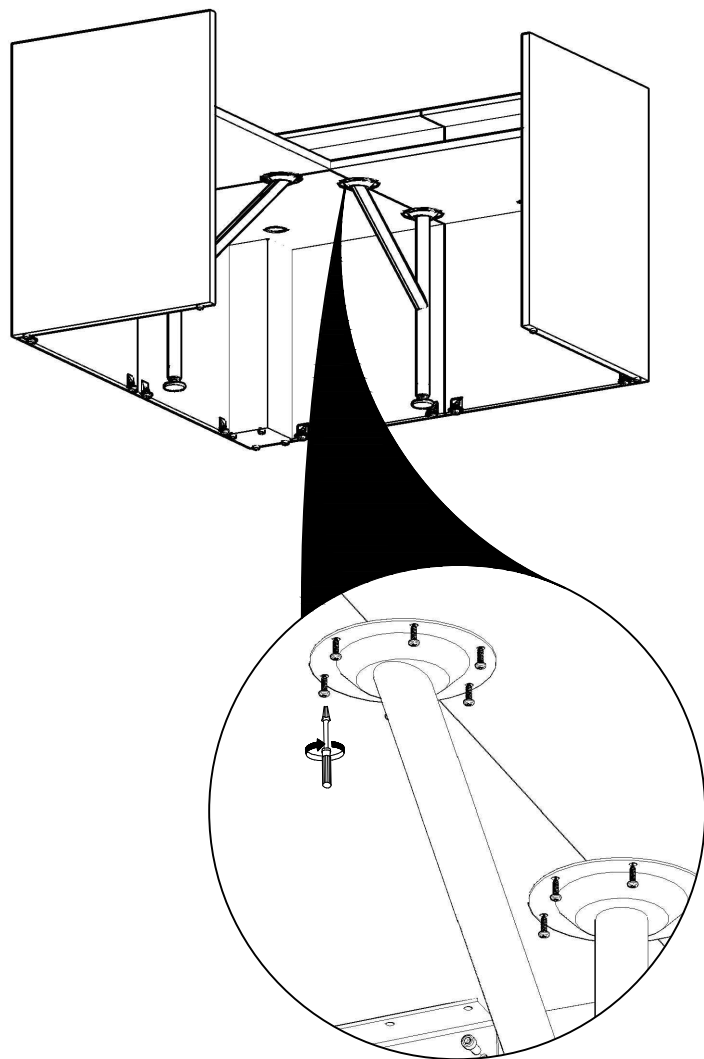

LED INSTALLATION

