



.mdd

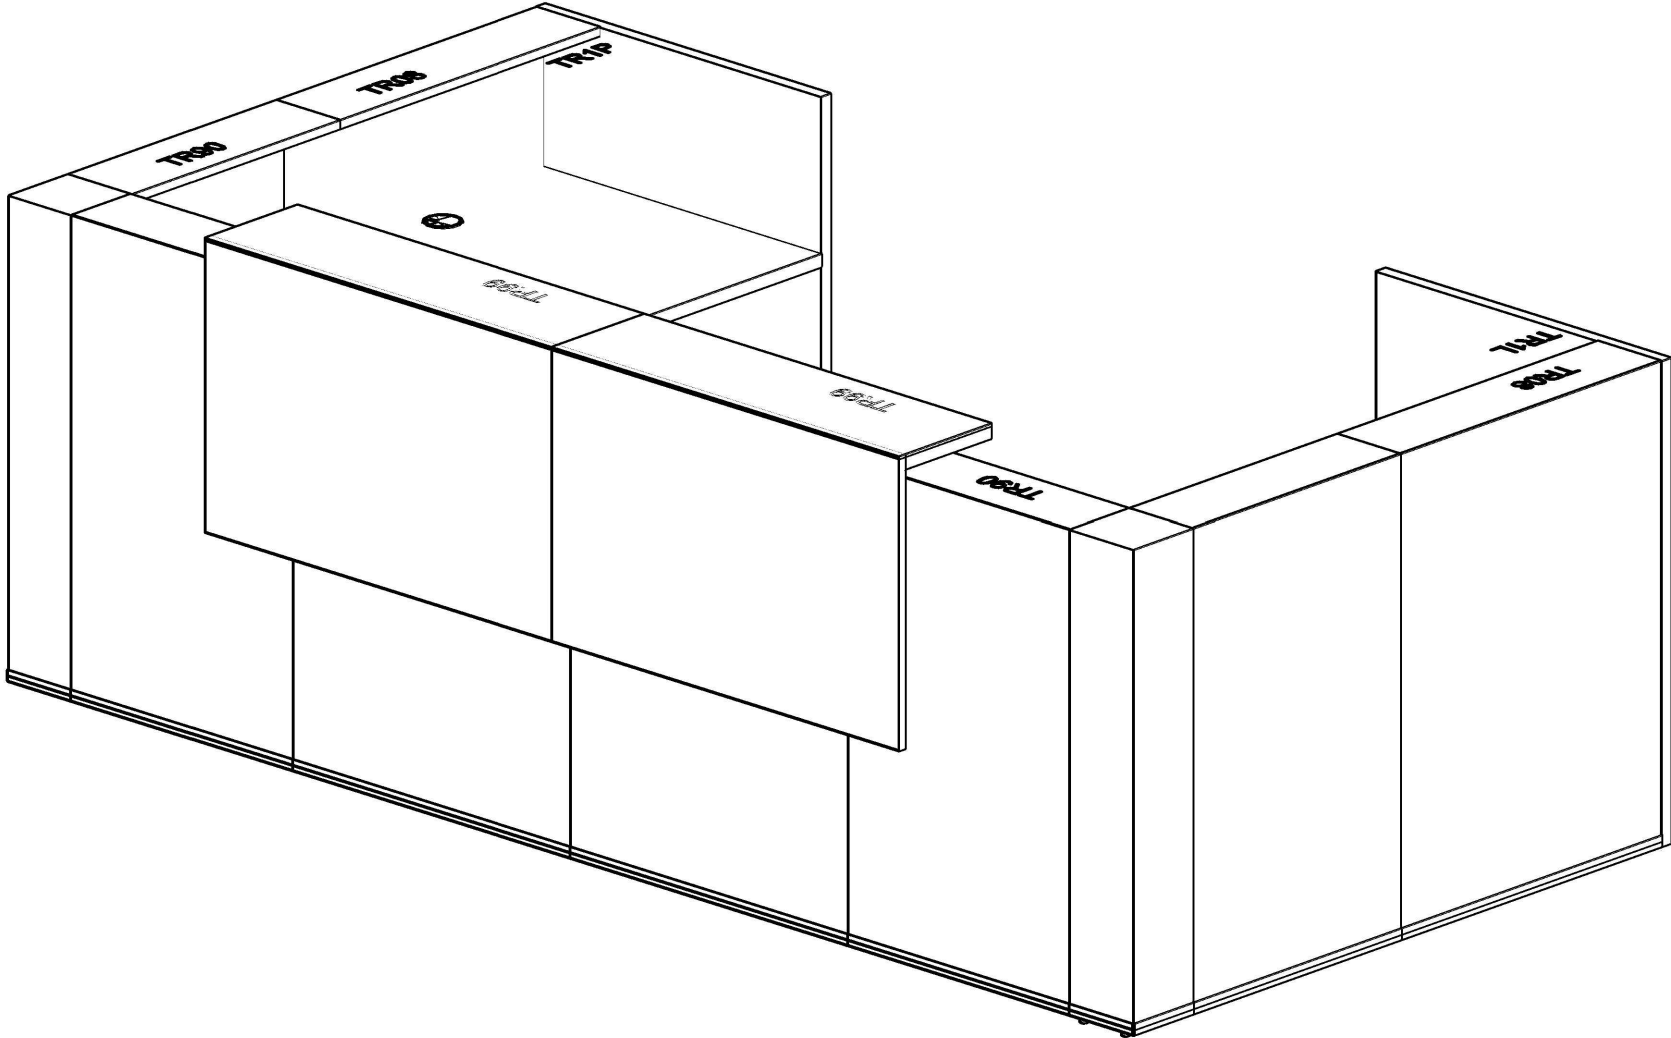

TRA29


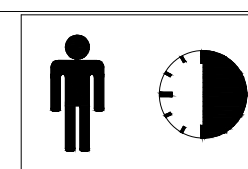


KOLEJNOŚĆ MONTAŻU
MIMOŚRODÓW.

THE FITTINGS SEQUENCE OF THE
CAMs.




DIE MONTAGEABFOLGE VON
EXZENTERN.

A

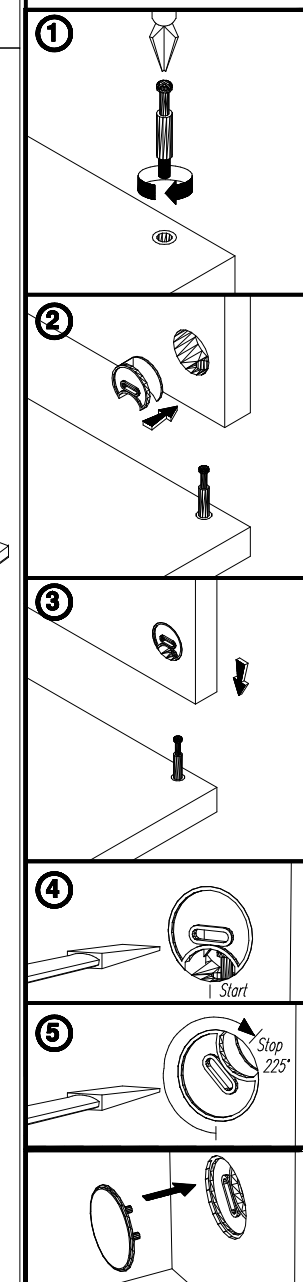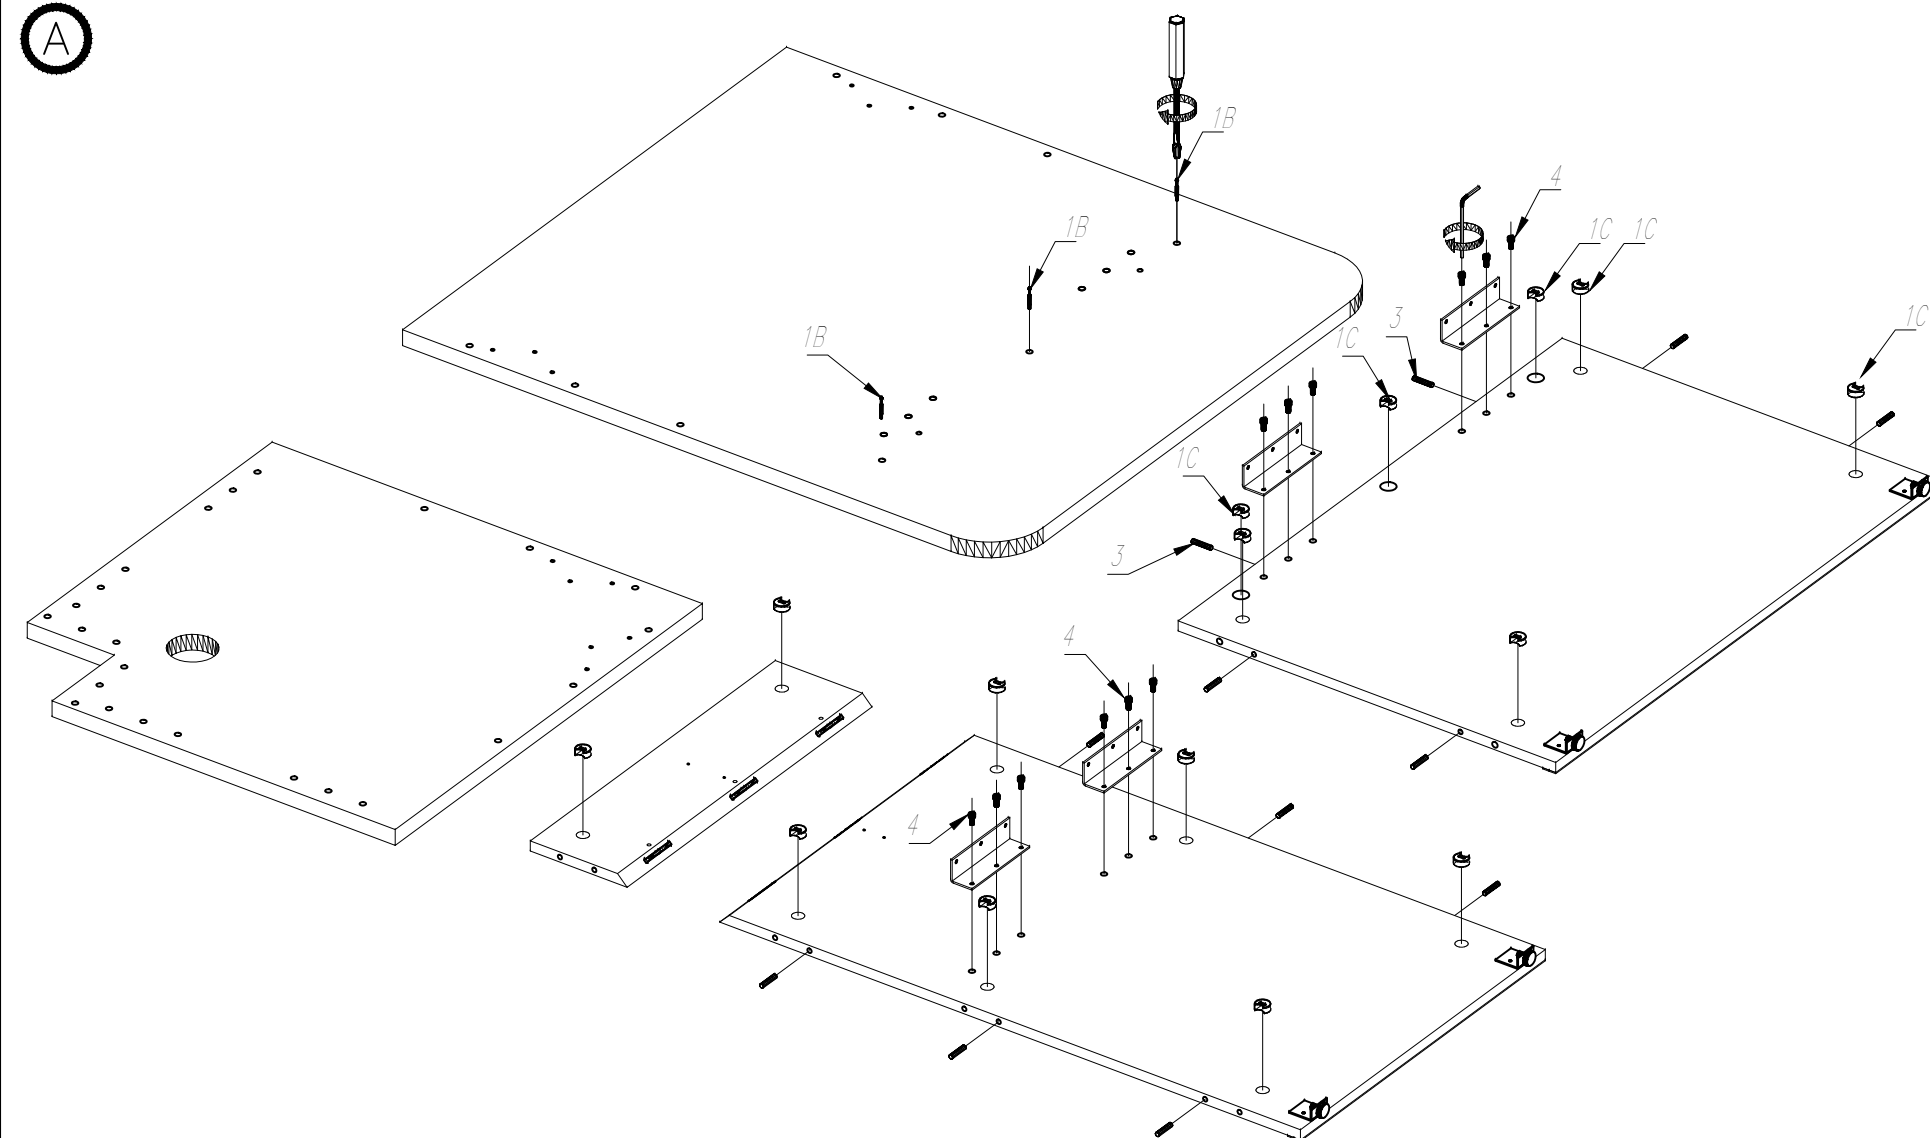





E

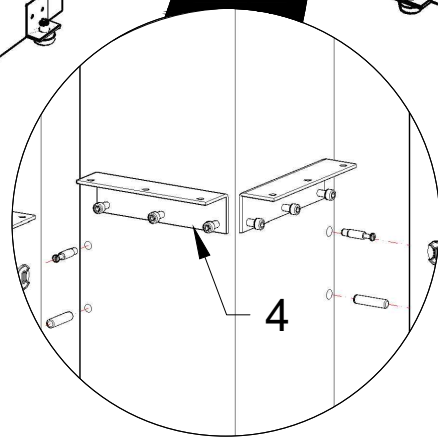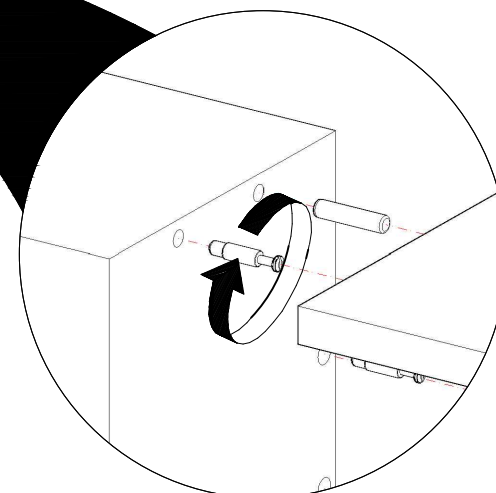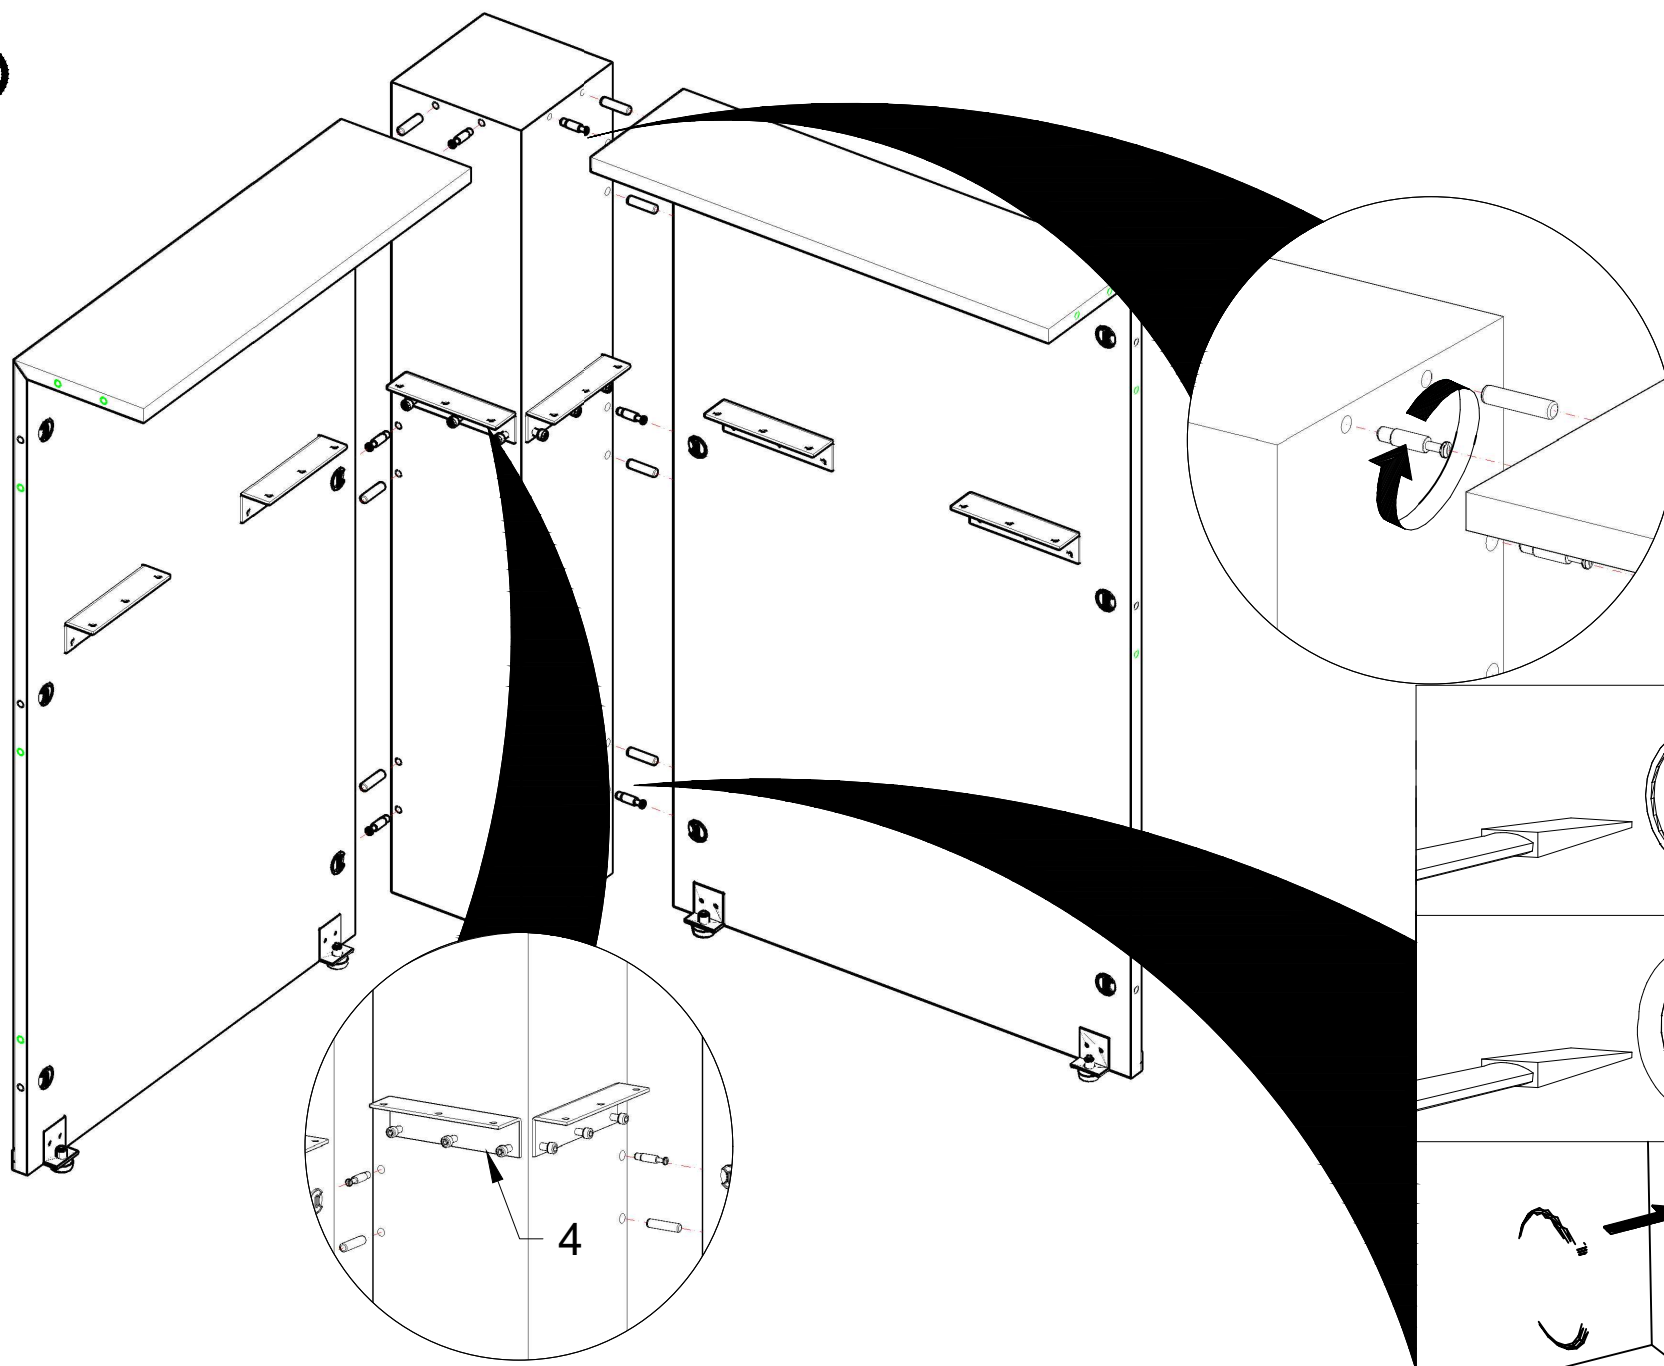


4

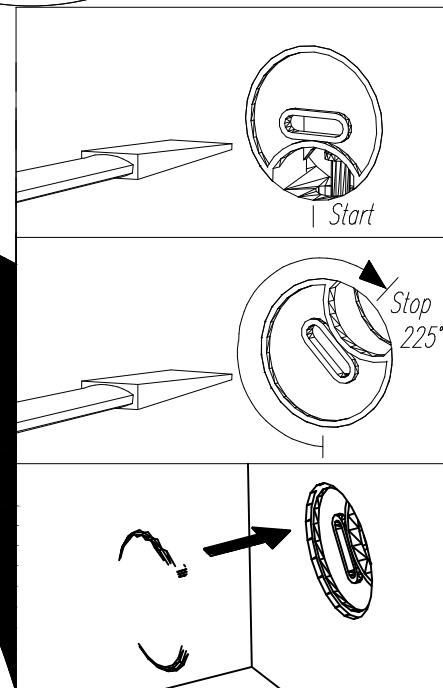


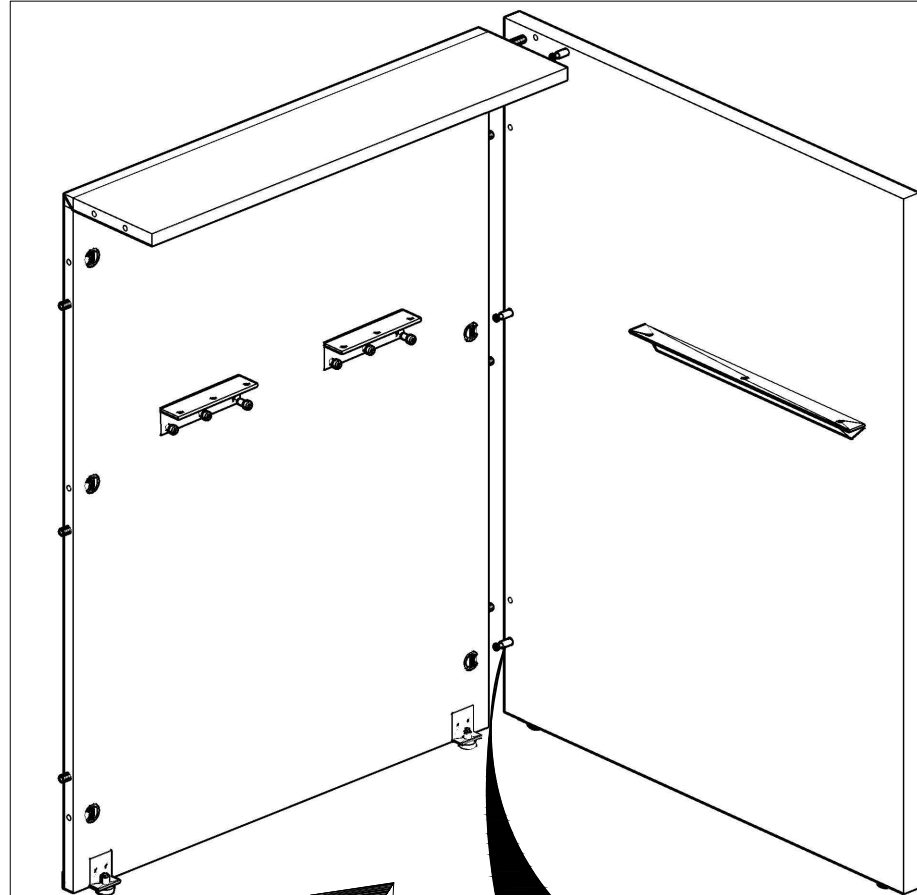



- KOLGOROŠE MONTAŽU
ANORDNUNG.
THE FITTING SEQUENCE OF THE
CHMS.
DIE MONTAGEFOLGE VON
EXZENTERN.
1. Insert the hinge pin into the side panel.
 2. Tighten the hinge pin with a screwdriver.
 3. Insert the hinge pin into the top panel.
 4. Tighten the hinge pin with a screwdriver.
 5. Insert the hinge pin into the side panel.
 6. Tighten the hinge pin with a screwdriver.
 7. Insert the hinge pin into the top panel.
 8. Tighten the hinge pin with a screwdriver.

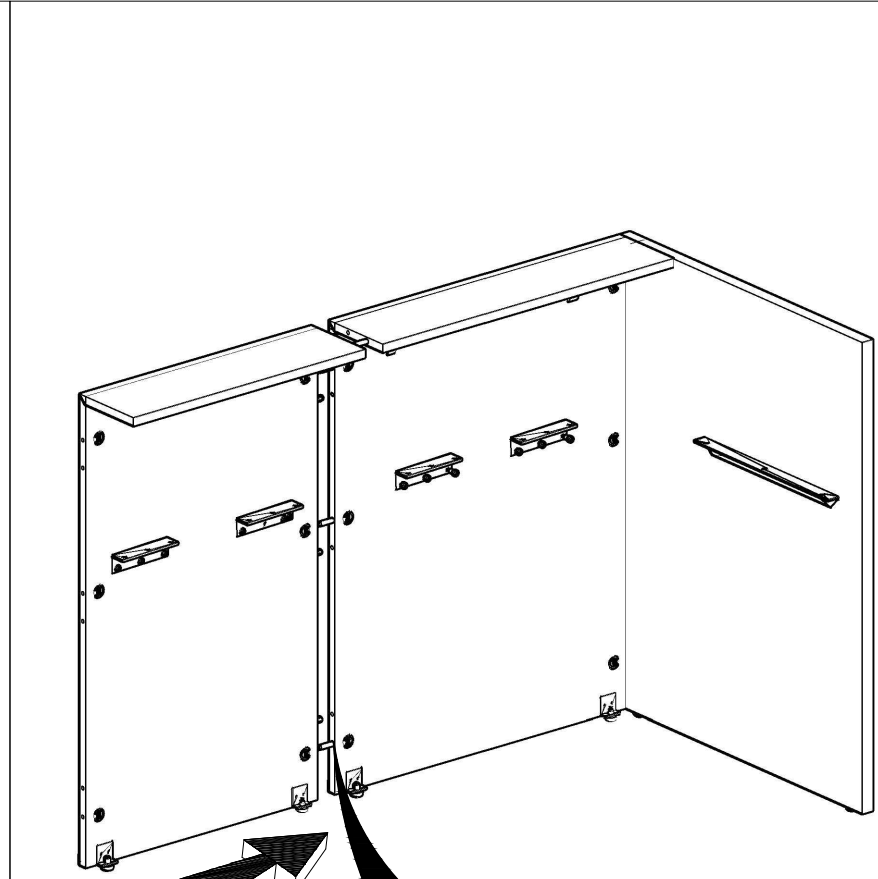



- KOLGOROŠE MONTAŽU
ANORDNUNG.
THE FITTING SEQUENCE OF THE
CHMS.
DIE MONTAGEFOLGE VON
EXZENTERN.
1. Insert the hinge pin into the side panel.
 2. Tighten the hinge pin with a screwdriver.
 3. Insert the hinge pin into the top panel.
 4. Tighten the hinge pin with a screwdriver.
 5. Insert the hinge pin into the side panel.
 6. Tighten the hinge pin with a screwdriver.
 7. Insert the hinge pin into the top panel.
 8. Tighten the hinge pin with a screwdriver.

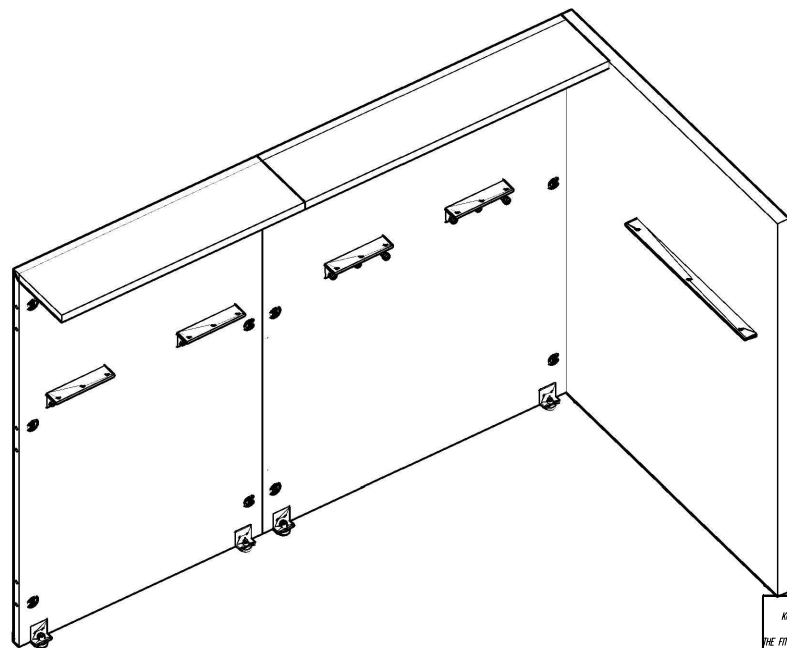


KOLEJNOŚĆ MONTAŻU
MIMOŚRODKIEM.
THE FITTING SEQUENCE OF THE
CAMS.
DIE MONTAGEABFOLGE VON
EXZENTERN.


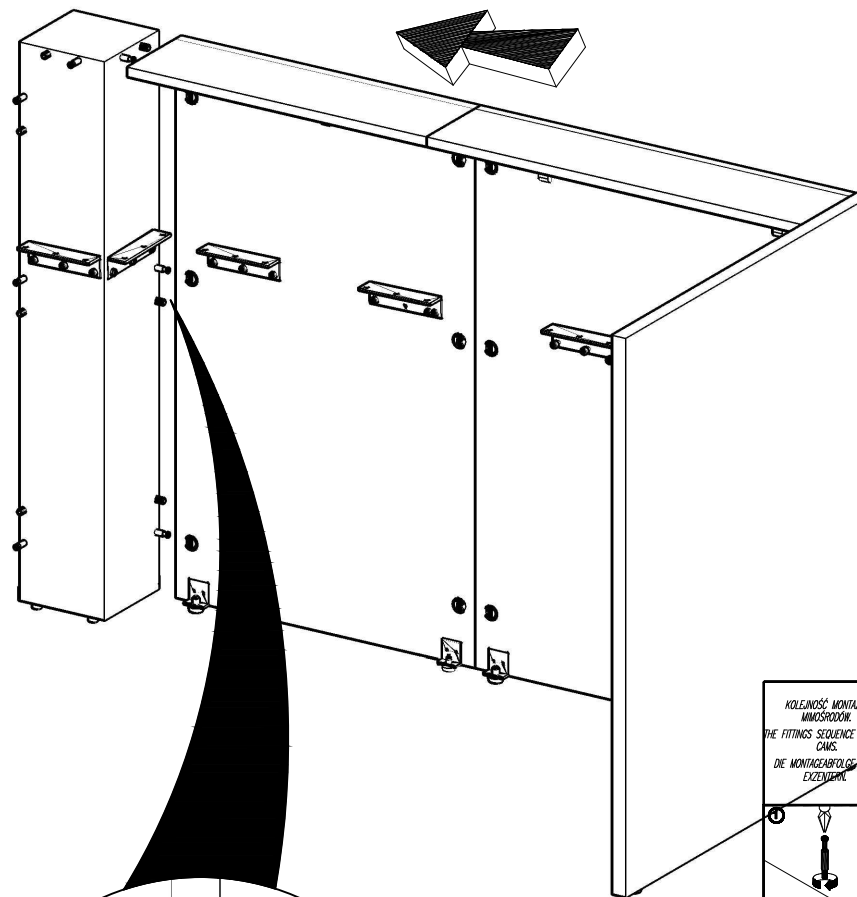



KOLEJNOŚĆ MONTAŻU
MIMOŚRODKIEM.
THE FITTING SEQUENCE OF THE
CAMS.
DIE MONTAGEABFOLGE VON
EXZENTERN.

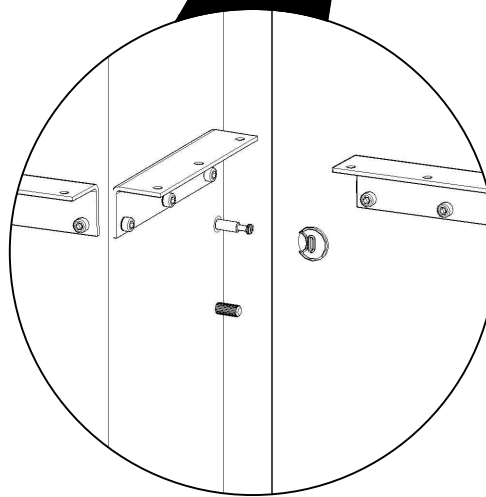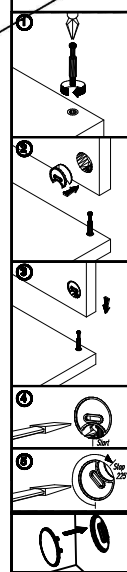






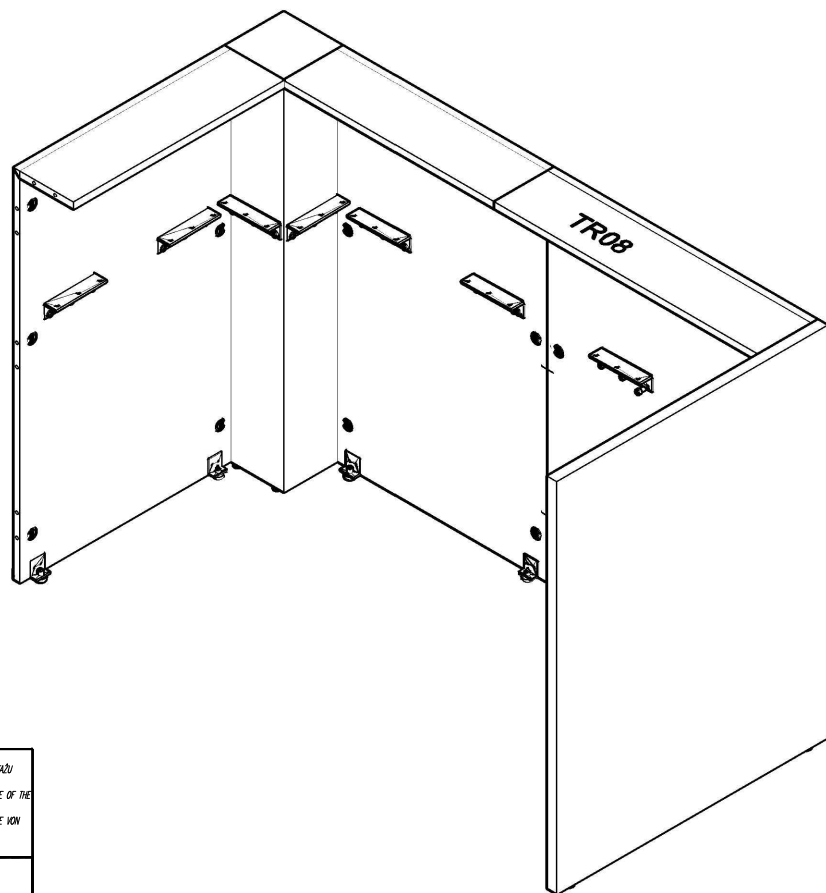





KOLLEKTOR MONTAGE
MINISPROOF
THE FITTING SEQUENCE OF THE
CAMS
DE MONTAGEFOLGE VON
EXZENTERN

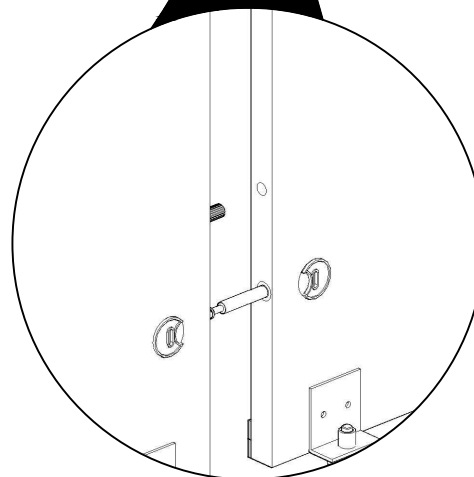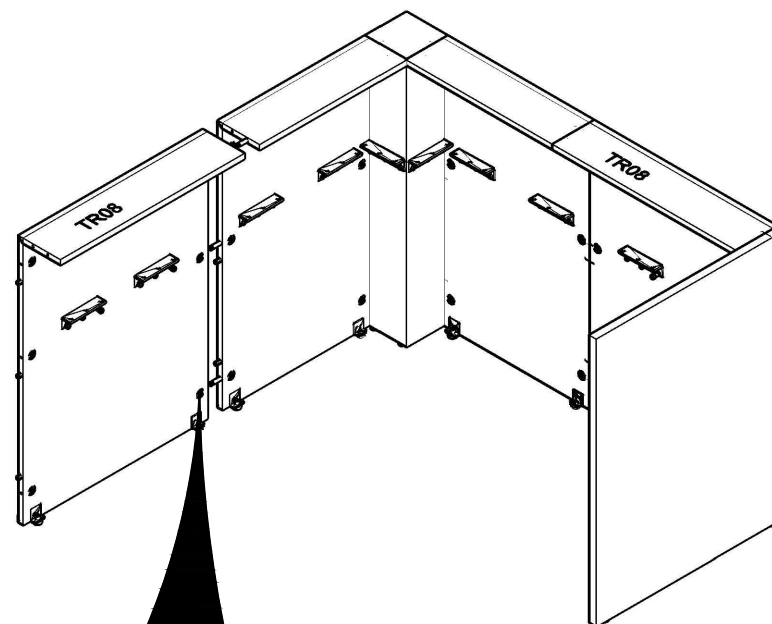


KOLLEKTOR MONTAGE
MINISPROOF
THE FITTING SEQUENCE OF THE
CAMS
DE MONTAGEFOLGE VON
EXZENTERN







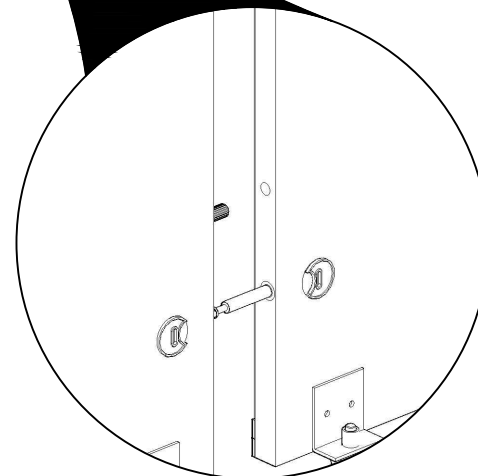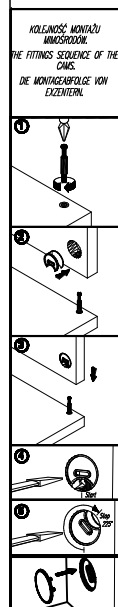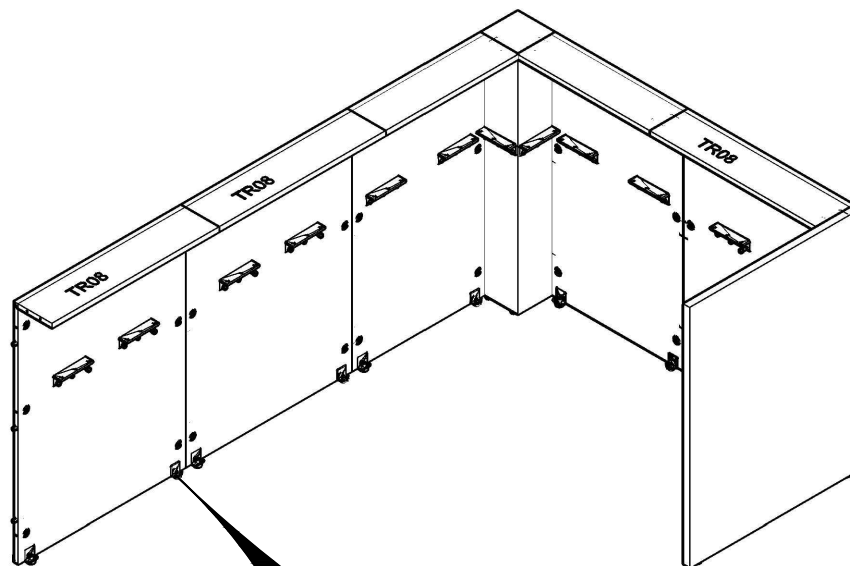
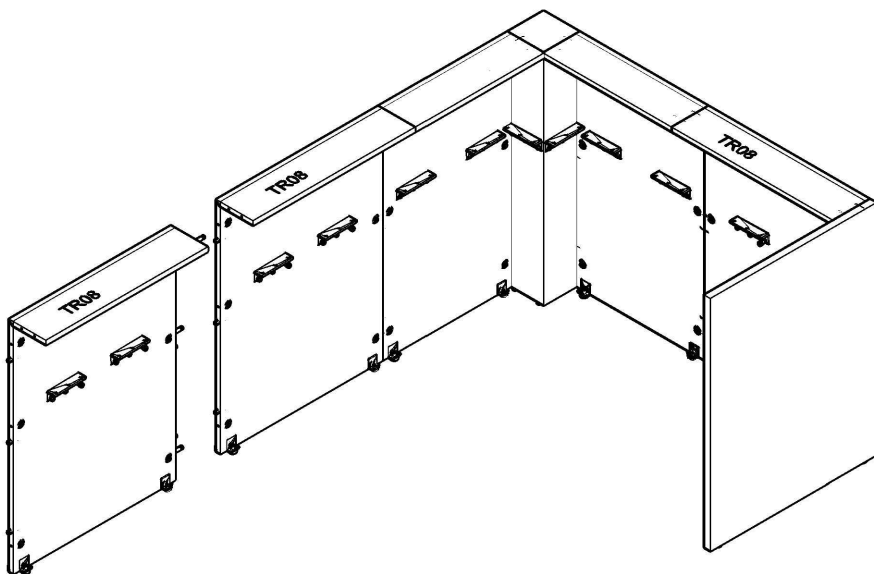


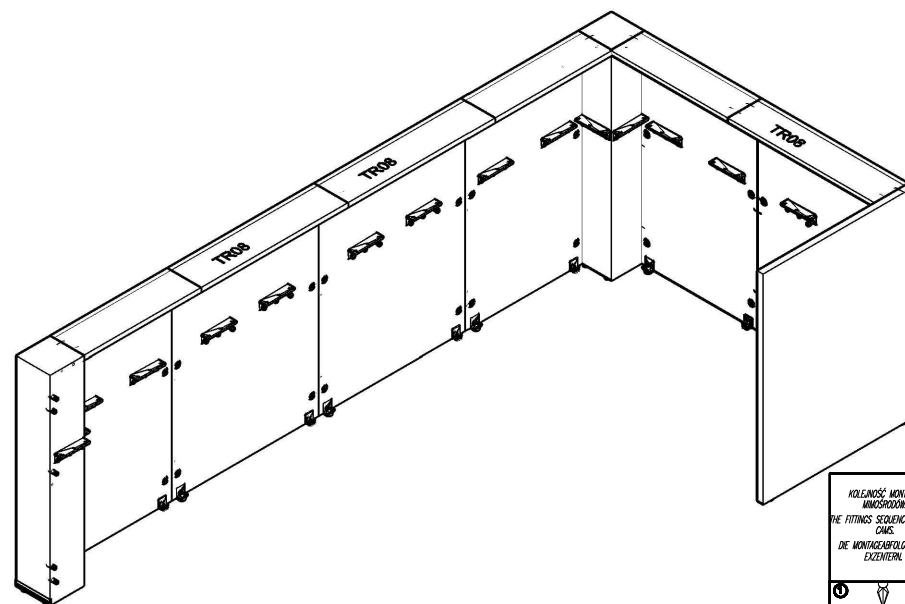
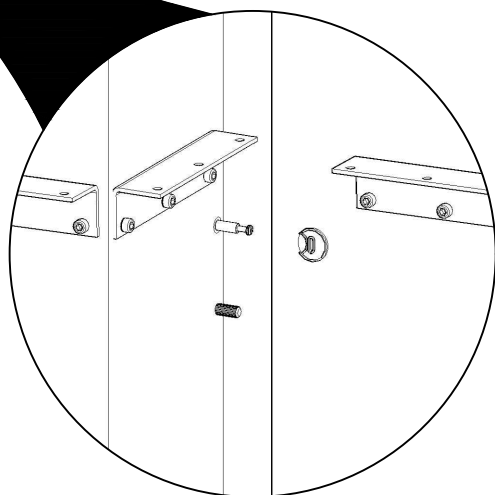
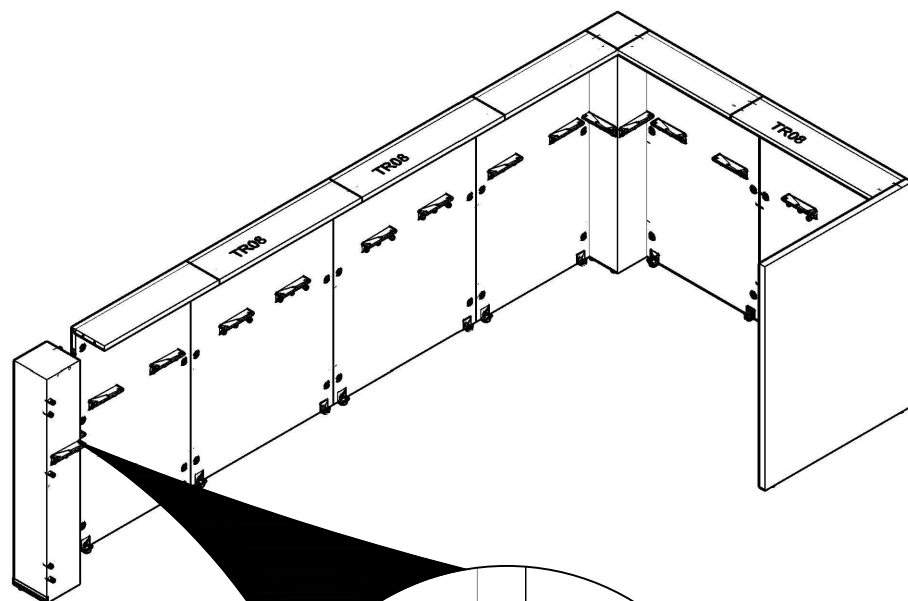


HOLLANDS: MONTAŽU
HANGROZDOLU.
THE FITTING SEQUENCE OF THE
CABS.
DIE MONTAGEFOLGE VON
EXZENTERN.

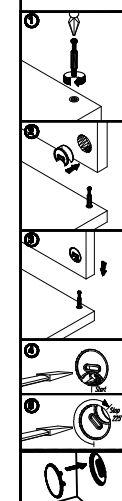

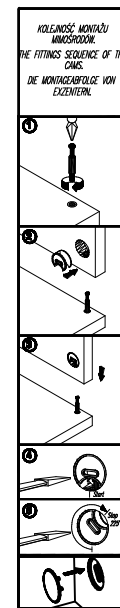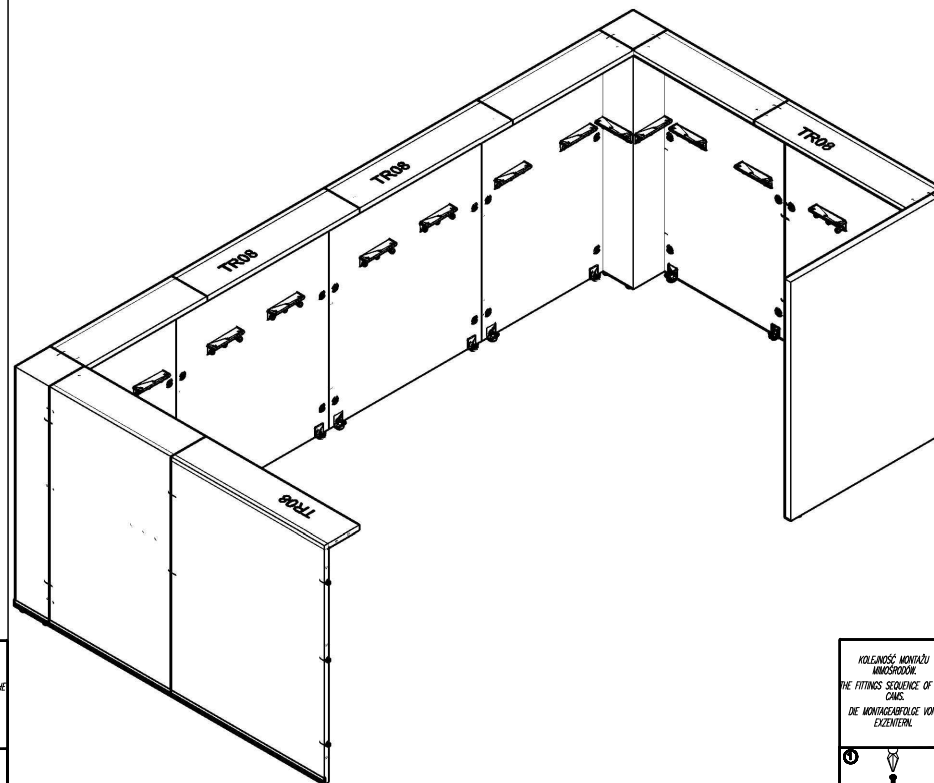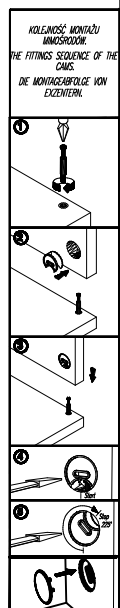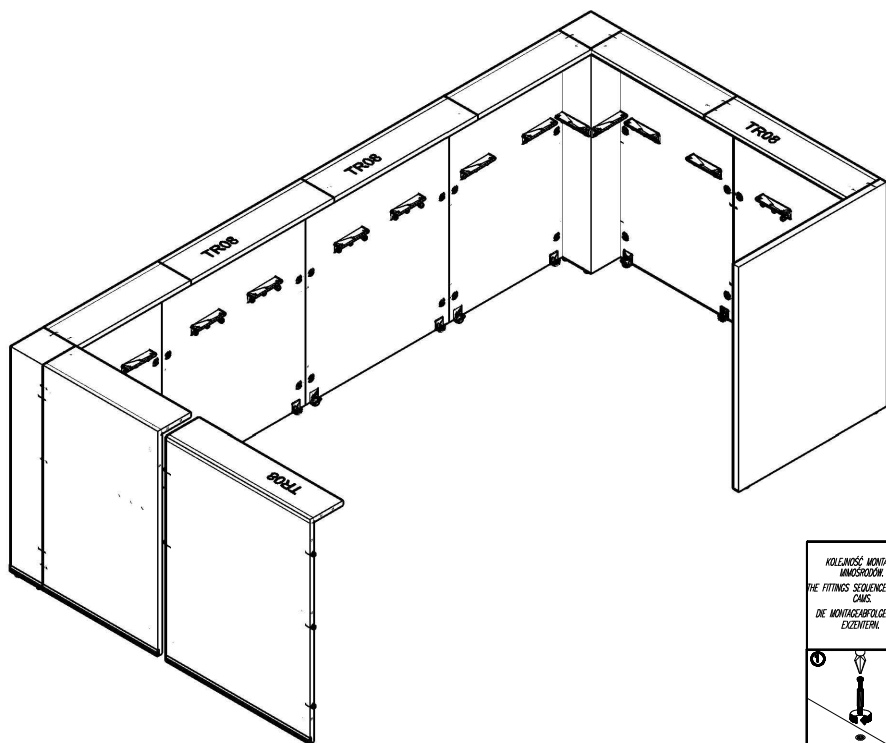

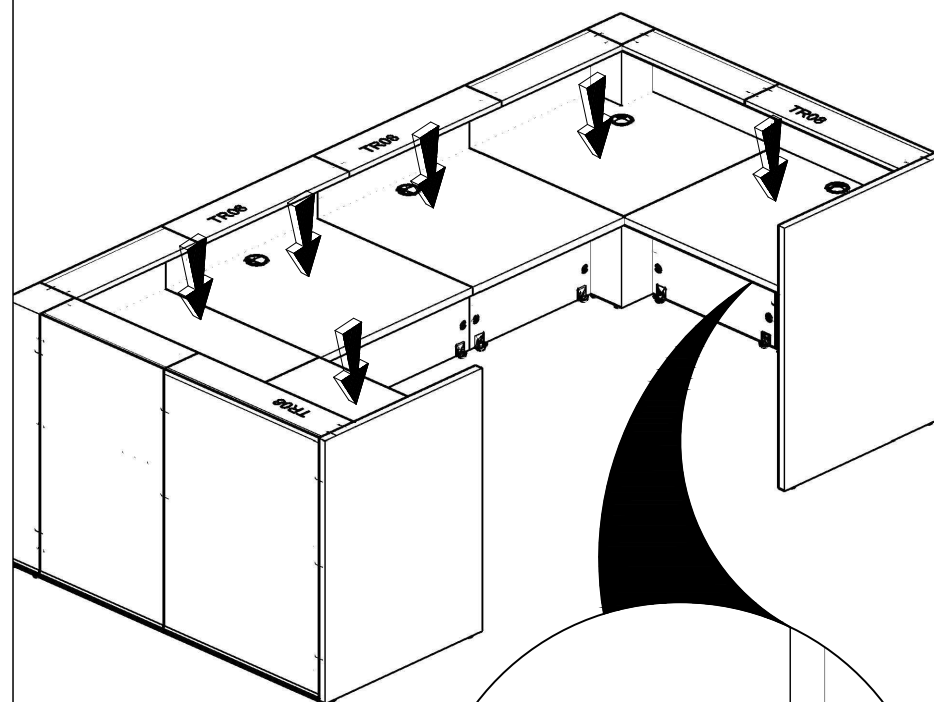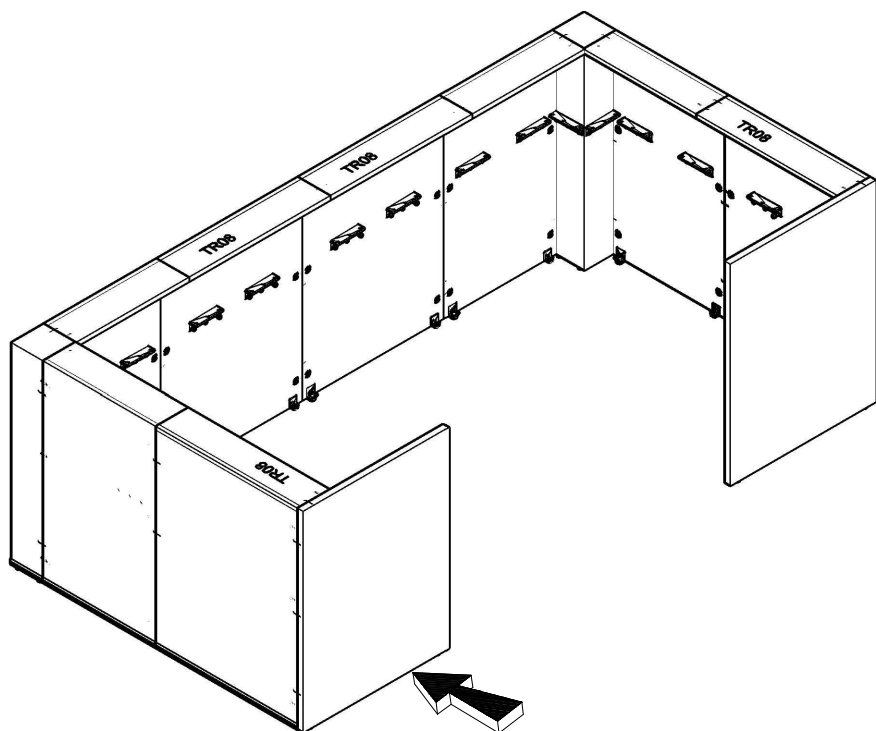

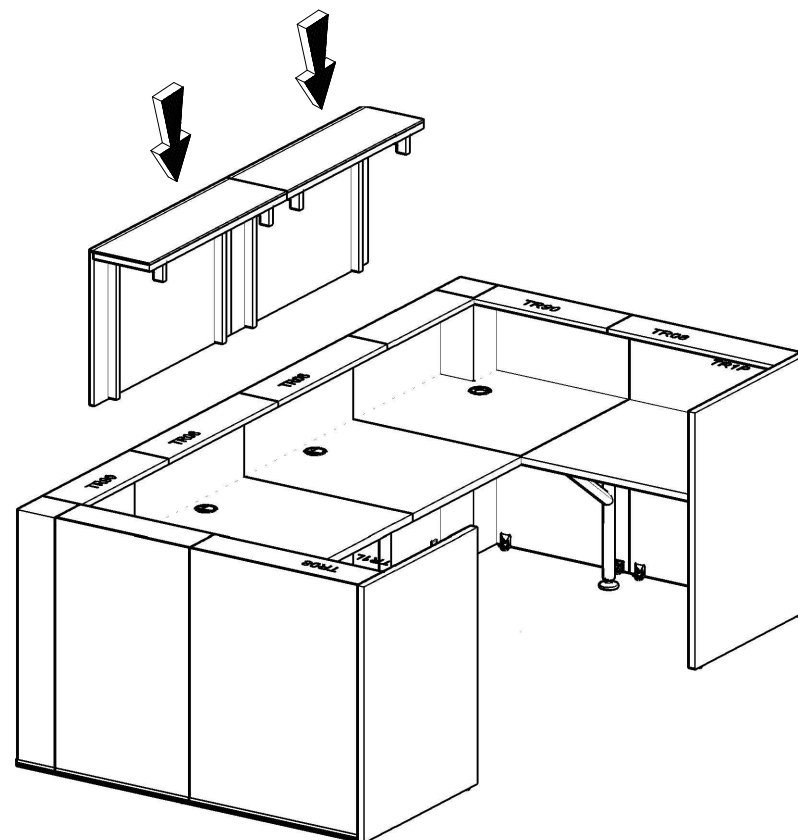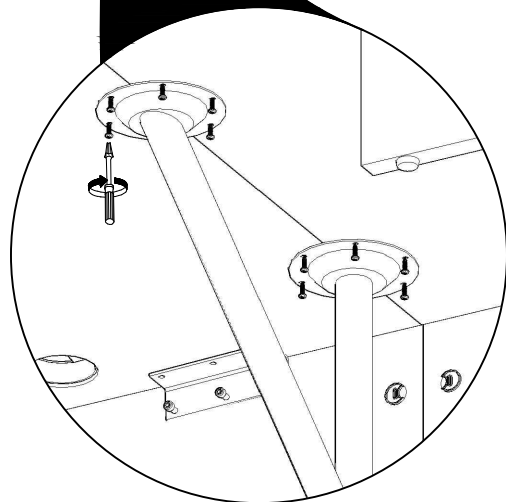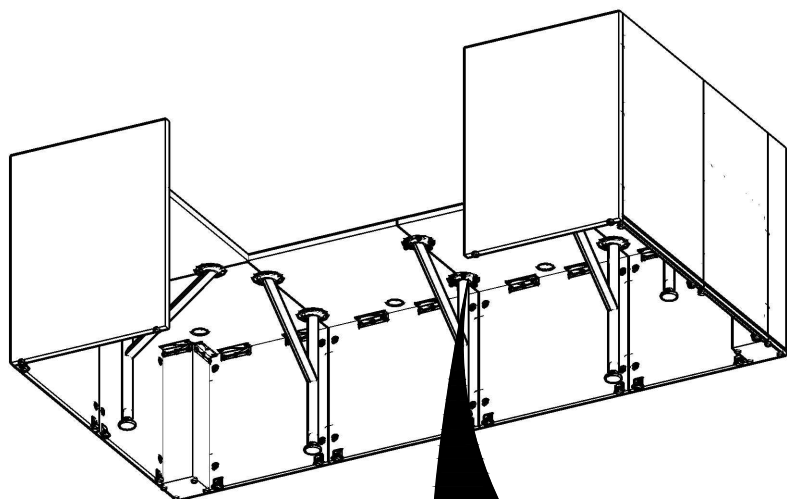

LED INSTALLATION

